



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1	06-3313	FIXTURE REMOVE
2	9633	THRUST REVERSER SAFETY ROD
3	50040	ADAPTER
4	74924	WRENCH
5	76908	COVER
6	83408	PULLER, BEARING
7	98430	CUTTING TOOL
8	98450	ADJUSTMENT TOOLING
9	190432	GAGE, SUPPORT
10	190484	ADJUSTMENT ADAPTER
11	253566	JET ASSEMBLY AIR DRIVE
12	257562	ADAPTER VALVE TEST
13	264383	JET ASSEMBLY AIR DRIVE
14	281742	PULLER ASSEMBLY, MECHANICAL, CARBON SEAL
15	284310	DRIVER ASSEMBLY BEARING AND BUSHING
16	287539	RESTRICTOR UNIT, FLUID FLOW
17	287847	RIVETING MACHINE ASSEMBLY PNEUMATIC
18	289358	COMPRESSORASSEMBLY
19	289878	ADAPTER VALVE TEST
20	290166	ADAPTER ASSEMBLY VALVE TEST SET
21	290275	HOLDER ASSEMBLY BALL VALVE TEST
22	290435	ADAPTER ASSEMBLY VALVE TEST SET
23	291359	DRIVER SEAL
24	294175	ROLLER SET FLANGE FORMING
25	294640	ADAPTER VALVE TEST
26	296093	PIN SET IGV ASSEMBLY
27	296529	ADAPTER REGULATOR TEST
28	296615	ADAPTER ALIGNMENT DIAPHRAGM
29	419399	ASSEMBLY
30	444400	DISP. PUMP ASSY
31	445708	TORQUE ADAPTOR
32	483699	TEST SET UP
33	522910	SPECIAL WRENCH
34	523105	TOOL REVITNG
35	523118	JAW TYPE GAUGE
36	540264	MOUNTING STOP SPACER
37	716190	SEAL SHRINK RING
38	739171	HOLDING FIXTURE ASSEMBLY, ROTOR
39	762538	PLATE-SPLICE TURBINE FAN DUCT
40	833288	FIXTURE INSTALLER BUSHING
41	833553	WRENCH SPECIAL TORQ SET SCREW
42	833564	DRIVER INSTALLATION SEAL
43	834568	FIXTURE DIAPH ALIGN
44	834587	FIXTURE INSTALLER BEARING
45	1080535	CLEVIS LPC SYNCHRONIZING RING 1.1 STG
46	1080537	BUSHING SLEEVE
47	1080538	CLEVIS LPC SYNCHRONIZING RING 1.1 STG ASSY OFF
48	1083693	TUBE VENT #6 BEARING
49	2558757	GUIDE CONE
50	2558758	BRAKE GUIDE CONE
51	2558759	TOOL-BRAKE HANDLING
52	2558806	SUPPORT, ADAPTER, INSTALLATION OBWH&IBWH
53	2566543	Work Positioner Adapter
54	3791272	INSTALLING TOOL SPRING
55	3921000	TOOL THICKNESS
56	3936851	MLG DOOR SAFETY LOCK
57	3938032	SEAL INSTALLATION TOOL
58	3938034	SEAL SIZING TOOL
59	3938063	BEARING INSERTING TOOL
60	4113794	SPACER SLEEVE
61	4115703	PIN COVER EXHAUST NOZZLE SEAL HINGE
62	4160314	SEAL COMPRESSION TOOL
63	5304254	SHIELD ASSY OF HEAT #6 BEARING
64	5304991	CONNECTING LINK BLEED VALVE
65	5305366	CONNECTING LINK ASSY OF - BLEED VALVE
66	5305427	ADAPTER ASSY OF TUBE TO BOSS,OIL SUPPLY #5-6 BEARING
67	5308184	SHIELD PRESSURE TUBE TURBINE EXHAUST CASE
68	5311461	PIN SHOULDER LOW PRESSURE COMPRESSOR SHROUD INLET
69	5312046	DUCT ASSY OF AIR COOLING HIGH PRESSURE TURBINE
70	5312206	DUCT ASSY OF AIR PRESSURE,STARTER VALVE



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
71	5312930	BUSHING SLEEVE .290X.440XX150 FLANGED
72	5312934	BUSHING SLEEVE .290X.440XX220 FLANGED
73	5313151	BUSHING SLEEVE .132X.446XX220 FLANGED
74	5314417	BRACKET ASSY OF LOOP CLAMP
75	5314758	BRACKET ASSY OF WIRING HARNESS
76	5315781	BRACKET ASSY OF COMPRESSOR INTERMEDIATE CASE
77	5316646	BRACKET ASSY OF WIRING HARNESS
78	5318438	BRACKET ASSY OF LOW PRESSURE COMPRESSOR CASE
79	46006251	GUIDE BUSH
80	81266908	HOLDER TORCH
81	81267100	PLATE ROTATING WELDING FIXTURE
82	81267200	PLUNGER DISC HOLDER ASSY
83	81267300	STUD WELD FIXTURE
84	81267500	RETAINER BEARING RING
85	81267600	RETAINER ADAPTER
86	81267700	ADAPTER FILL BOSS WELD FIXTURE
87	81268100	WELDING FIXTURE ASSY FOR HERMEIC SEAL DISC ASSEMBLIES
88	81269000	NUT ADJUSTMENT
89	81269200	SHAFT RING MACHINING
90	81270000	WRENCH
91	81270100	SPANNER WRENCH
92	81270200	HEAT SINK FILL FITTING
93	81270700	NUT LOCK
94	81271900	MILLING ATTACHMENT
95	81272000	SLIDE ASSY UPPER
96	81272100	COLLAR LOCK
97	83000007	CRADLE ASSY FIRE EXT
98	83000089	CRADLE ASSY FIRE EXT
99	460001355	EXTRACTOR
100	460001775	HOLDING BLOCKS
101	460001794	PRESSURE TEST BUNG
102	460002090	SPECIAL HOLDING BLOCKS
103	460002502	CHARGING ADAPTOR
104	460002661	TEST ADAPTOR BSP-PARKER (STD)
105	460003035	TEST ADAPTOR
106	460003180	KEEP RING CHART
107	460004331	DRIFT
108	460004459	TEST ADAPTOR
109	460005171	ASSEMBLY POST.
110	460005204	TEST ADAPTOR
111	460005224	BEARING SWAGING TOOL
112	460005812	TUBE SPANNER
113	460005832	SPRING EXPANDER
114	460005834	TUBE SPANNER
115	460005835	GROUND LOCK SLEEVE
116	460006151	EXTRACTOR
117	460006205	ALIGNMENT BAR
118	460006209	SPH BEARING LOCATOR
119	460006210	PINTLE LOCATION ASSEMBLY
120	460006228	TORQUE ADAPTOR
121	460006246	ALIGNMENT BAR
122	460006250	PRESS PAD ASSEMBLY
123	460006252	GUIDE BUSH
124	460006258	PRESS PAD
125	460006259	PRESS PAD
126	460006260	PRESS PAD
127	460006268	PRESS
128	460006404	TORQUE ADAPTOR
129	460006453	PAD - PRESS
130	460006465	SPANNER-PEG
131	460006484	PIN SPANNER
132	460006500	REACTOR PAD
133	460006567	SPLINT SLING ASSY
134	460006586	EXTRACTOR
135	460007000	GAG - SIDE STAY
136	460007011	SPANNER-AXLE NUT, MLG
137	460007018	GAG BRAKE ROD AFT
138	460007019	SPACER, BRAKE ROD
139	460007020	SPACER, BRAKE ROD
140	460007022	SPANNER - BOGIE NUT



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
141	460007093	MANDREL
142	460007134	FIXTURE CYLINDER
143	460007174	PIN-GROUNDLOCK, MLG
144	460007194	KEEPER
145	460007229	ADAPTER - TORQUE
146	460007230	TORQUE ADAPTOR
147	460007242	ADAPTOR-TORQUE REACTOR
148	460007254	EXTRACTOR
149	460007280	MLG SAFETY LOCK
150	460007305	GAG-SHOCK ABSORBER
151	460007316	GAG-BOGIE BEAM
152	532703161	UNIT LUBRICATION
153	4600067005	GAG SHCOK ABSORBER
154	4600067011	FIT & REMOVE AXLE NUT
155	4600067021	SPANNER LOWER CARDAN
156	4600067022	SPANNER BOGIE NUT
157	4600067024	SPANNER TORQUE LINK NUT
158	4600067028	REACTOR BOGIE PIN
159	4600067033	SPANNER ARTIC.LINK NUT
160	4600067034	LIFTING TACKLE
161	4600067036	SPANNER TRIMMER LINK NUT
162	4600067042	BLEED ADAPTOR
163	4600067047	LOCATION BLOCK ASSY
164	4600067052	SPANNER BOGIE NUT
165	4600067057	MOUNTING TROLLEY
166	4600067058	LIFTING ASSY
167	4600067059	LIFTING BEAM
168	4600067060	SCREW JACK ASSEMBLY
169	4600067061	MAIN BUILD STAND BOGIE END
170	4600067062	MAIN BUILD STAND PINTLE END
171	4600067063	SUPPORT BRACKET
172	4600067075	LINK PROTECTION SLEDGE
173	4600067077	SHOCK STRUT LOAD FIXTURE
174	4600067079	SHOCK STRUT DRAINING REST.
175	4600067080	LIFTING TACKLE
176	4600067102	LIFTING EQPT
177	4600067103	HOLDING FIXTURE
178	4600067108	TORQUE ADAPTOR
179	4600067109	ASSEMBLY TOOL
180	4600067111	ASSEMBLY DRIFT
181	4600067113	SHOCK STRUT FILLING GAG
182	4600067115	SHOCK STRUT GAG
183	4600067119	TEST BLOCK
184	4600067122	HOLDING TOOL
185	4600067123	TORQUE SPANNER
186	4600067133	WRENCH PLUG
187	4600067156	CHARGING ADAPTOR (UPPER CONNECTION)
188	4600067157	TORQUE ADAPTOR RET.ACT. NUT
189	4600067169	SPRING COMPRESSOR
190	4600067170	SPRING EPANDER
191	4600067172	BELL CRANK ADJUSTABLE RESTRAINT
192	4600067186	BUSH EXTRACTOR
193	4600067196	TORQUE ADAPTOR
194	4600067200	HOLDING POT
195	4600067201	TORQUE SPANNER
196	4600067202	SPRING COMPRESSOR
197	4600067204	TORQUE ADAPTOR DAMPING HEAD
198	4600067229	ALIGNMENT BULLET
199	4600067253	PIN SAPNNER
200	4600067256	SPRING COMPRESSOR
201	4600067280	GROUND LOCK SLEEVE
202	4600067281	LOCKING
203	4600067282	SPH BEARING LOCATOR
204	4600067294	MANDREL ASSY & ALIGNMENT PIN
205	4600067295	PIN & BUSH EXTRACTOR
206	4600067296	ASSEMBLY FIXTURE
207	4600067300	DRAWBOLT & PAD
208	4600067309	BLEED ADAPTOR (GAS)
209	4600067310	BLEED ADAPTOR (FLUID)
210	4600067314	BELL CRANK LEVERING BAR



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
211	4600067324	LOCATION BUSH
212	4600067326	(TRANSPORT) CLAMP.SIDESTAY
213	4600067338	HOLDING FIXTURE
214	4600067356	HOLDING SPANNER
215	4610072506	SCREW AND SHAFT END LINK REMOVE INSTALL TOOL
216	0009633	THRUST REVERSER SAFETY ROD
217	0061R07795	BEARING INSERTION TOOL
218	0061R14950	SEAL RING INSERTION TOOL
219	0061R40579	O-Ring Insertion Staking Tool
220	04Y0006-001	SLEEVE THRUST REVERSER ACTUATOR (SAFETY)
221	04Y0008-001	DISENGAGEMENT TOOL (HOOK LOCK KEY)
222	060-72-00-8V272	VANE 7-8 STG. HOLDER-CMMLBLADES TIP GRINDER ACCESSOR
223	0922964A	TOOL SETTING
224	OAT-2193	OUTLINE ADAPTER SQUARE DRIVE CLUTCH SET RUN IN
225	00190848	SPECIAL WRENCH
226	0S22406	ADJUSTING BROACH
227	0S22413	SPECIAL TOOL
228	0S22413-2	SPECIAL TOOL
229	0S22413-3	SPECIAL TOOL
230	0S22413-4	SPECIAL TOOL
231	0S22413-5	SPECIAL TOOL
232	0S22467	PRESS IN GUIDE
233	0S22468	SPECIAL TOOL
234	0S22469	PRESS IN GUIDE
235	0S22473	GUIDE FORCE FIT
236	0S22479	PRESS IN GUIDE
237	0S22480	PRESS IN GUIDE
238	0S22481	PRESS IN GUIDE
239	0S22489	GUIDE FORCE FIT
240	0S22607	EXTRACTOR GUIDE
241	0S23119	PLUG
242	0U129313	MOUNTING CONE
243	0U141267	MOUNTING CONE
244	0U141853	MOUNTING CONE
245	0U141854	MOUNTING CONE
246	0U141859	MOUNTING CONE
247	0U141879	PRECASTING BUSH
248	0U141883	PRECASTING BUSH
249	0U141884	MOUNTING CONE
250	0U141937	ASSEMBLY TOOL
251	0U142144	TORQUE WRENCH ADAPTOR
252	0U142195	MOUNTING CONE
253	0U145409	THS TAB WASHER REMOVAL / TORQUE TOOL
254	0U145506	MOUNTING CONE
255	0U147244	PRECASTING BUSH
256	0U190484	SPECIAL WRENCH
257	0U190844	BRAKE RELEASE TOOL
258	0U190863	VERIFY INTEGRITY TOOLS SCREW
259	0U191191	CHECKING TOOL-BALL SCREW AND TIE BAR
260	0U192146	DOUBLE ENDED WRENCH
261	0U300093-03	OUTLET GEAR
262	0U300395	SNAP
263	100-52028	IMPELLER SHAFT NUT TOOL
264	1087-502	TEST FIXTURE
265	1-1038-01-12	STAND
266	1-1038-02-108	SPANNER
267	114-103	RADIUS TOOL
268	114-1030	TOOL
269	114-1034	BULLET TOOL FOR INSTALLATION OF STAINLESS STEEL PISTONS
270	114-1077	OUTBOARD WHEEL-HALF, BEARING CUP REMOVAL SUPPORT ADAPTER
271	114-1089	TOOL FOR REMOVAL OF BEARING CUPS FROM THE INNER AND OUTER WHEEL HALVES
272	114-1090	TOOL FOR INSTALLATION OF BEARING CUPS INTO THE INNER AND OUTER WHEEL HALVES
273	114-1091	TOOL FOR REMOVAL OF BEARING CUPS FROM THE INNER AND OUTER WHEEL HALVES
274	114-1092	TOOL FOR INSTALLATION OF BEARING CUPS INTO THE INNER AND OUTER WHEEL HALVES
275	114-1101	Holding tool for torque plate bushing removal/installation
276	114-1102	Tool for Installation of Lock Plates on Bolts
277	114-1103	BULLET TOOL FOR INSTALLATION OF PISTONS INTO ADJUSTER SLEEVES
278	114-1104	Piston Support Tool for Installation of Pistons into Adjuster Sleeves
279	114-1105	GUIDE TOOL FOR INSTALLATION OF PISTONS INTO ADJUSTER SLEEVES
280	114-114	SPANNER TOOL



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
281	114-1148	Goodrich Corporation 32-48-32 PG906
282	114-1149	Goodrich Corp 32-48-32 PG 907
283	114-1214	TOOL
284	114-1230	INSPECTION,TOOL-GREASE SEAL
285	114-1274	LEAK TEST TOOL
286	114-1276	REMOVAL TOOL
287	114-1277	INSTALLATION TOOL
288	114-1278	REMOVAL TOOL
289	114-1280	REMOVAL INSTALLATION TOOL
290	114-1281	REMOVAL INSTALLATION TOOL
291	114-1282	REMOVAL INSTALLATION TOOL
292	114-1283	REMOVAL INSTALLATION TOOL
293	114-1307	Tool for inspection of inner grease seal
294	114-1308	Tool for inspection of inner grease seal
295	114-1373	Tool for inspection of grease seals
296	114-1467-1	TOOL SEAL REMOVAL
297	114-1467-2	TOOL SEAL REMOVAL
298	114-1468-1	TOOL THAT INSPECT LIP HEIGHT OF GREASE SEAL ASSEMBLIES
299	114-1468-2	TOOL THAT INSPECT LIP HEIGHT OF GREASE SEAL ASSEMBLIES
300	114-151-1	COMPRESSION RIVETING PEEN
301	114-151-2	COMPRESSION RIVETING ANVIL
302	114-231	Tool
303	114-239	RADIAL RIVETING PEEN
304	114-263	FIXTURE-FOR CHECK OF THE OVERINFLATION PLUGS FOR LEAKS
305	114-281	THROTTLE BRACKET
306	114-282	GUIDESLEEVE
307	114-285	TOOL
308	114-286	TOOL
309	114-287	TOOL
310	114-288	TOOL
311	114-299	Pusher Tool for Removal and Installation of the Bushing Assembly
312	114-300	Tool that Holds the Bushing during Installation onto the Bushing
313	114-305	Bullet Tool for Installation of Adjuster Pins into Pistons
314	114-322	TOOL FOR MACHINING
315	114-323	Tool
316	114-331	Shims for high pressure leak test
317	114-368	SUPPORT TOOL, BUSHING
318	114-369	BUSHING TOOL
319	114-370	BULLET TOOL FOR INSTALLATION OF ADJUSTER
320	114-371	PISTON
321	114-374	LEAK TEST SHIM
322	114-429	CUP REMOVAL PLATE
323	114-441	GREASE SEAL EXAMINATION FIXTURE
324	114-451	"GUIDE" TOOL INSTALLATION OF PISTON INTIO ADJUSTER
325	114-452	ADJUSTER
326	114-63	RIVETING TOOL
327	114-756	AXLE SPACER
328	114-757	RESET TOOL
329	114-758	ADJUSTER ASSEMBLY TOOL
330	114-780-4	TOOL THAT SIZES BACKUP RINGS ON ADJUSTER SLEEVES
331	114-901	RIVERTING TOOL
332	114-902	RIVERTING PEEN
333	114-919	Support tool, bearing cup
334	114-920	Tool, bearing cup
335	114-921	Tool, bearing cup
336	114-922	Tool, bearing cup
337	114-923	Tool, bearing cup
338	114-924	Tool, bearing cup
339	114-925	Tool, bearing cup
340	114-926	Tool, bearing cup
341	114-927	Tool, bearing cup
342	114-928	Tool, bearing cup
343	11-891487-104	ADAPTER
344	120-44668	OLHAL-MONTANTE CENTRAL INFERIOR
345	120-44668-001	GROMMET-MOUNTING,LOWER,WINDSHIELD,AL
346	1567A0000	1567A0000
347	162A1419-1	BUSHING
348	1B0535	SPACER-PL HPC CLEVIS
349	1B0576	PLATE-RING FAN DUCT
350	217323-1	FUEL BOOST PUMP REMOVAL AND INSTALLATION



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
351	22282T200	HOLDING FIXTURE ASSEMBLY
352	22282T202	LAP HOLDER
353	22289-T200	LAP HOLDER
354	22479-T202	LAPPING TOOL
355	2249000-1	DRUMS-TORQUE
356	22617-T200	HOLDING FIXTURE
357	245900/78	LOCATING PIN
358	257562-1	ADAPTER VALVE TEST
359	257562-10	ADAPTER VALVE TEST
360	257562-11	ADAPTER VALVE TEST
361	257562-12	ADAPTER VALVE TEST
362	257562-13	ADAPTER VALVE TEST
363	257562-14	ADAPTER VALVE TEST
364	257562-15	ADAPTER VALVE TEST
365	257562-16	ADAPTER VALVE TEST
366	257562-17	ADAPTER VALVE TEST
367	257562-18	ADAPTER VALVE TEST
368	257562-19	ADAPTER VALVE TEST
369	257562-2	ADAPTER VALVE TEST
370	257562-20	ADAPTER VALVE TEST
371	257562-21	ADAPTER VALVE TEST
372	257562-22	ADAPTER VALVE TEST
373	257562-23	ADAPTER VALVE TEST
374	257562-24	ADAPTER VALVE TEST
375	257562-25	ADAPTER VALVE TEST
376	257562-26	ADAPTER VALVE TEST
377	257562-27	ADAPTER VALVE TEST
378	257562-28	ADAPTER VALVE TEST
379	257562-29	ADAPTER VALVE TEST
380	257562-3	ADAPTER VALVE TEST
381	257562-30	ADAPTER VALVE TEST
382	257562-31	ADAPTER VALVE TEST
383	257562-32	ADAPTER VALVE TEST
384	257562-33	ADAPTER VALVE TEST
385	257562-34	ADAPTER VALVE TEST
386	257562-35	ADAPTER VALVE TEST
387	257562-36	ADAPTER VALVE TEST
388	257562-37	ADAPTER VALVE TEST
389	257562-38	ADAPTER VALVE TEST
390	257562-39	ADAPTER VALVE TEST
391	257562-4	ADAPTER VALVE TEST
392	257562-40	ADAPTER VALVE TEST
393	257562-41	ADAPTER VALVE TEST
394	257562-42	ADAPTER VALVE TEST
395	257562-43	ADAPTER VALVE TEST
396	257562-44	ADAPTER VALVE TEST
397	257562-45	ADAPTER VALVE TEST
398	257562-46	ADAPTER VALVE TEST
399	257562-47	ADAPTER VALVE TEST
400	257562-48	ADAPTER VALVE TEST
401	257562-49	ADAPTER VALVE TEST
402	257562-5	ADAPTER VALVE TEST
403	257562-50	ADAPTER VALVE TEST
404	257562-51	ADAPTER VALVE TEST
405	257562-52	ADAPTER VALVE TEST
406	257562-53	ADAPTER VALVE TEST
407	257562-54	ADAPTER VALVE TEST
408	257562-55	ADAPTER VALVE TEST
409	257562-56	ADAPTER VALVE TEST
410	257562-57	ADAPTER VALVE TEST
411	257562-58	ADAPTER VALVE TEST
412	257562-59	ADAPTER VALVE TEST
413	257562-6	ADAPTER VALVE TEST
414	257562-60	ADAPTER VALVE TEST
415	257562-61	ADAPTER VALVE TEST
416	257562-62	ADAPTER VALVE TEST
417	257562-63	ADAPTER VALVE TEST
418	257562-64	ADAPTER VALVE TEST
419	257562-65	ADAPTER VALVE TEST
420	257562-66	ADAPTER VALVE TEST



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
421	257562-67	ADAPTER VALVE TEST
422	257562-68	ADAPTER VALVE TEST
423	257562-69	ADAPTER VALVE TEST
424	257562-7	ADAPTER VALVE TEST
425	257562-70	ADAPTER VALVE TEST
426	257562-71	ADAPTER VALVE TEST
427	257562-72	ADAPTER VALVE TEST
428	257562-73	ADAPTER VALVE TEST
429	257562-74	ADAPTER VALVE TEST
430	257562-75	ADAPTER VALVE TEST
431	257562-76	ADAPTER VALVE TEST
432	257562-77	ADAPTER VALVE TEST
433	257562-78	ADAPTER VALVE TEST
434	257562-79	ADAPTER VALVE TEST
435	257562-8	ADAPTER VALVE TEST
436	257562-84	ADAPTER VALVE TEST
437	257562-86	ADAPTER VALVE TEST
438	257562-9	ADAPTER VALVE TEST
439	287467-1-1	SHIM CLEARANCE GAGE
440	287771-1	SPECIAL PLIERS
441	287786-1	ADAPTER VALVE TEST
442	287847-1	RIVETING MACHINE, PNEUMATIC
443	290435-1-1	ADAPTOR, VALVE TEST
444	2955900-1	EXTRACTOR SHAFT
445	296073-1	BUTTERFLY ANGLE INDICATOR SCALE
446	296529-1	TEST ADAPTER
447	2A1281	SPACER #4 BRG
448	2C14029	PULLER, LP TURB MODULE
449	2C14040	TORQUE ADAPTER, PRESSURE TUBE-COUPLING NUT, HP TURB ROTOR
450	2C14052	FIXTURE, LIFT & TURN - LOW PRESSURE TURBINE - HORIZ
451	2C14092	WRENCH, STARTER-LOW PRESSURE TURBINE COUPLING NUT
452	2C14093	WRENCH, COUPLING NUT- L P TURB MID SHAFT
453	2C14193	STAND, SHIPPING / STORAGE-HP TURB MODULE
454	2C14199	FIXTURE, INSTALL REMOVE-HP TURB MODULE ASSEMBLY
455	2C14220	FIXTURE, LIFT-HP TURB HORIZONTAL
456	2C14222	STAND, INSTALL/REMOVE HP TURB ROTOR SHAFT SEALS & BRG RACES
457	2C14602	FIXTURE, RESTRAIN-TURB REAR FRAME TO LPT-ROTOR
458	2C14650	WRENCH, RETAINER NUT-INNER RACE NO 6 BEARING
459	2C14686	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
460	2C14726	ADAPTER PEDESTAL ENGINE FORWARD
461	2C14729	ADAPTER SET PEDESTAL ENGINE AFT
462	2C6339	SUPPORT - ENGINE HANDLING
463	2C6894	TOOL, REMOVAL - FAN SPINNER
464	2C8073	FIXTURE, PRELOAD-SPACER STG I FAN BLADE
465	30G1412	PIN SHOULDER COMPRESSOR STATOR SYNCHRONIZING RING ARM
466	30G1885	WASHER HPC HEAT SHIELD RETAINER
467	30G1894	LUG ANTI ROTATION HPC STATOR 4-7 STAGE
468	30G1896	LUG ANTI ROTATION HPC STATOR 5-7 STAGE BORESCOPE SEGMENT
469	30G1945	RETAINER ASSY OF HEATSHIELD HPC 4STAGE
470	30G2107	BRACKET ASSY OF GEARBOX MOUNT
471	30G2109	BUSHING SLEEVE FLANGED
472	30G2110	BUSHING SLEEVE FLANGED
473	30G2664	PIN SHOULDER COMPRESSOR STATOR SYNCHRONIZING RING ARM
474	30G2994	ARM ASSY OF COMPRESSOR STATOR SYNCHRONIZING RING
475	30G2995	ARM ASSY OF COMPRESSOR STATOR SYNCHRONIZING RING
476	32-41-12 - FIG 902	WHEEL AND TIRE ASSEMBLY FIXTURE
477	32-41-12 - FIG 903	WHEEL HALF HUB SUPPORT TOOL
478	32-41-12 - Fig904-1	REMOVAL - INSTALLATION PLATE
479	32-41-12 - Fig904-2	TIRE AND WHEEL ASSY TOOLS
480	32-41-12 - Fig904-3	WHEEL HALF HUB SUPPORT
481	32-41-13 - 114-264	BEARING CUP REM-INST TOOL
482	32-41-13 - 114-265	BEARING CUP REM-INST TOOL
483	32-41-13 - 114-266	WHEEL HALF SUPPORT TOOL
484	32-41-13 - 114-268	WHEEL HALF SUPPORT TOOL
485	32-41-89 - 114-1078	BEARING CUP INSTALLATION PLATE FOR INNER WHEEL HALF
486	32-41-89 - 114-1079	TOOL FOR ASSY TIRE AND WHEEL
487	32-41-89 - 114-1080	TOOL FOR REM BEARING CUPS FROM INNER OUTER WHEEL HALVES
488	32-41-89 - 114-1089	TOOL FOR REM BEARING CUPS FROM INNER OUTER WHEEL HALVES
489	32-41-89 - 114-1090	TOOL FOR REM OR INST INNER OUTER WHEEL HALF BEARING CUPS
490	32-41-89 - 114-1091	TOOL FOR REM OR INST BEARING CUPS FROM INNER OUTER WHEEL HALVE



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
491	32-41-89 - 114-1092	TOOL FOR REM OR INST BEARING CUPS FROM INNER OUTER WHEEL HALVES
492	33-51-17 FIG1001	CONTACT PIN
493	381870AT20	TORQUE WRENCH ADAPTER GLAND
494	381872AT1-101	Lock Stud Torque Wrench Adapter
495	3821050LFT1	ADJUSTMENT TOOL DEPLOY/STOW VALVE
496	3916732-503	ADAPTER SPANNER
497	392100XXX	TOOL TICKNESS
498	3A3150-5	TORQUE TOOL
499	42054-F1	SEAL PULLER
500	444-65035-000	WRENCH
501	460001682-84	TUBE SPANNER
502	460001775-1	HOLDING BLOCKS
503	460001775-2	HOLDING BLOCKS
504	460001775-3	HOLDING BLOCKS
505	460001775-4	HOLDING BLOCKS
506	460001775-5	HOLDING BLOCKS
507	460001775-6	HOLDING BLOCKS
508	460001775-7	HOLDING BLOCKS
509	460001775-8	HOLDING BLOCKS
510	460001794-1	PRESSURE TEST BUNG
511	460001794-10	PRESSURE TEST BUNG
512	460001794-11	PRESSURE TEST BUNG
513	460001794-12	PRESSURE TEST BUNG
514	460001794-13	PRESSURE TEST BUNG
515	460001794-14	PRESSURE TEST BUNG
516	460001794-15	PRESSURE TEST BUNG
517	460001794-16	PRESSURE TEST BUNG
518	460001794-17	PRESSURE TEST BUNG
519	460001794-18	PRESSURE TEST BUNG
520	460001794-2	PRESSURE TEST BUNG
521	460001794-3	PRESSURE TEST BUNG
522	460001794-4	PRESSURE TEST BUNG
523	460001794-5	PRESSURE TEST BUNG
524	460001794-6	PRESSURE TEST BUNG
525	460001794-7	PRESSURE TEST BUNG
526	460001794-8	PRESSURE TEST BUNG
527	460001794-9	PRESSURE TEST BUNG
528	460004330	PRESS PAD
529	460004330-100	PRESS PAD
530	460004330-101	PRESS PAD
531	460004330-102	PRESS PAD
532	460004330-103	PRESS PAD
533	460004330-104	PRESS PAD
534	460004330-105	PRESS PAD
535	460004330-106	PRESS PAD
536	460004330-107	PRESS PAD
537	460004330-117	PRESS PAD
538	460004330-87	PRESS PAD
539	460004330-88	PRESS PAD
540	460004330-89	PRESS PAD
541	460004330-90	PRESS PAD
542	460004330-91	PRESS PAD
543	460004330-92	PRESS PAD
544	460004330-93	PRESS PAD
545	460004330-94	PRESS PAD
546	460004330-95	PRESS PAD
547	460004330-96	PRESS PAD
548	460004330-97	PRESS PAD
549	460004330-98	PRESS PAD
550	460004330-99	PRESS PAD
551	460004331-1	DRIFT
552	460004331-10	DRIFT
553	460004331-11	DRIFT
554	460004331-12	DRIFT
555	460004331-13	DRIFT
556	460004331-14	DRIFT
557	460004331-15	DRIFT
558	460004331-16	DRIFT
559	460004331-17	DRIFT
560	460004331-18	DRIFT





## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
561	460004331-19	DRIFT
562	460004331-2	DRIFT
563	460004331-2	Drift
564	460004331-20	DRIFT
565	460004331-21	DRIFT
566	460004331-22	DRIFT
567	460004331-23	DRIFT
568	460004331-24	DRIFT
569	460004331-25	DRIFT
570	460004331-26	DRIFT
571	460004331-27	DRIFT
572	460004331-3	DRIFT
573	460004331-4	DRIFT
574	460004331-5	DRIFT
575	460004331-6	DRIFT
576	460004331-7	DRIFT
577	460004331-8	DRIFT
578	460004331-9	DRIFT
579	460006151-1	EXTRACTOR
580	460006151-10	EXTRACTOR
581	460006151-11	EXTRACTOR
582	460006151-12	EXTRACTOR
583	460006151-13	EXTRACTOR
584	460006151-14	EXTRACTOR
585	460006151-15	EXTRACTOR
586	460006151-16	EXTRACTOR
587	460006151-17	EXTRACTOR
588	460006151-18	EXTRACTOR
589	460006151-19	EXTRACTOR
590	460006151-2	EXTRACTOR
591	460006151-20	EXTRACTOR
592	460006151-21	EXTRACTOR
593	460006151-22	EXTRACTOR
594	460006151-23	EXTRACTOR
595	460006151-24	EXTRACTOR
596	460006151-25	EXTRACTOR
597	460006151-3	EXTRACTOR
598	460006151-4	EXTRACTOR
599	460006151-5	EXTRACTOR
600	460006151-6	EXTRACTOR
601	460006151-7	EXTRACTOR
602	460006151-8	EXTRACTOR
603	460006151-9	EXTRACTOR
604	460006499	PRESS PAD
605	460006499-1	PRESS PAD
606	460006499-10	PRESS PAD
607	460006499-11	PRESS PAD
608	460006499-12	PRESS PAD
609	460006499-13	PRESS PAD
610	460006499-14	PRESS PAD
611	460006499-15	PRESS PAD
612	460006499-16	PRESS PAD
613	460006499-17	PRESS PAD
614	460006499-18	PRESS PAD
615	460006499-19	PRESS PAD
616	460006499-2	PRESS PAD
617	460006499-20	PRESS PAD
618	460006499-21	PRESS PAD
619	460006499-22	PRESS PAD
620	460006499-23	PRESS PAD
621	460006499-24	PRESS PAD
622	460006499-25	PRESS PAD
623	460006499-3	PRESS PAD
624	460006499-4	PRESS PAD
625	460006499-5	PRESS PAD
626	460006499-6	PRESS PAD
627	460006499-7	PRESS PAD
628	460006499-8	PRESS PAD
629	460006499-9	PRESS PAD
630	460006500-1	REACTOR PAD



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
631	460006500-2	REACTOR PAD
632	460006500-3	REACTOR PAD
633	460006500-4	REACTOR PAD
634	460006500-5	REACTOR PAD
635	460006500-6	REACTOR PAD
636	460006804	ADAPTER BLEED TORQUE LINK
637	460007000-1	LOC N BLOCK
638	460007000-10	WASHER
639	460007000-4	KNURLED NUT
640	460007000-8	LOCATION
641	460007000-9	NUT
642	460007305-1	PLATE MOUNT TOP
643	460007305-17	WASHER
644	460007305-3	LOCATION SPIGOT
645	460007316-4	HEXAGON HEAD SCREW
646	460007316-7	BLOCK PIVOT
647	460007316-8	BOLT, BOOGIE BEAM
648	460007316-9	HEXAGON HEAD SCREW
649	4916795-507	MLG FIXED SIDE STRUT NUT TORQUE ADAPTER
650	4MIT65B80307-1	Protractor Assembly - Control Column
651	4MIT65B80307-1-1	Bracket - Base
652	4MIT65B80307-1-12	Nut Hex
653	4MIT65B80307-1-13	Screw Cap Socket Hd
654	4MIT65B80307-1-14	Pendulum
655	4MIT65B80307-1-15	Shaft
656	4MIT65B80307-1-16	Bearing - Ball
657	4MIT65B80307-1-17	Spacer - Shaft
658	4MIT65B80307-1-18	Collar Set Screw
659	4MIT65B80307-1-19	Nut-Jam
660	4MIT65B80307-1-20	Washer
661	4MIT65B80307-1-21	Storage Box Assy
662	4MIT65B80307-1-22	Storage Box
663	4MIT65B80307-1-23	Identification Tag
664	4MIT65B80307-14	Pendulum
665	4MIT65B80307-15	Shaft
666	4MIT65B80307-16	Bearing-ball
667	4MIT65B80307-1-7	Dial Lock
668	4MIT65B80307-18	Collar-set screw
669	50000-T5	SPLINE ADAPTOR
670	50J914	TUBE TRANSFER SEAL RING (1.3075 X 1.600)
671	50U639	ELBOW MAIN FILTER OIL TUBE
672	5171A0000-01	CALIBRATING SLEEVE
673	52182A0000	PPU MECHANICAL TEST SET
674	52182A0000-01	PPU MECHANICAL TEST SET
675	52347A0161-01	ALIGNMENT FIXTURE
676	52485A0000-02	TORQUE MEASURING FIXTURE
677	52485A0002-01	PULLING PIECE
678	52512A0000-01	ALIGNMENT BOLT
679	52513A0000-01	TEST FIXTURE
680	52533A0000-01	TEST WHEEL
681	52537A0000-01	ANGULAR TEST FIXTURE
682	53194A0000-01	TEST FIXTURE
683	53207-2001	ADAPTER, MANUAL ACTUATOR
684	53T625	LUG ANTI ROTATION
685	55535S0003	THRUST PAD
686	55576S0000	CLAMPING JAW
687	55605S0000	CLAMPING FIXTURE
688	55606S0000	PRESSING DEVICE
689	558-1-05903-002	EXTRACTOR-FUEL PUMP
690	558-2-16308	HEAT SHRINK ASSY TOOL
691	55844S0000	BEARING EXTRACTION TOOL
692	55845S0000	PLATE
693	55872S0000	SEAL INSTALLATION TOOL
694	55872S0001	SEAL GUIDE
695	55872S0002	CALIBRATING SLEEVE
696	55872S0003	RECEIVER
697	55947S0001	MOUNTING PLATE
698	56088S0000	PRESS IN PRESS OUT TOOL
699	56507S0002	SEAL GUIDE
700	56522S0000	RUGGING TOOL



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
701	56523S0000	EXTRACTOR
702	56724S0000	SPANNER SET
703	56739S0000	MOUNTING DEVICE
704	56838-0001	FLANGE
705	56838-0002	WASHER
706	56838-0100	HOLDING DEVICE
707	56977-0001	EXPANDING MANDREL
708	56977-0002	EXTRACTING SLEEVE
709	56977-0003	BUSH
710	56977-0004	THREADED ROD
711	56977-0005	SCREW NUT
712	56977-0006	STAR GRIP
713	56977-0007	DUMMY BUSH
714	56994A0100-01	RECEIVING ASSY
715	57018-0001	BASE PLATE
716	57097-0001	SEAL FORMING MANDREL
717	57103-0007	BUSH
718	57310-0001	SLEEVE
719	57310-0002	SLEEVE
720	57759A0000-01	WRENCH, SPECIAL
721	57852A0000-01	WRENCH
722	57963A0000-01	SEAL INSTALLATION SLEEVE
723	57968A0000-01	SEAL FORMING PLATE
724	57970-0001	SLEEVE
725	57971A0000-01	SEAL INSTALLATION TOOL
726	57972A0000-01	SEAL INSTALLATION TOOL
727	57975A0000-01	ASSEMBLY FIXTURE
728	57979A0100-01	SPECIAL WRENCH
729	58133-0006	PRESS IN MANDREL
730	58144-0002	CLAMPING JAW
731	58144-002	SPAN PLATE
732	58174A0000-01	CALIBRATION MANDREL
733	58236A0000	CALIBRATE MANDREL
734	58294-0001	CALIBRATING SLEEVE
735	58332A0000-01	ASSEMBLY FIXTURE
736	58420A0000-01	PRESS IN FIXTURE
737	58483-0001-2-3	SLEEVE-SUPPORT
738	58616A0000-01	EXTRACTION TOOL
739	58H453	BUSHING SLEEVE FLANGED (.260X.465X.340)
740	5911258-STP1	MLG RETRACT MECHANISM SUPPORT
741	5916712-1	ELEVATOR REMOVAL
742	5952163-1	SLING-ENGINE NOSE COWL
743	59656-T2	HOLDING FIXTURE
744	59771A0000-01	STAKING TOOL
745	59824-0001	RECEIVER
746	59824-0002	GUIDE
747	59824-0003	GUIDE
748	59824-0004	THRUST PIECE
749	59824-0005	THRUST PIECE
750	59T165	RETAINER NUT - BOLT
751	5E92-0300	PROTECTOR AXLE THREAD
752	5K3977	DETAIL GAUGE
753	6201A7015000	N/A
754	62201-T200	HOLDING FIXTURE
755	62668-F1	SEAL REMOVAL TOOL
756	640-427920	SUPPORT TOOL FOR RIT MOTOR-CON
757	640-427921	TORQUE ADAPTER
758	640-4279919	V-BLOCK
759	64401-FE250-000	N/A
760	64402-FE240-002	N/A
761	650701-FE250000	PISTON INSTALLATION TOOL
762	65301-FE25000001	N/A
763	65303A4351M000	MANUFACTURING OF WRECH
764	65375AB351M000	MANUFACTURING OF WRECH
765	65572-T1	PRESSING TOOL
766	65572-T2	HOLDING FIXTURE
767	65601A4351M000	CONE - CENTERING
768	657.02FE25000	SPRING COMPRSSION TOOL
769	65701-FE250-200	N/A
770	65702-FE240-400	N/A



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
771	65-87995	ANGLE - STRUT CHORD SIDE ENGINE
772	66087AT1	TOOL, INSTALLATION, SPECIAL SEAL ASSEMBLY
773	66-193	ELECTRICAL ASSY TOOL
774	68.1-01-NSA 8132-05	BAS AND NSA BEARINGS INSERTION AND SWAGING (ITEM)
775	6SV-85847	WRENCH, SPANNER
776	6SV886529	VALVE SLEEVE PULLER
777	6SV-90846	HOLDING STAND
778	6SV-97368	TORQUE WRENCH ADAPTOR
779	70001-T100	WRENCH MOUNTING
780	70001-T-5	TORQUE WRENCH ADAPTER
781	701-2978000	PIN-RIGGING
782	75416-T1	TORQUE ADAPTER AND SPLINE WRENCH
783	7ME65-73761-1	WRENCH; MAIN GEAR FORWARD TRUNNION BEARING
784	808012-91	SAFETY VALVE
785	83330118-119	SAFETY CHAMBER CARTRIDGE ELECTRO ETC
786	833564-2	DRIVER INSTALLATION SEAL
787	833564-3	DRIVER
788	83564-1	DRIVER INSTALLATION SEAL
789	83564-3	DRIVER INSTALLATION SEAL
790	856A1009	ADAPTER, VERTICAL LIFT FIXTURE
791	856A1009G01	ADAPTER, VERTICAL LIFT FIXTURE
792	856A1009G02	ADAPTER, VERTICAL LIFT FIXTURE
793	856A1015	SLING - FRAMES
794	856A1015G01	SLING - FRAMES
795	856A1018	STAND, SUB - ASSEMBLY - FRAMES
796	856A1018G01	STAND, SUB - ASSEMBLY - FRAMES
797	856A1018G02	STAND, SUB - ASSEMBLY - FRAMES
798	856A1018G03	STAND, SUB - ASSEMBLY - FRAMES
799	856A1020	FIXTURE, RESTANING - CORE MODULE, AFT
800	856A1020G01	FIXTURE, RESTANING - CORE MODULE, AFT
801	856A1020G02	FIXTURE, RESTANING - CORE MODULE, AFT
802	856A1020G03	FIXTURE, RESTANING - CORE MODULE, AFT
803	856A1020G04	FIXTURE, RESTANING - CORE MODULE, AFT
804	856A1020G05	FIXTURE, RESTANING - CORE MODULE, AFT
805	856A1020G06	FIXTURE, RESTANING - CORE MODULE, AFT
806	856A1020G07	FIXTURE, RESTANING - CORE MODULE, AFT
807	856A1020G08	FIXTURE, RESTANING - CORE MODULE, AFT
808	856A1020G10	FIXTURE, RESTANING - CORE MODULE, AFT
809	856A1021	FIXTURE, LIFT & TURN - COMPRESSOR ROTOR ASSY
810	856A1021G01	FIXTURE, LIFT & TURN - COMPRESSOR ROTOR ASSY
811	856A1021G02	FIXTURE, LIFT & TURN - COMPRESSOR ROTOR ASSY
812	856A1042	WRENCH, TORQUE - NO 4 BRG RETAINER
813	856A1042G01	WRENCH, TORQUE - NO 4 BRG RETAINER
814	856A1042G02	WRENCH, TORQUE - NO 4 BRG RETAINER
815	856A1042G03	WRENCH, TORQUE - NO 4 BRG RETAINER
816	856A1042G04	WRENCH, TORQUE - NO 4 BRG RETAINER
817	856A1042G05	WRENCH, TORQUE - NO 4 BRG RETAINER
818	856A1042G06	WRENCH, TORQUE - NO 4 BRG RETAINER
819	856A1042G07	WRENCH, TORQUE - NO 4 BRG RETAINER
820	856A1042G08	WRENCH, TORQUE - NO 4 BRG RETAINER
821	856A1051	PULLER, ARM - COMPRESSOR STATOR ACTUATION
822	856A1051G01	PULLER, ARM - COMPRESSOR STATOR ACTUATION
823	856A1051G02	PULLER, ARM - COMPRESSOR STATOR ACTUATION
824	856A1056	FIXTURE,GRIND - COMPR STATOR FLOWPATH
825	856A1056G01	FIXTURE,GRIND - COMPR STATOR FLOWPATH
826	856A1056G02	FIXTURE,GRIND - COMPR STATOR FLOWPATH
827	856A1056G03	FIXTURE,GRIND - COMPR STATOR FLOWPATH
828	856A1056G04	FIXTURE,GRIND - COMPR STATOR FLOWPATH
829	856A1056G05	FIXTURE,GRIND - COMPR STATOR FLOWPATH
830	856A1057	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
831	856A1057G01	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
832	856A1057G02	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
833	856A1057G03	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
834	856A1061	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
835	856A1061G01	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
836	856A1061G02	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
837	856A1061G03	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
838	856A1063	TOOL - SET COMPR STATOR SECTORS & LINERS INSTALLATION
839	856A1063G01	TOOL - SET COMPR STATOR SECTORS & LINERS INSTALLATION
840	856A1063G02	TOOL - SET COMPR STATOR SECTORS & LINERS INSTALLATION



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
841	856A1063G03	TOOL - SET COMPR STATOR SECTORS & LINERS INSTALLATION
842	856A1063G04	TOOL - SET COMPR STATOR SECTORS & LINERS INSTALLATION
843	856A1063G05	TOOL - SET COMPR STATOR SECTORS & LINERS INSTALLATION
844	856A1063G06	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
845	856A1063G07	TOOL - SET COMPR STATOR SECTORS & LINERS INSTALLATION
846	856A1070	FIXTURE, SPLINE BOLT REMOVAL
847	856A1070G01	FIXTURE, SPLINE BOLT REMOVAL
848	856A1070G02	FIXTURE, SPLINE BOLT REMOVAL
849	856A1071	TOOL SET,REMOVAL - COMPR STATOR LINERS & VANE SEGMENTS
850	856A1071G01	TOOL SET,REMOVAL - COMPR STATOR LINERS & VANE SEGMENTS
851	856A1071G02	TOOL SET,REMOVAL - COMPR STATOR LINERS & VANE SEGMENTS
852	856A1071G03	TOOL SET,REMOVAL - COMPR STATOR LINERS & VANE SEGMENTS
853	856A1071G04	TOOL SET,REMOVAL - COMPR STATOR LINERS & VANE SEGMENTS
854	856A1071G05	TOOL SET,REMOVAL - COMPR STATOR LINERS & VANE SEGMENTS
855	856A1071G06	TOOL SET,REMOVAL - COMPR STATOR LINERS & VANE SEGMENTS
856	856A1075	FIXTURE, LIFT & TURN - HP TURB ROTOR, DISK AFT
857	856A1075G01	FIXTURE, LIFT & TURN - HP TURB ROTOR, DISK AFT
858	856A1075G02	FIXTURE, LIFT & TURN - HP TURB ROTOR, DISK AFT
859	856A1075G03	FIXTURE, LIFT & TURN - HP TURB ROTOR, DISK AFT
860	856A1081	DOLLY, CORE MODULE - HORIZONTAL
861	856A1081G01	DOLLY, CORE MODULE - HORIZONTAL
862	856A1081G02	DOLLY, CORE MODULE - HORIZONTAL
863	856A1081G03	DOLLY, CORE MODULE - HORIZONTAL
864	856A1081G04	DOLLY, CORE MODULE - HORIZONTAL
865	856A1081G05	DOLLY, CORE MODULE - HORIZONTAL
866	856A1083	FIXTURE - LIFT AND TURN CORE MODULE
867	856A1083G01	FIXTURE - LIFT AND TURN CORE MODULE
868	856A1083G02	FIXTURE - LIFT AND TURN CORE MODULE
869	856A1084	ACTUATOR, PORTABLE HYDRAULIC, HAND OPERATED
870	856A1084G01	ACTUATOR - PORTABLE HYDRAULIC
871	856A1084G02	ACTUATOR - PORTABLE HYDRAULIC
872	856A1084G03	ACTUATOR - PORTABLE HYDRAULIC
873	856A1084G04	ACTUATOR - PORTABLE HYDRAULIC
874	856A1093	FIXTURE, LIFT - COMB CHAMBER & HPT TURB NOZZLE INNER SUPPORT
875	856A1093G01	FIXTURE, LIFT - COMB CHAMBER & HPT TURB NOZZLE INNER SUPPORT
876	856A1093G02	FIXTURE, LIFT - COMB CHAMBER & HPT TURB NOZZLE INNER SUPPORT
877	856A1093G03	FIXTURE, LIFT - COMB CHAMBER & HPT TURB NOZZLE INNER SUPPORT
878	856A1103	FIXTURE LIFT - HP TURB NOZZLE ASSY
879	856A1103G01	LIFT-HPT NOZZLE ASSEMBLY FIX
880	856A1103G03	FIXT.LIFT HPT NOZZ
881	856A1110	STAND, INSTALLATION - FRONT COMPR STATOR SECTOR AND LINER
882	856A1110G01	INSTALLATION STAND
883	856A1110G02	INSTALLATION STAND
884	856A1110G03	INSTALLATION STAND
885	856A1110G04	INSTALLATION STAND
886	856A1110G05	INSTALLATION STAND
887	856A1112	STAND, INSTALLATION-REAR COMPPESSOR STATOR
888	856A1112G01	STAND, INSTALLATION-REAR COMPRESSOR STATOR
889	856A1112G02	STAND, INSTALLATION-REAR COMPRESSOR STATOR
890	856A1115	CART PRESSURE CHECK
891	856A1115G01	CART, NITROGEN-FUEL MANIFOLD PRESS CHECK
892	856A1115G02	CART, NITROGEN-FUEL MANIFOLD PRESS CHECK
893	856A1115G03	CART, NITROGEN-FUEL MAN.PRES
894	856A1115G04	EQUIP PRESSURE MANIF
895	856A1115G05	CART, NITROGEN-FUEL MANIFOLD PRESS CHECK
896	856A1115G06	CART PRESSURE CHECK MANIFOLD
897	856A1115G07	CART, NITROGEN-FUEL MANIFOLD PRESS CHECK
898	856A1115G08	CART-NITROGEN FUEL
899	856A1126	DRIVER SET, GUIDE STRIPS - COMPR STATOR
900	856A1126G01	DRIVER SET, GUIDE STRIPS-COMPR STATOR
901	856A1126G02	DRIVER SET, GUIDE STRIPS-COMPR STATOR
902	856A1126G03	DRIVER SET, GUIDE STRIPS-COMPR STATOR
903	856A1126G04	DRIVER SET, GUIDE STRIPS-COMPR STATOR
904	856A1130	TOOL SET-JACK SCREW
905	856A1130G01	TOOL SET - JACK SCREWS
906	856A1130G02	TOOL SET - JACK SCREWS
907	856A1130G03	TOOL SET - JACK SCREWS
908	856A1130G04	TOOL SET - JACK SCREWS
909	856A1130G05	TOOL SET - JACK SCREWS
910	856A1130G06	TOOL SET - JACK SCREWS



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
911	856A1130G07	TOOL SET - JACK SCREWS
912	856A1130G08	TOOL SET - JACK SCREWS
913	856A1130G09	TOOL SET - JACK SCREWS
914	856A1130G10	TOOL SET - JACK SCREWS
915	856A1140	FIXTURE SUPPORT - CORE MODULE TO COMPR ROTOR SHAFT
916	856A1140G01	Fixture Support - Core Module to C/R Shaft
917	856A1140G02	FIXTURE, SPPT CORE MOD-CMP RTR SHFT; G01-G05
918	856A1140G05	Fixture
919	856A1140G06	DOLLY
920	856A1196	FIXTURE, VERT LIFT & TURN COMBUSTION CASE ASSY - FWD FLANGE
921	856A1196G01	FIXTURE LIFE & TURN
922	856A1196G02	TOOL SET JACKSCREWS
923	856A1199	BOLT RETAINER, HP COMPR ROTOR TO CDP SEAL TO HP TURB ROTOR
924	856A1256	GAGE SET HPCS LINER
925	856A1256G01	GAGE SET, LINER DIAMETER - COMPRESSOR REAR STATOR CASE
926	856A1266	PIN, ALINGMENT, HIGH PRESSURE COMPRESSOR CASE
927	856A1266G01	PIN, ALINGMENT, HIGH PRESSURE COMPRESSOR CASE
928	856A1266G02	PIN, ALINGMENT, HIGH PRESSURE COMPRESSOR CASE
929	856A1266G03	PIN, ALINGMENT, HIGH PRESSURE COMPRESSOR CASE
930	856A1266G05	ALIGNMENT PINS
931	856A1266G06	PINS, ALIGNMENT - COMPRESSOR CASES (ALIGNMENT PINS)
932	856A1291	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
933	856A1291G01	Fixture
934	856A1291G03	Fixture
935	856A1291G05	FIXTURE, INSTALL & REMOVE - INLET GEARBOX MODULE
936	856A1291G06	FIXTURE INSTALL AND REMOVE-I
937	856A1291G07	Fixture IGB Module
938	856A1291G08	FIXTURE, INSTALL AND REMOVE-INLET GEARBOX MODULE
939	856A1291G09	FIXTURE, INSTALL AND REMOVE - INLET GEARBOX MODULE (INSTALL AND REMOVE FIXTURE)
940	856A1291G10	FIXTURE, INSTALL
941	856A1312	SUPPORT - ENGINE HANDLING
942	856A1312G01	HANDLING SUPPORTS - ENGINE
943	856A1312G02	HANDLING SUPPORTS - ENGINE
944	856A1312G03	HANDLING SUPPORTS - ENGINE
945	856A1312G04	HANDLING SUPPORTS - ENGINE
946	856A1312G05	HANDLING SUPPORTS - ENGINE
947	856A1312G06	HANDLING SUPPORTS - ENGINE
948	856A1312G07	HANDLING SUPPORTS - ENGINE
949	856A1312G08	HANDLING SUPPORTS - ENGINE MAINTENANCE (SUPPORTS)
950	856A1314	BRACKET SET, SUPPORT - LP TURB AFT MOUNT
951	856A1314G01	BRACKET SET SUPPORT
952	856A1314G02	TOOL
953	856A1314G04	BRACKET SET LPT AFT
954	856A1332	FIXTURE, LIFT / ROTATE - CORE ENGINE, FWD
955	856A1332G01	FIXTURE LIFT/ROTATA-CORE ENG
956	856A1342	FIXTURE, PRESEAT - VSV LEVER ARMS
957	856A1342G01	FIXTURE, PRESEAT - VSV LEVER ARMS (PRESEAT FIXTURE)
958	856A1364	PRINT SET, BOOK-PHOTOGRAPH MCD DEBRIS
959	856A1364G01	BOOK, CHIP DETECTOR
960	856A1364G02	PHOTO SET, IDENTIFICATION OF ENGINE MATERIALS ON MCD
961	856A1377	FIXTURE, LIFT & TURN - SUPPORT ASSY
962	856A1377G01	Fixture, Lift/Turn HPTS/LPTN Assy
963	856A1377G02	FIXTURE, LIFT AND TURN - HPTS/LPTN ASSEMBLY (LIFT AND TURN FIXTURE)
964	856A1380	PULLER, OUTER AIR DUCTS - LPT NOZZLE ASSY
965	856A1380G01	PULLER, OUTER AIR DUCTS - LPT NOZZLE ASSY
966	856A1381	PULLER, OUTER AIR DUCTS - LPT NOZZLE ASSEMBLY
967	856A1381G0	PULLER
968	856A1381G01	PULLER
969	856A1382	PROTECTOR, STUD - HD TURB SHROUD
970	856A1382G01	Protector Stud HPT Shroud
971	856A1382G03	STUD PROTECTOR - HPT SHROUD
972	856A1382G04	PROTECTOR, HPT SHROUD LPTN ASSEMBLY STUD (PROTECTOR)
973	856A1382G05	PROTECTOR, HPT SHROUD LPTN ASSEMBLY STUD (PROTECTOR)
974	856A1382G06	FIXTURE
975	856A1384	TOOL, REMOVAL - RETAINING CLIP - HP TURB SHROUD
976	856A1384G01	TOOL REMOVAL RETAINING CLIP HPT SHROUD
977	856A1384G02	TOOL, REMOVAL - RETAINING CLIP, HPT SHROUD (REMOVAL TOOL)
978	856A1384P02	HANDLE
979	856A1384P08	Remover, retainer clip
980	856A1384P09	Remover, retainer clip



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
981	856A1387	GAGE THICKNESS VANE SECTOR COMPRESSOR STATOR
982	856A1387G01	GAGE THICKNESS VANE SECTOR COMPRESSOR STATOR
983	856A1391	SET, HOLDER - VARIABLE STATOR VANES
984	856A1391G01	HOLDER-VARIABLE STATOR VAN
985	856A1391G02	HOLDER - VARIABLE STATOR VANE (VSV HOLDER SET)
986	856A1394	FIXTURE, LIFT - C G ADJUSTABLE, GENERAL PURPOSE
987	856A1394G01	FIXTURE - LIFT ADJ C/G GEN PURPOSE
988	856A1394G02	FIXTURE - LIFT ADJ C/G GEN PURPOSE
989	856A1394G03	FIXTURE, LIFT - CG ADJUSTABLE (CG LIFT FIXTURE)
990	856A1411	FIXTURE, PUSH / PULL - HP TURB ROTOR, AFT, BLADE RETAINER
991	856A1411G02	FIXTURE, PUSH/PULL
992	856A1411G03	FIXT RING
993	856A1411G04	FIXTURE, PUSH/PULL - HPTR AFT BLADE RETAINER (PUSH/PULL FIXTURE)
994	856A1417	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
995	856A1417G01	Fixture, Lift & Turn
996	856A1417G02	Fixture, Lift & Turn
997	856A1417G03	FIXTURE, LIFT AND TU
998	856A1417G04	FIXTURE, LIFT AND TURN - HP TURBINE ROTOR DISK FORWARD (LIFT AND TURN FIXTURE)
999	856A1418	RETAINER, SHROUD HANGER - HPT STATOR
1000	856A1418G01	Retainer, Shroud Hanger
1001	856A1418G02	Retainer, Shroud Hanger
1002	856A1418G03	RETAINER, SHROUD HANGER - HPT STATOR (SHROUD HANGER RETAINER)
1003	856A1421	FIXTURE LIFT HPC/S
1004	856A1421G01	FIXTURE LIFT HPC/S
1005	856A1421G02	FIXTURE LIFT CFM56-7
1006	856A1423	FIXTURE, RESTRAINING-CORE MODULE, AFT
1007	856A1423G01	TOOL
1008	856A1423G02	Fixture
1009	856A1423G03	FIXTURE,RESTRAINING CORE
1010	856A1423G04	Restrain Fixture
1011	856A1423G05	FIXTURE, RESTRAINING - CORE MODULE, AFT (RESTRAINING FIXTURE)
1012	856A1423G06	FIXTURE
1013	856A1433	TOOL, TORQUING - MANIFOLD BUSHING - HP TURB STATOR
1014	856A1433G01	Tool Torque
1015	856A1433G02	TOOL, TORQUE - MANIFOLD BUSHING, HP TURBINE STATOR (TORQUE TOD)
1016	856A1481	PROTRACTOR ELECTRONIC PORTABLE VARIABLE STATOR VANE
1017	856A1481G01	Protractor, Electronic
1018	856A1481G02	PROTRACTOR, ELECTRONIC PORTABLE – VARIABLE STATOR
1019	856A1604	FIXTURE, SPLINE BOLT REMOVAL
1020	856A1604G01	Fixture Splined Bolt Remove
1021	856A1604G02	FIXT. SPLINED BOLT REM
1022	856A1606	PROTECTOR, STUDS - HP TURB SHROUD
1023	856A1606G01	PROTECTOR STUDS HPT
1024	856A1607	FIXTURE, LIFT - COMB CHAMBER / HP TURB NOZZLE
1025	856A1607G01	FIXT LIFT COMB CHAMBER
1026	856A1611	BRACKET SET, SUPPORT-LP TURB FORWARD FLANGE
1027	856A1611G01	BRACKET SET,SUPPORT
1028	856A1611G02	BRACKET SET,SUPPORT
1029	856A1611G03	BRACKET SET,SUPPORT
1030	856A1800	BRACKET SET, SUPPORT - TURBINE, REAR FRAME FORWARD FLANGE
1031	856A1800G01	BRACKET SET, REAR, FRAME, CFM56-7
1032	856A1800G02	BRACKET SET, SUPPORT - LPT (BRACKET SET)
1033	856A1801	RING, SUPPORT - ENGINE HANDLING
1034	856A1801G01	RING, SUPPORT - ENGINE HANDLING
1035	856A1801G02	RING, SUPPORT - ENGINE HANDLING
1036	856A1801G03	RING, SUPPORT - ENGINE HANDLING
1037	856A1805	GIUDE - FAN FRAME TO CORE MODULE
1038	856A1805G01	GIUDE - FAN FRAME TO CORE MODULE
1039	856A1832	FIXTURE, LIFT / TURN - CORE ENGINE, FWD
1040	856A1832G01	PULLER FAN BLADE SPACERS
1041	856A1836	ADAPTERS, MAINTENANCE STAND FWD FAN STATOR SUPPORT RING
1042	856A1836G01	ADAPTERS, MAINTENANCE STAND FWD FAN STATOR SUPPORT RING
1043	856A1845	FIXTURE, ALIGNING - HIGH PRESSURE COMPRESSOR
1044	856A1845G01	FIXTURE, ALIGNING HIGH PRESSURE
1045	856A1845G02	FIXTURE, ALIGNING-HIGH PRESSURE COMPRESSOR
1046	856A1865	FIXTURE, TORQUE - NO 3 BRG NUT
1047	856A1865G01	FIXTURE, TORQUE - NO 3 BRG NUT
1048	856A2308	SLEEVE, CENTERING AND REM / INST - MM3 AND MANT.
1049	856A2308G01	SLEEVE CENTER MOD 1/LPT MAJ MO
1050	856A2308G02	FIXTURE, ALIGNMENT - BOOSTER TO LPT SHAFT (ALIGNMENT FIXTURE)





## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1051	856A2309	FIXTURE HANDLING - BOOSTER ROTOR / STATOR ASSY
1052	856A2309G01	FIXTURE HANDLING - B
1053	856A2309G02	FIXTURE, HANDLING - BOOSTER ROTOR/STATOR ASSY (HANDLING FIXTURE)
1054	856A2309G03	FIXT HANDLING BOOSTER-OBSOLET
1055	856A2311	TUBE, DUMMY - LPT SHAFT FORWARD END.
1056	856A2311G01	TUBE, DUMMY - LPTR SHAFT FORWARD END (DUMMY TUBE)
1057	856A2312	BEAM, TORQUE ADAPTATION
1058	856A2312G01	BEAM, TORQUE ADAPTATION (TORQUE ADAPTATION BEAM)
1059	856A2312G02	BEAM, TORQUE ADAPTATION (TORQUE ADAPTATION BEAM)
1060	856A2312G03	BEAM, TORQUE ADAPTATION (TORQUE ADAPTATION BEAM)
1061	856A2322	BASEPLATE, MOBILE - FAN AND BOOSTER
1062	856A2322G01	BASE, MOBILE - FAN AND BOOSTER (MOBILE BASE)
1063	856A2323	FIXTURE, ASSY / DISASSY FAN AND BOOSTER
1064	856A2323G01	FIXTURE, ASSEMBLY/DISASSEMBLY - FAN AND BOOSTER (ASSEMBLY/DISASSEMBLY FIXTURE)
1065	856A2351	SECTOR TOOL SET, HANDLING - TURBINE FRAME MAINTENANCE MODULE
1066	856A2351G01	TOOL SET, HANDLING SECTOR - TURBINE FRAME MAINTENANCE MODULE (TOOL SET)
1067	856A2351G02	SEGMENTS HANDLE LPT FRAME
1068	856A2357	FIXTURE, RESTRAINING - LPT ROTOR TO STATOR
1069	856A2357G01	TOOL
1070	856A2390	WRENCH BOLT - LPT DISK STAGES 1-2-3 AND 5
1071	856A2390G01	WRENCH, TORQUE - NO. 3 TO 4 LPT DISK (TORQUE WRENCH)
1072	856A2402	TURNBUCKLE TGB REM. / INST.
1073	856A2402G01	INSTALL/REMOVE TURNBUCKLE - AGB/TGB
1074	856A2425	FIXTURE, RESTRAINING - LPT ROTOR TO STATOR
1075	856A2425G01	FIXTURE, RESTRAINING - LPT ROTOR TO STATOR (RESTRAINING FIXTURE)
1076	856A2501	WRENCH-VBV MANUAL CONTROL
1077	856A2501G01	WRENCH RATCHET DUAL PURPOSE VBV MANUAL CONTROL
1078	856A2513	TUBE, DUMMY LPT SHAFT FWD END.
1079	856A2513G03	TUBE DUMMY - LPT SHAFT FORWA
1080	856A2513G04	TUBE, DUMMY-LPT SHAFT FORWARD END
1081	856A2524	FIXTURE, HANDLING - LPT MAJOR MODULE
1082	856A2524G01	FIXTURE, HANDLING - LPT MAJOR MODULE (HANDLING FIXTURE)
1083	856A2524G02	TOOL CANCELLED USE G03
1084	856A2524G03	HANDLING FIXTURE - LPT MAJOR MODULE
1085	856A2618	FIXTURE, HOLDING ROTOR/STATOR
1086	856A2618G01	FIXTURE, HOLDING ROTOR/STATOR
1087	856A2618G02	FIXTURE, HOLDING ROTOR/STATOR
1088	856A2618G03	FIXTURE, HOLDING ROTOR/STATOR
1089	856A2618G04	FIXTURE, HOLDING ROTOR/STATOR
1090	856A2625	STAND, STORAGE MODULE 1
1091	856A2625G01	STAND, STORAGE MODULE I
1092	856A2626	STAND, STORAGE MODULE 2
1093	856A2626G01	STAND STORAGE-MODULE 2
1094	856A2626G02	STORAGE STAND - N°1/2 BRG SUPPORT
1095	856A2627	LIFTING BEAM
1096	856A2627G01	BEAM, LIFTING - LPT MAJOR MODULE (LIFTING BEAM)
1097	856A2627G02	BEAM, LIFTING (LIFTING BEAM)
1098	856A2627G05	BEAM, LIFTING (LIFTING BEAM)
1099	856A2627G06	PULLER (PULLER)
1100	856A2631	STAND, STORAGE-FAN BLADES
1101	856A2631G01	STAND, STORAGE, FAN BLADES
1102	856A2645	ENGINE VARIABLE CG BEAM
1103	856A2645G01	ENGINE VARIABLE CG BEAM
1104	856A2645G02	ENGINE VARIABLE CG BEAM
1105	856A2645G03	ENGINE VARIABLE CG BEAM
1106	856A2645G04	ENGINE VARIABLE CG BEAM
1107	856A2645G05	ENGINE VARIABLE CG BEAM
1108	856A2645G06	ENGINE VARIABLE CG BEAM
1109	856A2646	DOLLY, TRUNNION - TURBINE FRAME MAINTENANCE MODULE
1110	856A2646G01	DOLLY TRUNNION TURBINE FRAME MAINTENANCE MODULE
1111	856A2647	STAND, TRANSPORTATION/STORE, MAJOR MODULE 3
1112	856A2647G01	STAND, TRANSPORTATION/STORE, MAJOR MODULE 3
1113	856A2647G02	STAND, TRANSPORTATION/STORE, MAJOR MODULE 3
1114	856A2664	GAGE, SETTING - VBV DOORS
1115	856A2664G01	GAGE, SETTING - VBV DOORS
1116	856A2677	FIXTURE INSTALLATION AND REMOVAL
1117	856A2677G01	FIXTURE INST AND REM RETAINING RING
1118	856A2691	SPACERS REMOVAL PLIERS
1119	856A2691G01	PLIER SPACER REMOVAL
1120	856A2691G03	TOOL





# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1121	856A2717	ADAPTER LOCKING CORE ENGINE
1122	856A2717G01	ADAPTER, LOCK - CORE ENGINE (LOCK ADAPTER)
1123	856A2717G02	ADAPTOR LOCKING CORE ENG
1124	856A2726	TURNBUCKLE TGB / AGB
1125	856A2726G01	TURNBUCKLE - TGB/AGB
1126	856A2726G02	TURNBUCKLE AGB/TGB
1127	856A2754	FIXTURE SUPPORT AGB
1128	856A2754G01	FIXTURE SUPPORT AGB
1129	856A2778	PULLER, STG.1 LPT NOZZLE, STATIONNARY OUTER AIR SEAL
1130	856A2778G01	PULLER, STAGE 1 LPT NOZZLE STATIONARY AIR SEAL (PULLER)
1131	856A2954	PULLER FAN BLADES SPACERS
1132	856A2954G01	PULLER - FAN BLADE SPACERS
1133	856A2956	ASSISTANCE TOOL THE RING FAN ASSEMBLY
1134	856A2956G01	ASSISTANCE TOOL THE RING FAN ASSEMBLY
1135	856A2961	REM./INST. SEALOL AND MAGNETIC SEAL AGB
1136	856A2961G01	REM./INST. SEALOL AND MAGNETIC SEAL AGB
1137	856A2961G02	REM./INST. SEALOL AND MAGNETIC SEAL AGB
1138	856A2961G03	REM./INST. SEALOL AND MAGNETIC SEAL AGB
1139	856A2969	TOOL SET TARGET HANDLING SEAL
1140	856A2969G01	IMPINGEMENT TEST TARGETTING SET - AGB DRIVE PAD
1141	856A3057	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
1142	856A3057G01	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
1143	856A3057G02	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
1144	856A3057G03	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
1145	856A3057G04	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
1146	856A3057G05	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
1147	856A3057G06	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
1148	856A3114	WRENCH-VBV BALLSCREW ACTUATOR
1149	856A3114G01	WRENCH-VBV BALLSCREW ACTUATOR
1150	856A3373	FIXTURE, HOIST.LPT BLADED DISKS
1151	856A3373G01	FIXTURE, HOIST - LPT BLADED DISKS (HOIST FIXTURE)
1152	856A3409	PINS, GUIDE, SPINNER CONE
1153	856A3409G01	PINS - GUIDE, SPINNER CONE
1154	856A3409G02	PINS - GUIDE, SPINNER CONE
1155	856A3460	FIXTURE, CHECKING CENTER VENT TUBE INNER SUPPORTS
1156	856A3460G01	FIXTURE, CHECKING CENTER VENT TUBE INNER SUPPORTS
1157	856A3460G02	FIXTURE, CHECKING CENTER VENT TUBE INNER SUPPORTS
1158	856A3460G03	FIXTURE, CHECKING CENTER VENT TUBE INNER SUPPORTS
1159	856A3460G04	FIXTURE, CHECKING CENTER VENT TUBE INNER SUPPORTS
1160	856A3460G05	FIXTURE, CHECKING CENTER VENT TUBE INNER SUPPORTS
1161	856A3460G06	FIXTURE, CHECKING CENTER VENT TUBE INNER SUPPORTS
1162	856A3472	TOOL, CHECKING, AXIAL POSITION - CENTER VENT TUBE SUPPORTS
1163	856A3472G01	TOOL, CHECKING, AXIAL POSITION - CENTER VENT TUBE SUPPORTS
1164	856A3474	TOOL, CHECKING, EXPASION LOAD - CENTER VENT TUBE SUPPORTS
1165	856A3474G01	TOOL, CHECKING, EXPASION LOAD - CENTER VENT TUBE SUPPORTS
1166	856A3480	RING, CHECKING CENTER VENT TUBE INNER SUPPORTS
1167	856A3480G01	RING CHECKING CENTER VENT TUBE INNER SUPPROT
1168	856A3480G02	RING, CHECKING CENTER VENT TUBE INNER SUPPORTS
1169	856A3501	FIXTURE, ALIGNMENT / GUIDE - BOOSTER / LPT SHAFT.
1170	856A3501G01	FIXTURE, ALIGNMENT / GUIDE - BOOSTER / LPT SHAFT
1171	856A3501G02	FIXTURE, ALIGNMENT / GUIDE - BOOSTER / LPT SHAFT
1172	856A3501G03	FIXTURE, ALIGNMENT / GUIDE - BOOSTER / LPT SHAFT
1173	856A3501G04	FIXTURE, ALIGNMENT / GUIDE - BOOSTER / LPT SHAFT
1174	856A3501G05	GUIDE WRENCH
1175	856A3503	FIXTURE REM / INSTAL. AND HANDLING - BOOSTER ROTOR / STATOR ASSY
1176	856A3503G01	FAN BLADES PLOTTING MULTI CFM56
1177	856A3503G02	BOOSTER REMOVAL/INSTALLATION FIXTURE.
1178	856A3506	WRENCH, TORQUE / LOOSEN - LPT COUPLING UNIT
1179	856A3506G01	GUIDE PIN SET
1180	856A3506G02	WRENCH, TORQUE - LPT COUPLING NUT (TORQUE WRENCH) CFM56-3
1181	856A3506G03	WRENCH, TORQUE - LPT COUPLING NUT (TORQUE WRENCH)
1182	856A3506G04	TOOL
1183	856A3508	SLEEVE, CENTERING AND REM / INSTAL.
1184	856A3508G01	SLEEVE, CENTERING (SLEEVE)
1185	856A3508G02	SLEEVE
1186	856A3513	BEAM, RESIDUAL TORQUE
1187	856A3513G03	BEAM RESIDUAL TORQUE
1188	856A3515	EXTENSION BEAM - VAR CG LIFT FIXTURE
1189	856A3515G01	EXTENSION BEAM - VARIABLE CG LIFT FIXTURE
1190	856A3515G02	Ext Beam Var CG Ligt Fixture



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1191	856A3515G03	EXTENSION BEAM - VARIABLE CG LIFT FIXTURE (EXTENSION BEAM)
1192	856A3515G04	TOOL SET, DRIVE ADAPTER - BOOSTER AND LPT (TOOL SET)
1193	856A3519	SLING, THREE LEGS. AGB HANDLING
1194	856A3519G01	3 LEG SLING-AGB HANDLING
1195	856A3519G02	3 LEG SLING-AGB HANDLING
1196	856A3519G03	3 LEG SLING-AGB HANDLING
1197	856A3519G04	3 LEG SLING-AGB HANDLING
1198	856A3519G05	3 LEG SLING-AGB HANDLING
1199	856A3525	CRADLE REMOVAL / INSTALLATION AGB
1200	856A3525G01	CRADLE R/I AGB
1201	856A3525G02	CRADLE R/I AGB
1202	856A3525G03	CRADLE R/I AGB
1203	856A3525G04	CRADLE R/I AGB
1204	856A3537	TOOL CHECKING POSITION AGB
1205	856A3537G01	CHECKING TOOL
1206	856A3537G02	CHECKING TOOL AGB POSITION
1207	856A3544	FLANGE, ADAPTER - TGB
1208	856A3544G01	FLANGE, ADAPTER - TGB
1209	856A3544G02	FLANGE, ADAPTER - TGB
1210	856A3544G03	FLANGE, ADAPTER - TGB
1211	856A3545	FIXTURE RIGGING AGB
1212	856A3545G01	FIXTURE RIGGING AGB
1213	856A3545G02	FIXTURE RIGGING AGB
1214	856A3545G03	FIXTURE RIGGING AGB
1215	856A3546	FIXTURE, CHECKING. BACKLASH - TGB BEVEL GEAR DUO
1216	856A3546G01	FIXTURE, CHECKING. BACKLASH - TGB BEVEL GEAR DUO
1217	856A3546G02	FIXTURE, CHECKING. BACKLASH - TGB BEVEL GEAR DUO
1218	856A3546G03	FIXTURE, CHECKING. BACKLASH - TGB BEVEL GEAR DUO
1219	856A3546G04	FIXTURE, CHECKING. BACKLASH - TGB BEVEL GEAR DUO
1220	856A3546G05	FIXTURE, CHECKING. BACKLASH - TGB BEVEL GEAR DUO
1221	856A3546G06	FIXTURE, CHECKING. BACKLASH - TGB BEVEL GEAR DUO
1222	856A3546G07	FIXTURE, CHECKING. BACKLASH - TGB BEVEL GEAR DUO
1223	856A3573	STOOL ASSY / DISASSY - 1 & 2 BEARING SUPPORT
1224	856A3573G01	STOOL ASSY / DISASSY - 1 & 2 BEARING SUPPORT
1225	856A3573G02	STOOL ASSY / DISASSY - 1 & 2 BEARING SUPPORT
1226	856A3573G03	STOOL ASSY / DISASSY - 1 & 2 BEARING SUPPORT
1227	856A3591	PROTECTOR MOUNTING PINSS ACCESSORY GEARBOX
1228	856A3591G01	PROTECTOR-MOUNTING PIN ACCESSORY GEARBOX
1229	856A3598	CRADLE, REMOVE / INSTALL FUEL PUMP AND MEC PACKAGE
1230	856A3598G01	SUPPORT FUEL PUMP & MEC/HMU
1231	856A3598G02	SUPPORT FUEL PUMP & MEC/HMU
1232	856A3598G03	SUPPORT FUEL PUMP & MEC/HMU
1233	856A3600	PULLER RADIAL DRIVE SHAFT
1234	856A3600G01	PULLER RADIAL DRIVE SHAFT
1235	856A3601	ADAPTER DRAIN LUBRICATION UNIT
1236	856A3601G01	ADAPTER- DRAIN LUBE UNIT
1237	856A3617	PULLER. MAGNETIC. PLUG REM / INST. LUB. UNIT
1238	856A3617G01	PULLER - MAGNETIC PLUG, LUBRICATION UNIT
1239	856A3617G02	LUB UNIT MAGNETIC
1240	856A3704	BEAM, TORQUE ADAPTATION
1241	856A3704G01	BEAM, TORQUE ADAPTATION
1242	856A3707	PULLER FAN BLADE SPACERS.
1243	856A3707G01	PULLER - SPACERS , FAN BLADE
1244	856A3707G02	PULLER - SPACERS , FAN BLADE
1245	856A3707G03	PULLER - SPACERS , FAN BLADE
1246	856A3707G04	PULLER - SPACERS , FAN BLADE
1247	856A3707G05	PULLER - SPACERS , FAN BLADE
1248	856A3707G06	PULLER - SPACERS , FAN BLADE
1249	856A3707G07	PULLER, FAN BLADE SPACER
1250	856A3707G08	PULLER, FAN BLADE SPACER
1251	856A3707P15	STOP
1252	856A3707P16	SUPPORT
1253	856A3707P17	SUPPORT
1254	856A3707P18	SUPPORT
1255	856A3707P20	STOP
1256	856A3707P22	STOP
1257	856A3707P23	SUPPORT
1258	856A3707P24	SUPPORT
1259	856A3707P25	SUPPORT
1260	856A3709	FIXTURE, ALIGNMENT - AGB



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1261	856A3709G01	FIXTURE, ALIGNMENT - AGB
1262	856A3709G02	FIXTURE, ALIGNMENT - AGB
1263	856A3709G03	ALIGNMENT FIXTURE - AGB
1264	856A3709P05	GUIDE RAIL
1265	856A3709P06	DEPT GAUGE
1266	856A3712	BASE PLATE, MOBILE FAN FRAME
1267	856A3712G01	BASE PLATE MOBILE FAN
1268	856A3717	TOOL SET, R/I VBV ACT RING
1269	856A3717G01	TOOL SET, R/I VBV ACT RING
1270	856A3721	ADAPTER TOOL SET LIFT AND TURN 1 & 2 BEARING SUPPORT
1271	856A3721G01	ADAPTER TOOL SET LIFT AND TURN 1 & 2 BEARING SUPPORT
1272	856A3721G02	ADAPTER TOOL SET LIFT AND TURN 1 & 2 BEARING SUPPORT
1273	856A3721G03	ADAPTER TOOL SET LIFT AND TURN 1 & 2 BEARING SUPPORT
1274	856A3722	FAN DISK DUMMY.
1275	856A3722G01	FAN DISK DUMMY.
1276	856A3722G02	FAN DISK DUMMY.
1277	856A3722G03	FAN DISK DUMMY.
1278	856A3722G04	FAN DISK DUMMY.
1279	856A3723	FIXTURE, GUIDING AND PULLING - BOOSTER
1280	856A3723G01	FIXTURE, GUIDING AND PULLING - BOOSTER
1281	856A3723G02	FIXTURE, GUIDING AND PULLING - BOOSTER
1282	856A3724	TOOL SET, SIGHTING FAN DISK COUPLING BOLTS
1283	856A3724G01	TOOL SET, SIGHTING FAN DISK COUPLING BOLTS
1284	856A3724G02	TOOL SET, SIGHTING FAN DISK COUPLING BOLTS
1285	856A3725	TOOL SET WRENCHES TORQUE LOOSEN FAN DISK COUPLING BOLTS.
1286	856A3725G01	TOOL SET WRENCHES TORQUE LOOSEN FAN DISK COUPLING BOLTS
1287	856A3725G02	TOOL SET WRENCHES TORQUE LOOSEN FAN DISK COUPLING BOLTS
1288	856A3728	CORE ENGINE SEALING PLATE AND LOCKING ADAPTER
1289	856A3728G01	SEALING PLATE AND LOCKING ADAPTERS
1290	856A3728G02	SEALING PLATE AND LOCKING ADAPTERS
1291	856A3729	SHIELD THERMAL
1292	856A3729G01	SHIELD THERMAL
1293	856A3730	FIXTURE, HANDLING BOOSTER SPOOL
1294	856A3730G01	FIXTURE, HANDLING BOOSTER SPOOL
1295	856A3730G02	FIXTURE, HANDLING BOOSTER SPOOL
1296	856A3731	FIXTURE, HANDLING - FAN DISK
1297	856A3731G01	FIXTURE, HANDLING - FAN DISK
1298	856A3731G02	FIXTURE, HANDLING - FAN DISK
1299	856A3731G03	FIXTURE, HANDLING - FAN DISK
1300	856A3732	FIXTURE, HANDLING - BOOSTER ROTOR / STATOR ASSY
1301	856A3732G01	FIXTURE, HANDLING-BOOSTER ROTOR/STATOR ASSY
1302	856A3732G02	FIXTURE, HANDLING-BOOSTER ROTOR/STATOR ASSY
1303	856A3732G03	FIXTURE, HANDLING-BOOSTER ROTOR/STATOR ASSY
1304	856A3732P39	RING
1305	856A3736	TEMPLATE, LOCATING - DRAIN TUBE AND OIL BEARING 1 TUBE.
1306	856A3736G01	TEMPLATE, LOCATING - DRAIN TUBE AND OIL BEARING 1 TUBE.
1307	856A3738	FIXTURE, TORQUE / LOOSEN NO 1 BEARING NUT.
1308	856A3738G01	FIXTURE, TORQUE / LOOSEN NO 1 BEARING NUT.
1309	856A3746	TOOL, ASSEMBLY / DISASSEMBLY RADIAL DRIVE SHAFT
1310	856A3746G01	TOOL, ASSEMBLY / DISASSEMBLY RADIAL DRIVE SHAFT
1311	856A3746G02	TOOL, ASSEMBLY / DISASSEMBLY RADIAL DRIVE SHAFT
1312	856A3746G03	TOOL
1313	856A3750	FIXTURE, CENTERING LPT SHAFT MODULE
1314	856A3750G01	FIXTURE, CENTERING LPT SHAFT MODULE
1315	856A3750G02	FIXTURE, CENTERING LPT SHAFT MODULE
1316	856A3773	FIXTURE, HANDLING - LPT MAJOR MODULE
1317	856A3773G01	FIXTURE, HANDLING - LPT MAJOR MODULE
1318	856A3773G02	FIXTURE, HANDLING - LPT MAJOR MODULE
1319	856A3773G03	FIXTURE, HANDLING - LPT MAJOR MODULE
1320	856A3777	TEMPLATE, LOCATING - JET NO 3 BEARING SUPPORT
1321	856A3777G01	TEMPLATE, LOCATING - JET NO 3 BEARING SUPPORT
1322	856A3777G02	TEMPLATE, LOCATING - JET NO 3 BEARING SUPPORT
1323	856A3778	GUIDE PINS, SPINNER REAR CONE
1324	856A3778G01	GUIDE PINS, SPINNER REAR CONE
1325	856A3779	PULLER PLATFORMS, FAN BLADE
1326	856A3779G01	PULLER - PLATFORM, FAN BLADE
1327	856A3779G02	PULLER - PLATFORM, FAN BLADE
1328	856A3780	KIT, REMOVAL / INSTALLATION AGB / TGB BEARINGS
1329	856A3780G01	KIT, REMOVAL / INSTALLATION AGB / TGB BEARINGS
1330	856A3780G02	KIT, REMOVAL / INSTALLATION AGB / TGB BEARINGS



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1331	856A3782	WRENCH, REMOVE FAN BLADE RETAINER RING
1332	856A3782G01	WRENCH - FAN BLADE, RETAINER RING, REMOVAL
1333	856A3782G02	WRENCH - FAN BLADE, RETAINER RING, REMOVAL
1334	856A3782G08	PULLER - FAN BLADE SPACERS
1335	856A3783	FIXTURE CHECKING, NO 1 & NO 2 BEARING SUPPORT
1336	856A3783G01	FIXTURE CHECKING, NO 1 & NO 2 BEARING SUPPORT
1337	856A3783G02	FIXTURE CHECKING, NO 1 & NO 2 BEARING SUPPORT
1338	856A3793	FIXTURE, PUSHER / PULLER - CVT
1339	856A3793G01	FIXT PUSH PULL TUBE CENTER VENT
1340	856A3793G02	PUSHER PULLER CVT
1341	856A3900G01	TOOL, REMOVAL/INSTALLATION DETECTOR DMS
1342	856A3905	PULLER - FAN BLADE SPACER
1343	856A3905G01	ADAPTOR PULLER FAN B
1344	856A3905G02	PULLER FAN BLADE
1345	856A3905G03	PULLER 737-800
1346	856A3906	FIXTURE TORQUE FAN DISK COUPLING
1347	856A3906G01	FIXTURE TORQUE FAN DISK COUPLING
1348	856A3909	FIXT, PUSHER PLATFORM BUSHING
1349	856A3909G01	FIXT, PUSHER PLATFORM BUSHING
1350	856A3913	FIXT, CHECK ASSEMBLY TRF / 5 BEARING SUPPORT
1351	856A3913G01	FIXT, CHECK ASSEMBLY TRF / 5 BEARING SUPPORT
1352	856A3913G02	FIXT, CHECK ASSEMBLY TRF / 5 BEARING SUPPORT
1353	856A3913G03	FIXT, CHECK ASSEMBLY TRF / 5 BEARING SUPPORT
1354	856A3916	FIXTURE SUPPORT TABLE BOOSTER A / D DISK FAN
1355	856A3916G01	FIXTURE SUPPORT TABLE BOOSTER A / D DISK FAN
1356	856A3916G02	FIXTURE SUPPORT TABLE BOOSTER A / D DISK FAN
1357	856A3917	FIXTURE, TORQUE - CVT SLEEVE NUT
1358	856A3917G01	FIXTURE, TORQUE - CVT SLEEVE NUT
1359	856A3918	FIXTURE, PULLER / PRESS NO 2 ROLLER BEARING OUTER RACE
1360	856A3918G01	FIXTURE, PULLER / PRESS NO 2 ROLLER BEARING OUTER RACE
1361	856A3918G02	FIXTURE, PULLER / PRESS NO 2 ROLLER BEARING OUTER RACE
1362	856A3923	PULLER FAN BLADE SPACER LINE
1363	856A3923G01	PULLER FAN BLADE SPACER LINE
1364	856A3923G02	PULLER FAN BLADE SPACER LINE
1365	856A3923G03	PULLER-FAN BLADE SPACER LINE
1366	856A3924	BUSHING REENGAGEMENT TOOL
1367	856A3924G01	WRENCH, BUSHING REENGAGEMENT TOOL
1368	856A3947	PULLER FAN BLADE SPACERS
1369	856A3947G01	PULLER FAN BLADE SPACERS
1370	856A3947G02	PULLER FAN BLADE SPACERS
1371	856A4095	ADAPTER KIT. INSTALL / REMOVE SWAGED NUTS - CDP SEAL
1372	856A4095G01	TOOL
1373	856A4095G02	ADAPTOR KIT TOOL SET
1374	856A4611	FIXTURE CHECKING FAN BLADE
1375	856A4611G01	DIM INSP FIXTURE - FAN BLADE
1376	856A4633	GAGE - FAN DISK DOVETAIL SLOTS
1377	856A4633G01	GAUGE - FAN DISK DOVETAIL SLOTS
1378	856A4633G02	GAUGE - FAN DISK DOVETAIL SLOTS
1379	856A4637	BOOSTER SPOOL FORWARD FLANGE INSPECTION TOOL
1380	856A4637G01	INSP TOOL - BOOSTER SPOOL FORWARD FLANGE - CFM56-7B
1381	856A4640	FAN DISK LUGS INSPECTION
1382	856A4640G01	OOL-INSPECTION, FAN DISK LUGS, SPL-7727
1383	856A4646	FAN BLADE REAR SHANK WEAR INSPECTION TOOL
1384	856A4646G01	GAUGE - FAN BLADE REAR SHANK
1385	856A5817	TOOL,CHECK-FAN BLADE SHANK
1386	856A5817G01	TOOL,CHECK-FAN BLADE SHANK
1387	865A3557	Tool D-Seal Fitting, Magnetic Plug of Lubrication Unit
1388	909C498	SUPPORT BASE
1389	97102A4241M000	SLING-HANLING
1390	97A29102062	DEPRESSURIZATION CONNECTOR
1391	97A29102062000	CONNECTOR - DEPRESSURIZING, HYDRAULIC RESERVOIR
1392	97F26103000	CABLE ENGINE FIRE
1393	97F26103000000	TEST TOOL-PRESSURE,FIRE EXTINGUISHING BOTTLE
1394	98A07003906	ADAPTER-LOAD CELL
1395	98A07003906000	ADAPTOR JACKINGRQST
1396	98A07003906001	ADAPTOR JACKING
1397	98A07003906002	ADAPTOR JACKING
1398	98A07003906200	ADAPTER-FOR LOADCELL
1399	98A07003906201	ADAPTER
1400	98A07003906202	ADAPTER-LOAD CELL



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1401	98A07003906204	ADAPTOR, LOAD CELL LWR(BT)TC/A57-355
1402	98A07003907	ADAPTER-LOAD CELL
1403	98A07003907000	ADAPTOR JACKING
1404	98A07003907001	ADAPTOR JACKING
1405	98A07003907002	ADAPTOR JACKING
1406	98A07003907003	ADAPTOR JACKING
1407	98A07003907200	ADAPTER-FOR LOADCELL
1408	98A07003907201	ADAPTOR JACKING
1409	98A07003907202	ADAPTOR JACKING
1410	98A07003907204	ADAPTOR, LOAD CELL LWR(BT)TC/A57-355
1411	98A25207503000	PULLEY ASSEMBLY - SEALING CORD
1412	98A26213501000	MANUFACTURING OF WRECH
1413	98A27003000	EXTRACTORS
1414	98A270030000000	EXTRACTORS
1415	98A27003000002	GAUGE ASSEMBLY
1416	98A27003000007	GAGE ASSY-PUSH PULL
1417	98A27003000201	DRAW NUT
1418	98A27003000202	DRAW BAR
1419	98A27003000207	DRAW NUT
1420	98A27003000306	SPRING COTTER PIN
1421	98A27003000307	SPRING COTTER PIN
1422	98A27003000500	ENSGK EXTRACTOR TOOL
1423	98A27003001	RIGGING PIN
1424	98A27003001000	RIGGING PIN
1425	98A27103002000	TOOL LOCKING-ASA
1426	98A27108014000	AILERON DRUM PIN
1427	98A27207507000	EXTRACTOR
1428	98A27307545000	PIN RIGGING
1429	98A27407508001	Tool Set - Removal/Installation
1430	98A27407514	STRUT FIXTURE HORIZ. STABILIZER
1431	98A27407514000	FIXTURE STRUT STAB
1432	98A27407514001	FIXTURE-STRUT,HORIZONTAL STABILIZER
1433	98A27407514002	FIXTURE
1434	98A27407514003	STRUT-FIXTURE,HORIZONTAL STABILIZER
1435	98A27407514004	STRUT-FIXTURE,HORIZONTAL STABILIZER
1436	98A27407514005	FIXTURE-STRUT,HORIZONTAL STABILIZER
1437	98A27407514012	BUSH
1438	98A27407514015	GRIP
1439	98A27407514016	RING
1440	98A27407514017	NUT
1441	98A27407514100	ADAPTER
1442	98A27407514101	ADAPTER
1443	98A27407514200	ADAPTER, A330-200, COMPLETE
1444	98A27407514201	WRENCH
1445	98A27407514202	FORK
1446	98A27407514204	WASHER
1447	98A27407514206	CASE
1448	98A27407518	ADAPTER MINI HOIST ATACHMENT
1449	98A27407518000	THS HOIST EQPT
1450	98A27407518001	HOISTING EQUPT.
1451	98A27407518004	THS HOIST
1452	98A27407518010	FORK
1453	98A27407518306	SHEET METAL
1454	98A27407518350	SUPPORT WIRE ASSY.
1455	98A27407518530	WIRE ROPE
1456	98A27408018	SOCKET WRENCH SET - ELEVATOR BEARINGS
1457	98A27408018000	SOCKET WRENCH SET - ELEVATOR BEARINGS
1458	98A27408018001	SOCKET
1459	98A27408018002	SOCKET
1460	98A27408018003	SOCKET
1461	98A27408018004	SOCKET
1462	98A27408018005	WRENCH
1463	98A27408018006	WRENCH
1464	98A27408018100	SOCKET WRENCH
1465	98A27408018200	SOCKET WRENCH
1466	98A27408640000	FIXTURE STRUT HORIZONTAL STABILIZER
1467	98A27504006000	EXTRACTOR,PIN
1468	98A27504024000	EXTRACTOR,PIN
1469	98A27508035000	TEST-PLUNGER-VANE JAM OUT DETECTOR
1470	98A27801004000	KRUEGER FLAP CONTROL



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1471	98A27803005000	KRUEGER FLAP CONTROL
1472	98A27803500000	KRUEGER FLAP CONTROL SUPPORT
1473	98A27808652000	GAUGE LIMIT KRUGER FLAP ACUATOR
1474	98A27901002	PIN RIGGING RUDDER CONTROL
1475	98A27901002000	PIN,RIGGING-RUDDER CONTROL
1476	98A27901006	PIN RIGGING RUDDER CONTROL
1477	98A27901006000	PIN-RIGGING,RUDDER CONTROL
1478	98A28002534000	ADAPTER-VENTING, VAPOR SEAL
1479	98A28007570	ADAPTER DRAIN VENT VALVE APU
1480	98A28007570000	ADAPER DRAIN VENT VALVE, APU
1481	98A28007570200	ADAPER DRAIN VENT VALVE, APU
1482	98A2810400000	WATER DRAIN PURGER
1483	98A28104000000	WATER DRAIN PURGER
1484	98A28201003000	FUEL PUMP SHROUD TOOL
1485	98A29113501000	MANUFACTURING OF WRENCH
1486	98A29201000	PIN RIGGING RAM AIR TURBINE DROP* OUT CONTROLS
1487	98A29201000000	PIN-RIGGING, RAM AIR TURBINE DROP-OUT CONTROLS
1488	98A32101501000	GUIDING TOOL -TRUNNION
1489	98A32101502	HOISTING EQUIP. MLG ACTUATING CYLINDER
1490	98A32101502000	HOISTING EQPT-MLG ACTUATING CYLINDER
1491	98A32101502108	FORK PIECE
1492	98A32101502109	TOOL
1493	98A32101502110	TOOL
1494	98A32101502111	FORK PIECE
1495	98A32101510000	MLG SAFETY PIN
1496	98A32104154000	HOOK SPANNER - NUT, MAIN GEAR LEG PICK UP
1497	98A32104164000	SPANNER - SPHERICAL BEARING HOUSING - MAIN GEAR FORWARD PICK-UP
1498	98A32104167001	WRENCH; PIN, MAIN GEAR LEG PICK UP
1499	98A32301000000	RIGGING PIN, NOSE GEAR EMERGENCY LOWERING CONTROL
1500	98A32301010000	PIN RIGGING
1501	98A32301011000	PIN RIGGING
1502	98A32301013000	RIGGING PIN
1503	98A32301018000	PIN RIGGING MAIN GEAR SELECTOR CONTROL
1504	98A32501003000	PIN RIGGING
1505	98A32501005000	PIN RIGGING
1506	98A52307628000	LOCK-SAFETY,CARGO DOOR ACTUATOR
1507	98A52407620	PROTECTION P31 FRAME 84/85
1508	98A52407620000	PROTECTION - ACT DOOR, FR84-85
1509	98A52407620001	PROTECTION-ACCESS DOOR FR84 85
1510	98A53003500	EXTRACTOR REMOVAL TOOL
1511	98A53003500000	FASTENER REMOVAL TOOL
1512	98A53407566	EXTRACTOR ATTACHING BOLTS TAILCONE AND THSA
1513	98A53407566000	EXTRACTOR - ATTACH BOLTS, TAIL CONE
1514	98A53407566001	EXTRACTOR ATTACH
1515	98A53407566002	ATTACH BOLTS TAIL EXTRACTOR
1516	98A53407566003	EXTRACTOR - ATTACH BOLTS, TAIL CONE
1517	98A53407566004	EXTRACTOR - ATTACH BOLTS, THSA
1518	98A53407566005	EXTRACTOR - ATTACH BOLTS, TAIL CONE
1519	98A53407566006	EXTRACTOR ATTACHING BOLTS TAILCONE
1520	98A53407566100	EXTRACTOR - ATTCH
1521	98A53407566200	ADAPTOR
1522	98A53407566202	SHAFT
1523	98A53407566204	EXTENSION
1524	98A53407566206	SLIDE HAMMER
1525	98A53407566300	TAIL CONE BULLET
1526	98A54003022	EXTRACTOR
1527	98A54003022000	EXTRACTORS-SLEEVE RIB12 RIB18
1528	98A54003022001	EXTRACTOR,RIB12, OUTER WING SIDE
1529	98A54003022002	EXTRACTOR-SLEEVE RIB12 RIB18
1530	98A54003022003	EXTRACTOR - RIB 18, PYLON SIDE
1531	98A54003022004	EXTRACTOR,RIB 12,INNER OUTER PYLON SIDE,INNER WING SID
1532	98A54003023	DRAW BAR
1533	98A54003023000	DRAW BAR
1534	98A54003023100	JACKSCREW
1535	98A54003023101	JACK SCREW
1536	98A54003023102	JACK SCREW
1537	98A54003024	EXTRACTOR BODY
1538	98A54003024000	EXTRACTOR BODY
1539	98A54003024100	HOUSING
1540	98A54003025	BLACK WASHER





# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1541	98A54003025000	BACK WASHER
1542	98A54003025100	EXTRACTOR
1543	98A54003026	THRUST WASHER
1544	98A54003026000	THRUST WASHER
1545	98A54003026100	THRUST WASHER
1546	98A54003026101	THRUST WASHER
1547	98A54003028	KNURLED NUT
1548	98A54003028000	KNURLED NUT
1549	98A54003028100	KNURLED NUT
1550	98A54003028101	KNURLED NUT
1551	98A54003084000	PYLON DUMMY SHACKLES
1552	98A54403001000	EXTRACTOR
1553	98A54403005000	TORQUE, TOOL BEARINGS
1554	98A54403006000	TOOL SLEEVE RIB
1555	98A54403021000	TOOL CLAMPING
1556	98A5440324001	ADAPTOR-DYNANOMETRIC AT RIB
1557	98A54603005000	PYLON DUMMY SHACKLES
1558	98A55308440000	SLING UNIVERSAL FLIGHT CONTROLS
1559	98A55308440001	UNIVERSAL SLING
1560	98A57103013000	TAP TEST TOOL
1561	98A57104001000	EXTRACTOR-TO REMOVE/INSTALL IWING SPIGOT SLEEVE ASSEMBLY
1562	98A57304002	LEVER ASSY MANHOLE BOLT REMOVAL TOOL
1563	98A57304002000	EXTRACTION, MANHOLE BOLT
1564	98A57304002001	TOOL - MANHOLE BOLT EXTRACTION
1565	98A57304002022	HINGE BLOCK
1566	98A57304002056	WASHER
1567	98A57304002058	WASHER
1568	98A57304002060	PLUG
1569	98A71101506001	HOLD OPEN FIXTURE ENGINE COWL
1570	98A71103506	TORQUE WRENCH
1571	98A71103506000	CHEST-TORQUE SET
1572	98A71103506001	CHEST-TORQUE SET
1573	98A71103506002	CHEST-TORQUE SET
1574	98A71103506003	CHEST-TORQUE SET
1575	98A71103506117	SOCKET WRENCH
1576	98A71103511	FAN COWL HOLD OPEN FIXTURE
1577	98A71103511000	FAN COWL HOLD OPEN FIXTURE
1578	98AMS172322005	WRENCH -ADAPTER
1579	98AMS172332003	WRENCH -ADAPTER
1580	98D07103000	DYNAMOMETER-SAFETY STAY
1581	98D07103000000	DYNAMOMETER-SAFETY STAY
1582	98D07103000200	ADAPTER PIECE
1583	98D07103500000	NOSE JACK ADAPTOR
1584	98D07203000	MOORING FITTING A320
1585	98D07203000000	MOORING FITTINGS (A320)
1586	98D07203000040	MOORING FITTING, FRAME 8 (LH)
1587	98D07203000041	MOORING FITTING, FRAME 8 (RH, SYMMETR)
1588	98D07203000042	MOORING FITTING, FRAME 15 (LH)
1589	98D07203000043	MOORING, FITTING-FRAME 15 (RH, SYMMETR)
1590	98D07203000045	MOORING FITTING, FRAME 21 (LH)
1591	98D07203000046	MOORING FITTING, FRAME 21 (RH, SYMMETR)
1592	98D07203000047	MOORING FITTING, FRAME 33 (LH)
1593	98D07203000048	MOORING FITTING, FRAME 33 (RH, SYMMETR)
1594	98D07203000049	MOORING FITTING, FRAME 62 63 (LH)
1595	98D07203000050	MOORING FITTING, FRAME 62 63 (RH, SYMMETR)
1596	98D07203000051	FITTING
1597	98D07203000052	FITTING
1598	98D07203000053	FITTING
1599	98D07203000054	FITTING
1600	98D07203000055	MOORING FITTING, FRAME 21 (LH)
1601	98D07203000205	MOORING FITTING, FRAME 21 (RH, SYMMETR)
1602	98D07203000206	PLATE COMPL., LH
1603	98D07203000233	MOORING FITTING ITEM 5.10
1604	98D26203001001	TEST TOOL-ENG FIRE EXTINGUISHING SYSTEM
1605	98D27207508	FIXTURE VERT STABILIZER RUDDER
1606	98D27207508000	FIXTURE - VERT. STABILIZER RUDDER
1607	98D272075080000	FIXTURE-VERTI. STAB./RUDDER
1608	98D27207508042	SUPPORT UNIT BOTTOM COMPLETE
1609	98D27207508044	STRUT COMPLETE
1610	98D27207508151	LAGERBOCK, UNTEN



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1611	98D27207508153	WASHER
1612	98D27207508154	SLOTTED ROUND NUT
1613	98D27207508227	BOLT, CONNECTION
1614	98D27207508252	FORK, TOP
1615	98D27207508351	SUPPORT UNIT, TOP
1616	98D27207545000	RIGGING PIN
1617	98D27207546000	RIGGING PIN
1618	98D27207547000	RIGGING PIN
1619	98D27207548000	RIGGING PIN
1620	98D27207549000	RIGGING PIN
1621	98D27208657	DEVICE FREEPLAY RUDDER BEARING
1622	98D27208657000	DEVICE - FREEPLAY, RUDDER BEARING
1623	98D27303000	LOAD APPLICATION TOOL ELEVATOR RUDDER
1624	98D27303000001	LOAD,APPLICATION TOOL-ELEVATOR, AILERON, RUDDER
1625	98D27303000007	GAUGE ASSY PUSH PULL
1626	98D27303000102	ELEVATOR AILERON TOOL
1627	98D27303000201	LINK
1628	98D27303000202	UPPER PLATE & LINK
1629	98D27303000203	RUBBER
1630	98D27303000204	SCREW ASSY
1631	98D27303000205	TOOL
1632	98D27309004	ELEVATOR CENTRALIZING PIN
1633	98D27309004000	PIN CENTERING. ELEVATOR INSTALLATION
1634	98D27309006000	ELEVATOR GAUGE
1635	98D27309009	COLLAR DEPTH ACTUATOR
1636	98D27309009000	SAFETY COLLAR - ELEVATOR SERVO CONTROL
1637	98D273090090002	COLLAR
1638	98D27309009001	COLLAR-DEPTH ACTUATOR
1639	98D27309009002	COLLAR-DEPTH ACTUATOR
1640	98D27309009003	COLLAR DEPTH ACTUATOR
1641	98D27309009004	COLLAR-DEPTH ACTUATOR
1642	98D27309009206	EAR
1643	98D27309009208	PROTECTIVE RING
1644	98D27309009209	PROTECTIVE RING
1645	98D27309009214	EYE BOLT
1646	98D27309009216	KNURLED NUT STEEL M6
1647	98D27309009220	PROTECTIVE RING
1648	98D27309009221	PROTECTIVE RING
1649	98D27403003000	FIXTURE TRUST THSA
1650	98D27403500000	LOCK-STAB TRIM WHEEL
1651	98D27407532000	RIGGING PIN - THS MECHANICAL CONTROL
1652	98D275004082000	TOOL FLAP
1653	98D27504006	PIN RIGGING FLAPS (TRACKS 2,3,4,)
1654	98D27504006000	PIN-RIGGING, FLAPS
1655	98D27504006101	PIN - RIGGING
1656	98D27504010	ADJUSTER KINK SEAL
1657	98D27504010000	ADJUSTER-KINK SEAL (UPPER AFT WY5658)
1658	98D27504010102	GUIDE BOLT
1659	98D27504030	LOCK TORQ SHAFT
1660	98D27504030001	LOCK-TORQUE SHAFT (FLAPS AND SLATS)
1661	98D27504030202	PAD
1662	98D27504030204	PAD (BONDED)
1663	98D27504030214	INTERMEDIATE PLATE
1664	98D27504030216	PAD (BONDED)
1665	98D27504030218	SPIGOT
1666	98D27504030220	CLAMP - PIVOT
1667	98D27504030222	CLAMP - ARM
1668	98D27504031000	PIN-SETTING
1669	98D27504081000	TOOL FLAP ADJUSTING
1670	98D27504082	TOOL FLAP ADJUSTING (TRACK 4)
1671	98D27504082000	TOOL - FLAP ADJUSTING
1672	98D27504082001	TOOL FLAP ADJ
1673	98D27504084	EXTRACTOR PIN (TRACK 4)
1674	98D27504084000	EXTRACTOR - PIN, TRACK 4
1675	98D27504084100	TOOL
1676	98D27504084200	Handle
1677	98D27504084202	PLATE
1678	98D27504095000	SPANNER-TRUNNION NUT
1679	98D27504111	SLAVE PIN (TRACK 2,3)
1680	98D27504111000	SLAVE PIN-TRACK 2 & 3





## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1681	98D2750411201	PLATE
1682	98D27504113000	KIT-FLAP RIGGING
1683	98D27504114	DISTANCE GAUGES (INNER FLAP)
1684	98D27504114000	GAUGES-DISTANCE
1685	98D27504115000	GAUGES-DISTANCE
1686	98D27504118000	SPANNER-FLAP ADJUSTING
1687	98D27504119000	SPANNER-FLAP ADJUSTING
1688	98D27507536000	SOCKET WRENCH-RETAINER NUT
1689	98D27603001	OUTILLAGE APPLICATION EFFORT SPOILERS LD APP. TOOL SPLR
1690	98D27603001000	LOAD APPLICATION TOOL - SPOILER
1691	98D27603001202	PAD UPPER
1692	98D27603001204	SCREW
1693	98D27603001205	PIN
1694	98D27603001206	BOLT
1695	98D27604000000	COLLAR SAFETY, SPOILER
1696	98D27604001000	STRUT SUPPORT SPOILERS
1697	98D27803000	LOCKING TOOL FLAP SLAT
1698	98D27803000000	LOCKING TOOL-FLAP SLAT LEVER,INT. POSITION
1699	98D27803500	TOOL ZERO LOCKING FLAP/SLAT CTL LEVER
1700	98D27803500001	FLAP -SLAT LOCKING ZERO TOOL
1701	98D27804001000	ADAPTOR-DRIVE SLAT AND FLAP
1702	98D27804011	BAR TURNING
1703	98D27804011000	BAR-TURNING
1704	98D27804016	TOOL BACKSTOP SLAT
1705	98D27804016000	TOOL-BACKSTOP SLAT (TRACKS 9, 10, 11, AND 12)
1706	98D27804016202	TOOL
1707	98D27903500	PIN SIDE STICK LOCKING
1708	98D27903500000	PIN-SIDE STICK LOCKING
1709	98D27903500200	WASHER
1710	98D28108299	GUIDE - R -
1711	98D28108299000	GUIDE-R I,ADDITIONAL CENTER TANK
1712	98D28108299001	GUIDE - R/I, ACT 1
1713	98D28108299002	GUIDE-R I,ADDITIONAL CENTER TANK
1714	98D28108299126	HOLDER COMPL.
1715	98D28108299202	RIB
1716	98D28108299226	EAR
1717	98D28108299276	EAR
1718	98D28108299284	AXLE
1719	98D28108299300	STOP
1720	98D28108299302	CONNECTING PART
1721	98D28108299304	CONNECTING PART
1722	98D28108299306	FASTENER
1723	98D28108561000	EXTRACTOR-WATER DRAIN TUBE
1724	98D28108647000	ADAPTER
1725	98D29207542000	DEVICE-SAFETY, RAT
1726	98D29208581	PROTECTION EQPT
1727	98D29208581000	PROTECTION EQPT - RAT
1728	98D29208581216	LAMINATED SHEET, PAP
1729	98D29208581224	SHEET METAL
1730	98D29208581254	LATCH
1731	98D29208581290	POSITIONER
1732	98D32104002001	EQPT-MLG REMOVAL
1733	98D32104005000	SPANNER-MLG REAR PINTLE
1734	98D32104009006	EQPT-R/I OF THE MLG ACTUATOR
1735	98D32104013001	SPLINT ASSEMBLY SIDE STAY
1736	98D32104080	SOCKET
1737	98D32104080000	SPANNER-MLG REAR PIN
1738	98D32104080100	ADAPTER
1739	98D32104080200	MLG PINTLE SOCKET TOOL
1740	98D32104081	TOOL SPHERICAL LOCK
1741	98D32104081000	TOOL-SPHERICAL LOCATION
1742	98D32104180	BLOCK PIVOT
1743	98D32104180000	SPHERICAL LOCATION TOOL
1744	98D32203500000	TOOL, REMOVAL / INSTALLATION NLG
1745	98D32203501000	GUIDE CONE-NLG
1746	98D32203502000	SAFETY PIN-NLG DOOR
1747	98D32203503000	EXTRACTOR-NLG
1748	98D32203504000	TROLLEY, GROUND HANDLING NLG
1749	98D32303000000	ADAPTER, WRENCH-SOCKET SET NLG
1750	98D32303000201	ADAPTOR WRENCH



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1751	98D32403001000	ADAPTER BRAKE UNIT NUTadapter - brake unit nut
1752	98D32403007200	PROTECTOR
1753	98D341030002	ADM/STANBY SYS. PURGE
1754	98D34103002000	ADAPTER, FLUSHING, AIR DATA SYSTEM
1755	98D34103004001	PITOT PROBE CLEANER
1756	98D49207527	APU SUPPORT FRAME
1757	98D49207527000	SUPPORT FRAME FOR APU WITH TROLLEY
1758	98D52003003001	BARRIER-SAFETY PAX DOOR
1759	98D52003004001	BARRIER-SAFETY EMERGENCY DOOR
1760	98D52103006	PIN RIGGING
1761	98D52103006000	PIN RIGGING
1762	98D52103501	BLST WT PAX/CREW DOOR
1763	98D52103501000	BALLAST WEIGHT - PASSENGER CREW DOOR
1764	98D52207551000	PIN-SAFETY - SLIDE RELEASE LEVER
1765	98D52307515000	CARGO DOOR SAFETY ACTUATOR
1766	98D52307525	ADJUSTMENT TOOL DEAD CENTRE LOCKING MECHANISM CARGO DOORS
1767	98D52307525000	TOOL-ADJUSTMENT,CARGO DOORS
1768	98D53103500000	SLING-RADOME
1769	98D54403000000	DUMMY SHACKLES
1770	98D54403002000	SPIGOT BALL JOINT KIT
1771	98D54503000000	WRENCH STORAGE CHEST, PYLON REMOVAL
1772	98D55109010000	WRENCH THS GROVE NUT
1773	98D55209004	SLING TO LIFT ELEVATOR
1774	98D55209004000	SLING, REM.-INST.- ELEVATOR
1775	98D55209004171	COTTER PIN 2 X 14 DI
1776	98D55209004203	SPRING CLIP DIN 110
1777	98D56103001000	INSTALLATION TOOL-FRONT WINDOW PANELS
1778	98D561030002	WRENCH REMOVAL SLIDING WINDOW
1779	98D56103002000	WRENCH, REMOVAL - SLIDING WINDOW OF LUCAS AND PPG
1780	98D56103002001	WRENCH, REMOVAL - SLIDING WINDOW OF SPS
1781	98D56103002200	WRENCH,REMOVAL-SLIDING WINDOW
1782	98D56103002201	WRENCH,REMOVAL-SLIDING WINDOW
1783	98D56103002202	WRENCH
1784	98D56103003000	SPATULA-WEATHER SEAL
1785	98D57004013	CLAMP HOOK
1786	98D57004013000	HOOK-COVER (RIB 2 SURGE DOORS)
1787	98D57004013200	TOOL
1788	98D57004013202	TOOL
1789	98D57004013204	TOOL
1790	98D57004013206	TOOL
1791	98D57004013208	TOOL
1792	98D57004014	HOOK COVER (RIB 2 SURGE DOORS)
1793	98D57004014000	HOOK, COVER, RIB 2 SURGE DOORS
1794	98D57004017000	BUSH ETRACTOR
1795	98D57004018000	BUSH ETRACTOR SIDE STAY UPPER CARDAN
1796	98D57004027	SPANNER PYLON PICK UP
1797	98D57004027000	SPANNER PYLON PICK UP
1798	98D57004028	EXTRACTOR PYLON SLEEVE
1799	98D57004028000	EXTRACTOR - PYLON SLEEVE
1800	98D57004028001	EXTRACTOR-PYLON SLEEV
1801	98D57004028002	ROD EXTRACTOR
1802	98D57004028204	ADAPTOR
1803	98D57004028208	TOOL
1804	98D57004028210	COLLAR
1805	98D57004028212	STOP SCREW
1806	98D57004028214	EAR
1807	98D57004028216	EAR
1808	98D57004029	SPANNER PYLON SLEEVE
1809	98D57004029000	SPANNER
1810	98D57004037000	EXTRACTOR
1811	98D57004050000	SPANNER FLAP 2 AND 3 BEARING
1812	98D57004081	SPANNER -R/I BEARING
1813	98D57004081000	SPANNER -R/I BEARING
1814	98D57004096000	EXTRACTOR
1815	98D57004096001	EXTRACTOR
1816	98D71203001001	SPANNER -R/I BEARING
1817	98D71203002002	CHEST TORQUE SET NM - CFM56-5
1818	98D71203501001	BOOTSTRAP SYSTEM
1819	98DAMS172321002	ADAPTER-WRENCH
1820	98DNSA20206060	FLAP/SLAT LEVER PIN



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1821	98DNSA20208060	RIGGING PIN
1822	98F101035	CHOCK-MLG,ENGINE RUN-UP
1823	98F10103500000	CHOCK-MLG,ENGINE RUN-UP
1824	98F26208551	TROLLEY FOR EXTINGUISHER BOTTLES
1825	98F26208551000	TROLLEY-FIRE EXTINGUISHER BOTTLES
1826	98F26208551220	TUBE
1827	98F26208551222	TUBE
1828	98F26208551234	HOOK
1829	98F26208551238	RAILING
1830	98F27208312	PIN RIGGING BELL CRANK ASSY-ACTUATOR NO.1
1831	98F27208312000	PIN - RIGGING
1832	98F27508209	PIN SET - NEUTRAL SETTING
1833	98F27508209000	PIN SET - NEUTRAL SETTING
1834	98F27508209001	PIN SET - NEUTRAL SETTING
1835	98F27508209042	PIN SET FLAP
1836	98F27508209044	PIN - TRACK 2,3,4,5
1837	98F27508209046	RIGGING PIN
1838	98F27508209048	PIN
1839	98F27508209050	PIN ASSY.- TRACK 2,3
1840	98F27508209052	CHECK PIN ASSY.- TRA
1841	98F27508209200	PIN- TRACK 1
1842	98F27508209204	CHECK-PIN-TRACK 1
1843	98F27508209210	CHECK-PIN-TRACK 2,3,
1844	98F27508209214	CHECK-PIN-TRACK 4
1845	98F275082098000	FLAP CARRIAGE STOP TOOL
1846	98F27508498000	HOIST-R I,FLAP SLAT
1847	98F29208457000	PIN-SAFETY, RAT.
1848	98F32104008	HOIST EQUIP. ACTR MLG
1849	98F32104008000	HOIST EQUIP-ACTR MLG
1850	98F32104008001	HOIST EQPT - ACTUATOR, MLG (WITHOUT STD WINDING)
1851	98F32104013000	SAFETY COLLAR-DOOR MLG
1852	98F32304000	FALSE TARGET
1853	98F32304000000	FALSE TARGET NLG
1854	98F32401001000	WHEEL TOOL, REMOVAL/INSTALLATION
1855	98F52107520001	WRENCH-ACTUATOR EMERGENCY DOOR
1856	98F52308227002	STRUT - SUPPORT, CAR
1857	98F52308353	RIGGING PIN FWD CARGO DOOR BELLCRANK
1858	98F52308353000	PIN RIGGING-CARGO DOOR,BELLCRANK
1859	98F52308353200	LOCKING BOLT
1860	98F53103008	LOWOLLEYE SHELL T
1861	98F54003001	PYLON SHAFT EXTRACTOR RIB 12/ RIB 18
1862	98F71201000021	BOOTSTRAP SYSTEM
1863	98F71201001020	CHEST-TORQUE SET
1864	98F71201001024	TORQUE CHEST SET
1865	98F71201006030	BOOTSTRAP SYSTEM-A330 RR
1866	98F71201006032	BOOTSTRAP SYSTEM-A330 PW
1867	98F71201006034	BOOTSTRAP SYSTEM-A330 GE
1868	9970957139	N/A
1869	9970-957-139	TOOL SET
1870	9970-957-141	Tool Set, Assembly/Disassembly, Lubrication Unit
1871	9970-957-440	N/A
1872	99A57103029000	REFERENCE BLOCK
1873	99A57103030000	REFERENCE BLOCK
1874	99D57004005	HARPOON REMOVAL TOOL
1875	99D57004005000	TIE - HARPOON
1876	A07003	Jack Adaptor
1877	A07003-1	Jack Adaptor
1878	A07003-2	LOCK PIN NLG STEERING
1879	A07003-3	PIN
1880	A07003-4	FITTING
1881	A07003-5	SOCKET HEAD CAP SCREW
1882	A09003	LOCKPIN NOSE GEAR TOWING LEVER
1883	A09003-1	LOCK PIN, NOSE GEAR TOWING LEVER
1884	A09003-2	LOCK PIN, NOSE GEAR TOWING LEVER
1885	A11025	CRIMPING TOOL
1886	A11026	CRIMPING TOOL
1887	A12001	FUEL SAMPLING TOOL
1888	A12001-1	FUEL SAMPLING TOOL
1889	A12001-10	FUEL SAMPLING TOOL
1890	A12001-11	PROBE SUPPORT



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1891	A12001-12	FUEL SAMPLING TOOL
1892	A12001-13	FUEL SAMPLING KIT
1893	A12001-14	FUEL SAMPLING EQPT
1894	A12001-15	FUEL SAMPLING EQPT
1895	A12001-16	STORAGE BOX
1896	A12001-17	FUEL SAMPLING TOOL
1897	A12001-18	HANDLE & HOSE ASSY
1898	A12001-19	PROBE ASSY
1899	A12001-2	FUEL SAMPLING TOOL
1900	A12001-20	PROBE ROD
1901	A12001-21	FUEL DRAIN TOOL
1902	A12001-22	PROBE WELDMENT
1903	A12001-23	PROBE ROD
1904	A12001-24	PLACARD
1905	A12001-3	HOSE
1906	A12001-4	HANDLE
1907	A12001-5	Probe Assy
1908	A12001-6	Probe
1909	A12001-7	TUBE
1910	A12001-8	Beaker Assy
1911	A12001-9	BEAKER
1912	A20004	RIG PIN
1913	A20004-1	RIG PIN
1914	A20004-10	RIGGING PIN
1915	A20004-11	Rigging pin assy
1916	A20004-12	Rigging pin assy
1917	A20004-13	Rigging pin assy
1918	A20004-14	RIG PIN 767
1919	A20004-15	RIG PIN 767
1920	A20004-16	RIGGING PIN
1921	A20004-17	RIGGING PIN
1922	A20004-18	RIGGING PIN
1923	A20004-19	RIGGING PIN
1924	A20004-2	SET RIG PIN
1925	A20004-20	Rigging pin assy
1926	A20004-21	RIGGING PIN
1927	A20004-22	Gigging pin assy
1928	A20004-23	RIGGING PIN
1929	A20004-24	Rigging pin assy
1930	A20004-25	RIGGING PIN
1931	A20004-26	RIGGING PIN
1932	A20004-27	RIGGING PIN
1933	A20004-28	Pin
1934	A20004-29	Pin
1935	A20004-3	RIGGING TOOLS
1936	A20004-30	Pin
1937	A20004-31	Pin
1938	A20004-32	RIGGING PIN
1939	A20004-33	Pin
1940	A20004-34	Pin
1941	A20004-35	Pin
1942	A20004-36	PIN
1943	A20004-37	Pin
1944	A20004-38	Pin
1945	A20004-39	Pin
1946	A20004-4	RIGGING PIN
1947	A20004-40	Pin
1948	A20004-41	Pin
1949	A20004-42	Pin
1950	A20004-43	Pin
1951	A20004-44	Pin
1952	A20004-45	Pin
1953	A20004-46	Pin
1954	A20004-47	Pin
1955	A20004-48	Pin
1956	A20004-49	Pin
1957	A20004-5	RIGGING PIN
1958	A20004-50	Pin
1959	A20004-51	Pin
1960	A20004-52	RIGGING PIN ASSY



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
1961	A20004-53	Plate
1962	A20004-54	Cap Screw
1963	A20004-55	Placard
1964	A20004-56	Rig Stop
1965	A20004-57	Pin
1966	A20004-58	Rig stop assy
1967	A20004-59	RIGGING PIN
1968	A20004-6	RIG PIN 767
1969	A20004-60	RIGGING PIN
1970	A20004-61	RIGGING PIN
1971	A20004-62	RIGGING PIN
1972	A20004-63	RIGGING PIN
1973	A20004-64	RIGGING PIN
1974	A20004-65	RIGGING PIN
1975	A20004-66	RIGGING PIN
1976	A20004-67	RIGGING PIN
1977	A20004-68	SET RIG PIN
1978	A20004-69	Placard
1979	A20004-7	RIGGING PIN
1980	A20004-70	RIGGING PIN
1981	A20004-71	RIGGING PIN
1982	A20004-72	SET RIG PIN
1983	A20004-73	RIGGING PIN
1984	A20004-74	RIGGING PIN
1985	A20004-75	Placard
1986	A20004-76	SET RIG PIN
1987	A20004-77	Placard
1988	A20004-78	SET RIG PIN
1989	A20004-79	Placard
1990	A20004-8	RIGGING PIN
1991	A20004-9	RIGGING PIN
1992	A20005	CLAMP CONTROL CABLE
1993	A20005-1	Boeing
1994	A20005-10	CLAMP CABLE
1995	A20005-11	Clamp Housing
1996	A20005-5	CABLE CLAMP
1997	A20005-7	Clamp Body
1998	A20005-8	Box Assy
1999	A20005-9	Clamp - Control Cable
2000	A21001	ADAPTER, HOIST, AIRCONDITIONING PACK
2001	A21001-1	ADAPTER, HOIST, AIRCONDITIONING PACK
2002	A21001-10	ADAPTER, HOIST, AIRCONDITIONING PACK
2003	A21001-11	ADAPTER, HOIST, AIRCONDITIONING PACK
2004	A21001-12	ADAPTER, HOIST, AIRCONDITIONING PACK
2005	A21001-13	ADAPTER, HOIST, AIRCONDITIONING PACK
2006	A21001-14	ADAPTER, HOIST, AIRCONDITIONING PACK
2007	A21001-15	ADAPTER, HOIST, AIRCONDITIONING PACK
2008	A21001-16	ADAPTER, HOIST, AIRCONDITIONING PACK
2009	A21001-17	ADAPTER, HOIST, AIRCONDITIONING PACK
2010	A21001-18	ADAPTER, HOIST, AIRCONDITIONING PACK
2011	A21001-19	ADAPTER, HOIST, AIRCONDITIONING PACK
2012	A21001-2	ADAPTER, HOIST, AIRCONDITIONING PACK
2013	A21001-20	ADAPTER, HOIST, AIRCONDITIONING PACK
2014	A21001-21	ADAPTER, HOIST, AIRCONDITIONING PACK
2015	A21001-22	ADAPTER, HOIST, AIRCONDITIONING PACK
2016	A21001-23	ADAPTER, HOIST, AIRCONDITIONING PACK
2017	A21001-24	ADAPTER, HOIST, AIRCONDITIONING PACK
2018	A21001-25	ADAPTER, HOIST, AIRCONDITIONING PACK
2019	A21001-26	ADAPTER, HOIST, AIRCONDITIONING PACK
2020	A21001-27	ADAPTER, HOIST, AIRCONDITIONING PACK
2021	A21001-28	ADAPTER, HOIST, AIRCONDITIONING PACK
2022	A21001-29	ADAPTER, HOIST, AIRCONDITIONING PACK
2023	A21001-3	ADAPTER, HOIST, AIRCONDITIONING PACK
2024	A21001-30	ADAPTER, HOIST, AIRCONDITIONING PACK
2025	A21001-31	ADAPTER, HOIST, AIRCONDITIONING PACK
2026	A21001-32	ADAPTER, HOIST, AIRCONDITIONING PACK
2027	A21001-33	ADAPTER, HOIST, AIRCONDITIONING PACK
2028	A21001-34	ADAPTER, HOIST, AIRCONDITIONING PACK
2029	A21001-35	ADAPTER, HOIST, AIRCONDITIONING PACK
2030	A21001-36	ADAPTER, HOIST, AIRCONDITIONING PACK



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2031	A21001-37	ADAPTER, HOIST, AIRCONDITIONING PACK
2032	A21001-38	ADAPTER, HOIST, AIRCONDITIONING PACK
2033	A21001-39	ADAPTER, HOIST, AIRCONDITIONING PACK
2034	A21001-4	ADAPTER, HOIST, AIRCONDITIONING PACK
2035	A21001-40	ADAPTER, HOIST, AIRCONDITIONING PACK
2036	A21001-41	ADAPTER, HOIST, AIRCONDITIONING PACK
2037	A21001-42	ADAPTER, HOIST, AIRCONDITIONING PACK
2038	A21001-43	ADAPTER, HOIST, AIRCONDITIONING PACK
2039	A21001-44	ADAPTER, HOIST, AIRCONDITIONING PACK
2040	A21001-45	ADAPTER, HOIST, AIRCONDITIONING PACK
2041	A21001-46	ADAPTER, HOIST, AIRCONDITIONING PACK
2042	A21001-47	ADAPTER, HOIST, AIRCONDITIONING PACK
2043	A21001-5	ADAPTER, HOIST, AIRCONDITIONING PACK
2044	A21001-6	ADAPTER, HOIST, AIRCONDITIONING PACK
2045	A21001-7	SUPPORT
2046	A21001-8	SUPPORT
2047	A21001-9	BASE
2048	A25020	INSPECTION. SEAT TRACK, FLIGHT CREW
2049	A25020-1	Gauge - Inspection, Seat Track, Flight Crew
2050	A25020-2	NUTPLATE
2051	A25020-4	Gauge - Inspection, Seat Track, Flight Crew
2052	A25020-5	IPECO SEAT TRACK GAUGE
2053	A25020-6	Storage Box Assy
2054	A25020-8	Gauge - Inspection, Seat Track, Flight Crew
2055	A25020-9	WEBER SEAT TRACK GAUGE
2056	A26003	TEST EQUIP. - REGULATOR, CARGO FIRE EXTINGUISH
2057	A26003-1	TOOL
2058	A26003-10	CARGO FIRE TEST EQPT TOOL
2059	A26003-11	CARGO FIRE TEST EQPT TOOL
2060	A26003-4	TUBE 304 1/4 OD X .0
2061	A26003-5	TEST EQPT - REGULATOR, CARGO FIRE EXTINGUISHING
2062	A26003-7	CARGO FIRE TEST EQPT TOOL
2063	A26003-8	CARGO FIRE TEST EQPT TOOL
2064	A27001	QUADRANT ASSY RUDDER
2065	A27001-1	GAUGE RUDDER
2066	A27001-10	THREADED ROD
2067	A27001-11	KNURLED NUT
2068	A27001-12	KNURLED NUT
2069	A27001-13	BOLT
2070	A27001-14	NUT
2071	A27001-15	BOLT
2072	A27001-16	NUT
2073	A27001-17	BOLT
2074	A27001-18	NUT
2075	A27001-19	BOLT
2076	A27001-2	Gages-inbd aileron, rudder, outbd aileron, elevator, PCA'S
2077	A27001-20	NUT
2078	A27001-21	GAGE BAR
2079	A27001-22	GAGE BAR
2080	A27001-23	GAGE BAR
2081	A27001-24	GAGE BAR
2082	A27001-25	GAGE BAR
2083	A27001-26	GAGE BAR
2084	A27001-27	BAR
2085	A27001-28	PLATE
2086	A27001-29	BAR
2087	A27001-3	ELEVATOR GAGE
2088	A27001-30	PLATE
2089	A27001-31	BAR
2090	A27001-32	PLATE
2091	A27001-4	GAUGE
2092	A27001-5	GAUGE
2093	A27001-6	GAUGE
2094	A27001-7	GAUGE
2095	A27001-8	GAUGE
2096	A27001-9	THREADED ROD
2097	A27003	LOCK SET, RUDDER ACTUATOR (ACT. CHANGE)
2098	A27003-23	LOCK SET - ACTUATOR RUDDER
2099	A27003-28	RUDDER LOCK
2100	A27003-6	LUG



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2101	A27003-7	LUG
2102	A27003-8	LUG
2103	A27003-9	LUG
2104	A27007	GROUND LOCK
2105	A27007-1	PIN LOCK SLAT
2106	A27007-10	Ball lock pin
2107	A27007-12	GROUND LOCK
2108	A27007-13	PLUG
2109	A27007-19	GROUND LOCK-LEADING EDGE SLATS
2110	A27007-23	TOOL
2111	A27007-7	Boss
2112	A27009-7	LOCK SET THE FLAPS
2113	A27017	SLING EQPT - LEADING
2114	A27017-1	SLING
2115	A27017-10	Cable Assy
2116	A27017-11	ARM
2117	A27017-12	ARM
2118	A27017-13	ARM
2119	A27017-14	ATTACH BRACKET
2120	A27017-15	Clip Assy
2121	A27017-19	Strap Assy
2122	A27017-21	TOOL
2123	A27017-3	Arm Assy - Outbd Slat
2124	A27017-31	EYE
2125	A27017-34	CLIP
2126	A27017-36	ATTACH BRACKET
2127	A27017-37	Cable Assy
2128	A27017-4	Arm Assy - Inbd Slat
2129	A27017-41	SLING
2130	A27017-42	Spreader Bar Assy
2131	A27017-43	STRAP
2132	A27017-5	Arm Assy - Inbd Slat
2133	A27017-6	BELT ASSY
2134	A27017-8	BAR
2135	A27017-9	Cabe Assy
2136	A27022	SLING EQPT – RUDDER INSTL/REMOVAL
2137	A27022-1	TOOL
2138	A27022-11	STEPPED PIN
2139	A27022-13	BASE PLATE
2140	A27022-14	Rope assy
2141	A27022-23	LOCK PIN BLOCK
2142	A27022-3	FITTING ASSY
2143	A27022-34	TOOL
2144	A27022-44	TOOL
2145	A27022-51	BLOCK
2146	A27022-67	Cable Assy
2147	A27022-68	Cable Assy
2148	A27022-75	SLING EQPT -RUDDER. REMOVAL/INSTALLATION (CE)
2149	A27022-81	SLING EQPT
2150	A27022-82	RUDDER LOAD POSITIONER - REMOVAL/INSTL'N
2151	A27022-9	BLOCK PLATE
2152	A27056	SLING EQPT – LEADING EDGE SLAT, REMOVAL AND INSTALLATION
2153	A27056-1	RIG BAR RUD RAT CHANGE
2154	A27056-2	RIG BAR-RUDDER RATIO CHANGER
2155	A27092	ACTUATOR/DEACTUATOR SET PROXIMITY SENSORS
2156	A27092-1	Boeing
2157	A27092-100	Actuator
2158	A27092-101	Deactuator
2159	A27092-102	Clip
2160	A27092-103	Actuator
2161	A27092-106	Actuator/Deactuator Set - Proximity Sensors
2162	A27092-107	Storage Box Assy
2163	A27092-108	Tape Double Sided
2164	A27092-11	Warning Streamer
2165	A27092-110	ACTUATOR / DEACTUATOR SET
2166	A27092-111	Deactuator Assy
2167	A27092-112	Actuator assy
2168	A27092-113	Deactuator Assy
2169	A27092-114	Deactuator
2170	A27092-115	Deactuator



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2171	A27092-116	Storage Box Assy
2172	A27092-117	Placard
2173	A27092-118	Placard
2174	A27092-119	Clip
2175	A27092-12	ACTUATOR/DEACTUATOR
2176	A27092-120	Tape Double Sided
2177	A27092-132	ACTUATOR/DEACTUATOR
2178	A27092-133	ACTUATOR ASSY
2179	A27092-139	ACTUATOR/DEACTUATOR SET-PROXIMITY SENSORS
2180	A27092-16	POSITION BLOCK
2181	A27092-18	Position Block
2182	A27092-2	ACTUATOR/DEACTUATOR NG
2183	A27092-20	Storage Box Assy
2184	A27092-25	ACTUATOR
2185	A27092-26	ACTUATOR
2186	A27092-27	ACTUATOR
2187	A27092-29	ACTUATOR
2188	A27092-31	ACTUATOR (4EA) - 3 SETS OF 4 EA = 12 EA REQUIRED
2189	A27092-32	Deactuator assy
2190	A27092-33	Actuator Assembly
2191	A27092-34	Deactuator assy
2192	A27092-35	Actuator Assy
2193	A27092-37	Actuator Assy
2194	A27092-39	Actuator Assy
2195	A27092-40	Deactuator Assy
2196	A27092-41	Actuator Assy
2197	A27092-42	Deactuator Assy
2198	A27092-43	Actuator Plate
2199	A27092-44	Actuator Block
2200	A27092-45	Clip
2201	A27092-46	Deactuator Block
2202	A27092-48	Actuator Block
2203	A27092-49	Clip
2204	A27092-5	SPACER - SLAT RIG
2205	A27092-50	Deactuator Block
2206	A27092-53	Boeing
2207	A27092-54	ACTUATOR ASSY
2208	A27092-61	SUPERSEDED BY -84
2209	A27092-62	DEACTUATOR
2210	A27092-63	Deactuator assy
2211	A27092-64	ACTUATOR
2212	A27092-65	Deactuator Plate
2213	A27092-66	Deactuator Assy
2214	A27092-67	Deactuator Assy
2215	A27092-70	ACTUATOR / DEACTUATOR SET - PROXIMITY SENSORS
2216	A27092-71	Actuator assy
2217	A27092-72	Deactuator Assemblies
2218	A27092-73	ACTUATOR ASSEMBLIES
2219	A27092-74	Deactuator Assemblies
2220	A27092-75	Storage Box Assy
2221	A27092-76	Actuator Plate
2222	A27092-77	Deactuator Plate
2223	A27092-78	Cord
2224	A27092-79	Clip
2225	A27092-8	POSITION BLOCK
2226	A27092-80	Actuator Plate
2227	A27092-81	CLIP
2228	A27092-82	Deactuator Plate
2229	A27092-83	Placard
2230	A27092-84	Actuator/Deactuator Set - Proximity Sensors
2231	A27092-85	PROXIMITY, SENSOR, FOR ACTUATOR/DEACTUATOR SET.
2232	A27092-86	Actuator Assy
2233	A27092-87	Clip
2234	A27092-88	PLACARD
2235	A27092-89	TOOL
2236	A27092-90	Placard
2237	A27092-91	Placard
2238	A27092-92	Tape Double Sided
2239	A27092-93	Actuator/De-Actuator Tester - Proximity Sensor
2240	A27092-94	Actuator assy





## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2241	A27092-95	Deactuator Assy
2242	A27092-96	ACTUATOR ASSY
2243	A27092-97	DEACTUATOR ASSY
2244	A27092-99	Clip
2245	A27125-17	MEASUREMENT TOOL-RUDDER AND ELEVATOR POWER CONTROL
2246	A27127	SLING EQPT – RUDDER INSTL/REMOVAL
2247	A27127-1	CHANGING FIXTURE - INPUT ROD ASSY, ELEVATOR PCU
2248	A27127-29	CHANGING FIXTURE-INPUT ROD ASSY
2249	A28008-1	DRAIN HOSE - SUMP VALVE - CENTER AUXILIARY FUEL TANKS
2250	A28008-10	Storage Box Assy
2251	A28008-11	Usage Placard
2252	A28008-2	TOOL
2253	A28008-3	Storage Box Assy
2254	A28008-4	Adapter
2255	A28008-5	Gasket
2256	A28008-6	Hose
2257	A28008-7	Usage Placard
2258	A28008-8	DRAIN HOSE - SUMP VALVE
2259	A28008-9	DRAIN HOSE - SUMP VALVE
2260	A29002	LOCKING PIN VALVE HYD RES. PRESSURIZATION
2261	A29002-1	LOCKING PIN
2262	A29002-2	B767 RESERVOIR LOCK PIN TOOL
2263	A29002-3	BLOCK
2264	A29002-4	PIN
2265	A29002-6	LOCKING PIN - HYDRAULIC RESERVOIR PRESSURIZATION VALVE
2266	A32003	SPRING COMPRESSOR – SIDE STRUT, MLG
2267	A32003-1	MLG DRAG STRUT SPRING
2268	A32003-11	FITTING
2269	A32003-12	FITTING
2270	A32003-2	COMPRESS TOOL
2271	A32003-20	SCREW
2272	A32003-3	COLUMN
2273	A32003-4	SCREW
2274	A32003-5	FITTING -0 WELDMENT
2275	A32003-6	FITTING -0 WELDMENT
2276	A32003-7	COMPRESS TOOL
2277	A32003-9	COLLAR
2278	A32005	REPLACEMENT EQUIP – SEAL, LOWER BEARING MLG
2279	A32005-1	TOOL
2280	A32005-12	RAM CLAMP ASSY
2281	A32005-13	SLIDE HAMMER ASSY
2282	A32005-14	TEST BOX NOISE - WEU
2283	A32005-15	CLAMP HALF ASSY
2284	A32005-16	LINK
2285	A32005-17	TUBE HALF
2286	A32005-18	CLEVIS PLATE
2287	A32005-19	RAM PLATE
2288	A32005-20	Ram Plate
2289	A32005-21	Gusset
2290	A32005-22	Latch Block
2291	A32005-23	Boss
2292	A32005-26	TOOL
2293	A32005-27	Hammer Assy
2294	A32005-29	Clamp Assy
2295	A32005-30	Hose Clamp
2296	A32005-31	Band
2297	A32005-34	Guide Half
2298	A32005-38	Protective Cover
2299	A32005-39	GUIDE HALF ASSY
2300	A32005-40	Guide Half
2301	A32005-43	REP EQ
2302	A32005-45	STRAP
2303	A32005-46	Bracket
2304	A32005-47	HAND KNOB ASSY
2305	A32005-48	CLAMP
2306	A32005-49	Ring Half
2307	A32005-50	Ring Half
2308	A32005-51	PAD
2309	A32005-52	Usage Placard
2310	A32005-53	MLG SEAL REPLACEMENT EQUIPT.



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2311	A32005-54	REPLACEMENT EQPT-
2312	A32005-55	Clamp Half Assy
2313	A32005-56	Clamp Half Assy
2314	A32005-57	Storage Box
2315	A32005-58	Identification Tag
2316	A32005-59	Swing bolt
2317	A32005-60	Hand knob
2318	A32005-61	Spring Pin
2319	A32005-62	Spring Pin
2320	A32005-63	Self - Locking Nut
2321	A32005-64	Threaded Insert
2322	A32005-65	Thumb Screw
2323	A32005-66	Washer
2324	A32005-67	Strap Assy
2325	A32005-68	Bolt
2326	A32005-69	Botl
2327	A32005-70	Spring Pin
2328	A32005-71	Nut
2329	A32005-72	Bolt
2330	A32005-73	Screw
2331	A32005-74	REPLACEMENT EQPT SEAL - LOWER BEARING SEAL
2332	A32005-75	Guide Half Assy
2333	A32005-76	Storage Box Assy
2334	A32005-77	Guide Half
2335	A32005-78	Storage Box
2336	A32005-79	Identification Tag
2337	A32005-80	Guide Half Assy
2338	A32005-81	Protective Cover
2339	A32005-9	Hinge Block
2340	A32012	WRENCH-MLG WHEEL RETAINING NUT
2341	A32012-1	Wrench
2342	A32012-10	Socket
2343	A32012-11	Bar
2344	A32012-12	Wrench -Wheel Retaining Nut. Main Landing Gear (Mlg)
2345	A32012-13	WRENCH
2346	A32012-131	B767 MLG SOCKET TOOL
2347	A32012-14	Bar
2348	A32012-40	PUMP EQPT
2349	A32012-6	Wrench -Wheel Retaining Nut. MLG
2350	A32012-7	Socket
2351	A32012-8	Bar
2352	A32012-9	Wrench -Wheel Retaining Nut. MLG
2353	A32015-1	Boeing
2354	A32015-10	Opp 3
2355	A32015-16	Boeing
2356	A32015-17	PULLER
2357	A32015-2	Extension Assembly
2358	A32015-3	Side Plate
2359	A32015-4	Lever
2360	A32015-5	Link
2361	A32015-6	Trigger
2362	A32015-7	Lug
2363	A32015-8	TUBE
2364	A32015-9	REMOVAL/INSTL TOOL - MLG AND NLG DOWNLOCK
2365	A32017	PULLER EQPT – FUSE BOLTS, FWD TRUNNION SUPPORT, MLG
2366	A32017-1	PULLER
2367	A32017-2	TOOL
2368	A32020	HOIST ADAPTER – DRAG STRUT, NLG
2369	A32020-1	Hoist adapter-drag strut. NLG
2370	A32020-26	RETAINER NLG
2371	A32022-1	PROTECTOR AXLE NLG
2372	A32022-2	SLEEVE
2373	A32022-5	NUT
2374	A32025-1	ADAPTER - WRENCH, WHEEL RETAINING NUT, NLG
2375	A32025-3	NOSE WHEEL WRENCH ADAPT.
2376	A32026	REMOVAL/INSTALLATION EQPT – TURNNION PIN, MLG
2377	A32026-1	REM/INST EQUPT MLG
2378	A32026-2	EQUIP.MLG-TRUNNION PIN
2379	A32026-260	THIS IS NOT A TOOL
2380	A32026-33	Puller assy



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2381	A32026-34	Hammer Assembly
2382	A32026-35	TOOL
2383	A32026-36	INNER PULLER
2384	A32026-37	OUTER PULLER
2385	A32026-39	Roday
2386	A32026-44	SPLINE WRENCH
2387	A32026-48	PAD
2388	A32026-49	WRENCH
2389	A32026-50	CROSSBOLT ALIGNMENT PIN
2390	A32026-53	STOP ASSY *A32026-53*
2391	A32026-57	HOIST EQPT, NLG
2392	A32026-58	PIN
2393	A32026-60	MLG TRUNNION PIN REM/INST
2394	A32027	PUMP RETRACTION EXTENSION LANDING GEAR ACTUATOR
2395	A32027-1	RETRACTION/EXTR MLG ACTR PUMP
2396	A32027-100	Vertical Panel
2397	A32027-101	Side Angle
2398	A32027-102	Center Angle
2399	A32027-103	Cap Screw
2400	A32027-104	Lock Nut
2401	A32027-105	Cap Screw
2402	A32027-106	Lock Nut
2403	A32027-107	Cap Screw
2404	A32027-108	Cover Plate
2405	A32027-109	Gasket
2406	A32027-11	Marker
2407	A32027-110	Cap Screw
2408	A32027-111	Pipe
2409	A32027-112	Cap
2410	A32027-113	Base
2411	A32027-114	Leg
2412	A32027-115	Foot Plate
2413	A32027-116	Top Support Bar
2414	A32027-117	Pipe
2415	A32027-118	Pipe
2416	A32027-119	Pipe Joint
2417	A32027-12	Marker
2418	A32027-120	Pipe
2419	A32027-121	Handle
2420	A32027-122	Base Plate
2421	A32027-123	Pipe
2422	A32027-124	Base Plate
2423	A32027-125	Cover
2424	A32027-126	Cap Screw
2425	A32027-129	Cap Screw
2426	A32027-13	Marker
2427	A32027-130	Lock Washer
2428	A32027-132	Washer
2429	A32027-133	Cap Screw
2430	A32027-134	Spacer
2431	A32027-135	Lock Nut
2432	A32027-136	Washer
2433	A32027-137	Marker
2434	A32027-138	Marker
2435	A32027-14	Placard Cover
2436	A32027-140	Placard Cover
2437	A32027-141	Placard Cover
2438	A32027-142	Placard Cover
2439	A32027-143	Placard Cover
2440	A32027-144	Placard Cover
2441	A32027-145	Placard Cover
2442	A32027-146	ADAPTER ASSY
2443	A32027-147	ADAPTER ASSY
2444	A32027-148	Adapter assy
2445	A32027-149	Adapter assy
2446	A32027-15	Placard Cover
2447	A32027-150	ADAPTER ASSY
2448	A32027-151	ADAPTER ASSY
2449	A32027-152	PUMP
2450	A32027-153	Pump



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2451	A32027-154	Base
2452	A32027-155	PART
2453	A32027-156	PART
2454	A32027-157	Placard
2455	A32027-158	Placard
2456	A32027-161	Placard
2457	A32027-162	Placard Cover
2458	A32027-163	Placard Cover
2459	A32027-164	Marker
2460	A32027-165	PUMP RETRACTION/EXTENSION
2461	A32027-166	PUMP RETRACTION/EXTENSION
2462	A32027-167	Base Plate
2463	A32027-168	ADAPTER ASSY
2464	A32027-169	Marker
2465	A32027-172	Opp 95
2466	A32027-173	Base Plate
2467	A32027-174	PUMP - RETRACTION/EXTENSION, LANDING GEAR ACTUATOR
2468	A32027-175	PUMP - RETRACTION/EXTENSION, LANDING GEAR ACTUATOR
2469	A32027-176	PUMP - RETRACTION/EXTENSION, LANDING GEAR ACTUATOR
2470	A32027-177	PUMP - RETRACTION/EXTENSION, LANDING GEAR ACTUATOR
2471	A32027-178	PUMP - RETRACTION/EXTENSION, LANDING GEAR ACTUATOR
2472	A32027-179	ADAPTER ASSY
2473	A32027-18	SIDE MEMBER
2474	A32027-180	ADAPTER ASSY
2475	A32027-181	ADAPTER ASSY
2476	A32027-182	ADAPTER ASSY
2477	A32027-183	Placard
2478	A32027-184	Placard
2479	A32027-185	Placard
2480	A32027-186	Placard
2481	A32027-187	Placard
2482	A32027-19	Opp 18
2483	A32027-2	Stand Assy
2484	A32027-20	Front Plate
2485	A32027-21	Brace
2486	A32027-22	Drip Tray
2487	A32027-23	Handle
2488	A32027-24	Arm
2489	A32027-26	Plug
2490	A32027-27	Cap
2491	A32027-28	Foot Plate
2492	A32027-29	Boss
2493	A32027-31	Handle
2494	A32027-32	Weld Assy
2495	A32027-36	ADAPTER ASSY
2496	A32027-37	ADAPTER ASSY
2497	A32027-38	ADAPTER ASSY
2498	A32027-40	Placard Cover
2499	A32027-41	Placard Cover
2500	A32027-46	ADAPTER ASSY
2501	A32027-48	MLG
2502	A32027-49	Placard
2503	A32027-5	Foot Pad
2504	A32027-50	Placard
2505	A32027-51	Placard
2506	A32027-52	Placard
2507	A32027-53	PUMP - RETRACTION/EXTENSION, LANDING GEAR ACTUATOR
2508	A32027-54	Reservoir Assy
2509	A32027-55	DIPSTICK
2510	A32027-56	Cylinder
2511	A32027-57	Stick
2512	A32027-58	PUMP-RET/EXT, LANDING GEAR ACTUATOR
2513	A32027-59	PUMP MLG ACT. RETRACT/EXT.
2514	A32027-6	Hydraulic Tubing
2515	A32027-7	Marker Cover
2516	A32027-73	Placard
2517	A32027-74	Placard
2518	A32027-81	Marker
2519	A32027-82	Marker
2520	A32027-85	Marker



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2521	A32027-86	Marker
2522	A32027-87	Marker
2523	A32027-88	Marker
2524	A32027-89	PUMP
2525	A32027-90	Pump
2526	A32027-91	Tank Assy
2527	A32027-92	Tank Assy
2528	A32027-93	Hose Hanger Assy
2529	A32027-94	Handle Assy
2530	A32027-95	Foot Assy
2531	A32027-99	Base Plate
2532	A32028	RETENTION STRAP – INNER CYLINDER – MLG & NLG
2533	A32028-1	LOCK PIN EQPT.
2534	A32028-3	OLEO COMPRESSION STRAP
2535	A32028-5	BUCKLE
2536	A32028-6	STRAP
2537	A32036	HOIST EQPT – NLG, INSTALLATION & REMOVAL
2538	A32036-1	TOOL
2539	A32036-100	HOIST EQPT - NLG INSTALLATION & REMOVAL
2540	A32036-11	PIN -0 WELDMENT
2541	A32036-12	PIN -0 WELDMENT
2542	A32036-13	PIN -0 WELDMENT
2543	A32036-14	HANDLE
2544	A32036-2	R/I KIT - MLG TRUNNI
2545	A32036-30	BEVELED WASHER
2546	A32036-31	TOOL
2547	A32036-36	TOOL
2548	A32036-41	WEBBING
2549	A32036-43	SLING
2550	A32036-45	POST -0 WELDMENT
2551	A32036-51	HOIST
2552	A32036-52	BEAM ASSY, B767 N.L.G.
2553	A32036-53	Belt Assembly
2554	A32036-55	POST ASSY
2555	A32036-56	TRACK ASSY BEAM
2556	A32036-57	HOIST
2557	A32036-63	BEAM -0 WELDMENT
2558	A32036-66	SLING EQPT
2559	A32036-67	HOIST EQPT - NLG, INSTALLATION & REMOVAL
2560	A32036-85	Belt assy
2561	A32045	SET WRENCHES SPANNER B767 KIT
2562	A32045-1	Wrench assy-hook spanner
2563	A32045-10	Wrench
2564	A32045-100	WRENCHES - SPANNER
2565	A32045-101	WRENCHES - SPANNER
2566	A32045-102	Spanner Wrench
2567	A32045-103	WRENCH-SPANNER
2568	A32045-104	Tube
2569	A32045-105	WRENCH -AXLE NUT, NLG
2570	A32045-106	Boeing
2571	A32045-107	Liner
2572	A32045-108	SNUBBING VALVE OPERATOR
2573	A32045-109	Spanner wrench
2574	A32045-11	Wrench
2575	A32045-110	WRENCHES - SPANNER
2576	A32045-111	SPANNER WRENCH
2577	A32045-112	WRENCHES - SPANNER
2578	A32045-113	Plate
2579	A32045-114	WRENCHES - SPANNER
2580	A32045-115	Axle Nut Wrench
2581	A32045-12	WRENCH
2582	A32045-16	MLG GLAND NUT WRENCH ADAPTOR
2583	A32045-17	WRENCH
2584	A32045-18	Boss
2585	A32045-19	WRENCHES - SPANNER
2586	A32045-2	Wrench assy-hook spanner
2587	A32045-20	WRENCHES - SPANNER
2588	A32045-21	Wrench Spanner
2589	A32045-22	WRENCH
2590	A32045-23	WRENCHES - SPANNER



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2591	A32045-24	WRENCH - SPANNER
2592	A32045-25	WRENCH - SPANNER
2593	A32045-26	Stationary Arm
2594	A32045-27	Movable Arm
2595	A32045-28	Pivot Pin
2596	A32045-29	Holding Pin
2597	A32045-3	Wrench-spanner
2598	A32045-31	Movable Arm
2599	A32045-32	NUT ADAPTOR
2600	A32045-33	MLG GLAND NUT WRENCH ADAPTOR
2601	A32045-34	WRENCH
2602	A32045-35	Tube
2603	A32045-36	Plate
2604	A32045-37	WRENCHES - SPANNER
2605	A32045-38	WRENCHES - SPANNER
2606	A32045-39	Wrench Spanner
2607	A32045-4	Boss
2608	A32045-40	Wrench
2609	A32045-45	WRENCHES - SPANNER
2610	A32045-46	Wrench
2611	A32045-47	TOOL
2612	A32045-48	Wrench assy
2613	A32045-49	Plate
2614	A32045-5	Wrench
2615	A32045-50	Boeing
2616	A32045-51	Wrench
2617	A32045-52	Boss
2618	A32045-53	Wrenches -Spanner
2619	A32045-54	WRENCHES - SPANNER
2620	A32045-55	Wrench
2621	A32045-56	Boss
2622	A32045-57	Wrench assy
2623	A32045-58	Wrench assy
2624	A32045-59	Wrench
2625	A32045-6	Wrench
2626	A32045-60	Wrench
2627	A32045-61	Stationary Arm
2628	A32045-62	WRENCHES - SPANNER
2629	A32045-63	Wrench Spanner
2630	A32045-64	WRENCHES - SPANNER
2631	A32045-65	Wrench assy
2632	A32045-66	Wrench assy
2633	A32045-67	Wrench Spanner
2634	A32045-68	Wrench Spanner
2635	A32045-69	Boeing
2636	A32045-7	WRENCH
2637	A32045-70	Wrench assy
2638	A32045-71	Wrench Spanner
2639	A32045-72	Pivot Pin
2640	A32045-73	Pivot Pin
2641	A32045-74	Pivot Pin
2642	A32045-75	Wrenches -Spanner
2643	A32045-76	Wrench assy
2644	A32045-77	Wrench-spanner
2645	A32045-78	INDIVIDUAL WRENCH
2646	A32045-79	Wrenches -Spanner
2647	A32045-8	Wrenches -Spanner
2648	A32045-80	WRENCHES
2649	A32045-82	Wrench Spanner
2650	A32045-83	WRENCHES - SPANNER
2651	A32045-84	Wrench Spanner
2652	A32045-85	WRENCHES - SPANNER
2653	A32045-86	Wrench Spanner
2654	A32045-87	Wrench
2655	A32045-88	SPANNER WRENCH
2656	A32045-89	Plate
2657	A32045-9	Boss
2658	A32045-90	WRENCHES - SPANNER
2659	A32045-91	WRENCHES - SPANNER
2660	A32045-92	WRENCHES - SPANNER



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2661	A32045-93	WRENCHES - SPANNER
2662	A32045-94	WRENCHES - SPANNER
2663	A32045-95	Boeing
2664	A32045-96	WRENCH
2665	A32045-99	TOOL
2666	A32067	WRENCH - AXLE NUT, NLG
2667	A32067-1	BUSHING PULLER SET
2668	A32067-11	Puller eqpt-bushing, MLG bogie beam
2669	A32067-13	Puller eqpt-bushing, MLG bogie beam
2670	A32067-14	END/MID ADAPTER PLATE
2671	A32067-16	CLAMP ASSEMBLY
2672	A32067-2	PULLER ASSY
2673	A32067-24	PULLER EQPT - BUSHING, MLG BOGIE BEAM
2674	A32067-25	SLUG
2675	A32067-6	SLIDE HAMMER
2676	A32080	BRAKE DISCONNECT - FLIGHT DISPATCH
2677	A32080-1	BRAKE DISCONNECT - FLIGHT DISPATCH
2678	A32080-14	BRAKE DISCONNECT
2679	A32080-4	CONNECTOR
2680	A32080-7	Bag
2681	A32097-1	PROTECTIVE EQPT - AXLE AND AXLE THREAD PROTECTOR
2682	A32097-10	Placard
2683	A32097-2	THREAD PROTECTOR
2684	A32097-3	THREAD PROTECTOR
2685	A32097-4	Box Assy
2686	A32097-5	Thread Sleeve
2687	A32097-6	Sleeve Assy
2688	A32097-7	Thumb Screw
2689	A32097-8	Sleeve
2690	A32097-9	End Plate
2691	A32098-1	PROTECTOR SET B767 MLG
2692	A32098-10	End Plate
2693	A32098-11	Placard
2694	A32098-12	PROTECTOR EQPT
2695	A32098-13	THD PROTECTOR ASSEMBLY
2696	A32098-14	Box Assy
2697	A32098-15	Thread Sliive
2698	A32098-17	B767 PROTECTOR EQPT-AXLE MLG
2699	A32098-2	Protector
2700	A32098-3	Axle Protectr MLG
2701	A32098-4	Box Assy
2702	A32098-5	Placard
2703	A32098-52	CAP
2704	A32098-6	Thread Sleeve
2705	A32098-7	Sleeve Assy
2706	A32098-8	Thumb Screw
2707	A32098-9	Sleeve
2708	A32099	SPRING EXTENDER EQPT
2709	A32099-1	SPRING EXTENDER EQPT
2710	A32099-10	SET SCREW
2711	A32099-100	PLATE
2712	A32099-111	Spring Extender Equipment
2713	A32099-112	SPRING EXTENDER EQPT
2714	A32099-113	END FITTING
2715	A32099-114	END FITTING
2716	A32099-15	BLOCK CENTER
2717	A32099-16	END FITTING
2718	A32099-20	END FITTING
2719	A32099-25	SPRING EXTENDER EQUPT.
2720	A32099-38	TCB ISSUED 09/04/2009
2721	A32099-45	Block Assy
2722	A32099-46	SHAFT HEX
2723	A32099-48	END FITTING
2724	A32099-49	END FITTING
2725	A32099-5	END FITTING
2726	A32099-51	HAND KNOB
2727	A32099-52	CAP
2728	A32099-54	BLOCK
2729	A32099-55	END FITTING
2730	A32099-56	END FITTING



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2731	A32099-60	CAP
2732	A32099-66	END FITTING
2733	A32099-67	END FITTING
2734	A32099-69	EQUIP SPRING EXTENDE
2735	A32099-70	End Fitting Assembly
2736	A32099-71	End Fitting Assembly
2737	A32099-73	END FITTING
2738	A32099-74	END FITTING
2739	A32099-76	Extender - Spring
2740	A32099-77	A32099-69 SPRING EXTENDER (SUPERSEDED BY -77)
2741	A32099-78	SPRING EXTENDER EQPT
2742	A32099-80	END FITTING ASSY
2743	A32099-81	END FITTING ASSY
2744	A32099-82	End Fitting Assembly
2745	A32099-83	END FITTING ASSY
2746	A32099-84	End Fitting Assy
2747	A32099-85	End Fitting Assy
2748	A32099-89	SHAFT-KEYED
2749	A32099-9	END FITTING
2750	A32099-96	END FITTING
2751	A32099-97	END FITTING
2752	A32099-98	END FITTING
2753	A32099-99	END FITTING
2754	A32101-1	WRENCH ADAPTER AXLE NUT NLG
2755	A36004	INSTALLATION EQPT CF6-80C2B BALL JOINT
2756	A36004-1	TOOL
2757	A36004-11	HEAD
2758	A36004-15	INSTALLATION EQUIP
2759	A36004-16	B767 BALL JOINT TOOL
2760	A36004-17	LATCH
2761	A36004-20	INSTALLATION TOOL CF680C2B BALL JOINT
2762	A36004-22	TOOL
2763	A36004-3	ALIGNMETN BAR -0 WELDMENT
2764	A36004-4	SPANNER -0 WELDMENT
2765	A36004-7	BODY
2766	A36004-9	SPRING
2767	A38001	PLUG VENT VACUUM WASTE SYSTEM
2768	A38001-1	VACUUM WASTE SYST VENT PLUG
2769	A38001-11	Handle
2770	A38001-12	Tube
2771	A38001-13	Tube
2772	A38001-14	Plate
2773	A38001-15	Stop
2774	A38001-16	Vacuum Test Equipment - Vacuum Waste System
2775	A38001-19	Usage Placard
2776	A38001-2	Plug-outlet
2777	A38001-20	Usage Placard
2778	A38001-21	Usage Placard
2779	A38001-22	Vacuum Test Eqpt - Vacuum Waste System
2780	A38001-23	VENT PLUG
2781	A38001-24	Storage Box Assy
2782	A380012-40	PUMP
2783	A38001-25	VACUUM SOURCE ASSY
2784	A38001-26	HOSE ASSY
2785	A38001-3	Plug
2786	A38001-30	Schematic Placard
2787	A38001-31	Hose
2788	A38001-32	Box Assy
2789	A38001-34	Screw
2790	A38001-35	Base
2791	A38001-36	Wall
2792	A38001-37	Wall
2793	A38001-38	Wall
2794	A38001-39	Angle
2795	A38001-4	PLUG ASSY - VENT
2796	A38001-40	Angle
2797	A38001-41	ANGLE
2798	A38001-42	Angle
2799	A38001-43	Angle
2800	A38001-44	Screw





## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2801	A38001-45	Washer
2802	A38001-46	Nut
2803	A38001-47	Screw
2804	A38001-48	Plate
2805	A38001-49	Press Block
2806	A38001-5	Column
2807	A38001-50	Pad
2808	A38001-51	Tube
2809	A38001-52	Hose
2810	A38001-53	Hose
2811	A38001-54	Hose
2812	A38001-55	Hose
2813	A38001-56	Hose
2814	A38001-57	Screw
2815	A38001-58	Screw
2816	A38001-59	Screw
2817	A38001-6	Column
2818	A38001-60	Nut
2819	A38001-61	Nut
2820	A38001-62	Washer
2821	A38001-63	Washer
2822	A38001-64	Washer
2823	A38001-65	PLUGS - VENT, VACUUM WAST
2824	A38001-66	Storage Box Assy
2825	A38001-67	Usage Placard
2826	A38001-68	Vacuum Test Equipment - Vacuum Waste System
2827	A38001-69	Control Box Assy
2828	A38001-7	Disk
2829	A38001-70	Storage Box Assy
2830	A38001-71	Usage Placard
2831	A38001-72	Panel Assy
2832	A38001-79	Valved coupler
2833	A38001-80	Valved nipple
2834	A38001-9	Tube
2835	A38003	BLOCKAGE REMOVER-VACUUM TOILET
2836	A38003-30	REMOVER - BLOCKAGE, VACUUM TOILET
2837	A42705	GAGE CONE BOLT NUT HEIGHT
2838	A46318	BOUCHON PLUG
2839	A47729	PLUG
2840	A49001	CRADLE -- APU
2841	A49001-1	APU Support
2842	A49001-106	Plain Washer
2843	A49001-108	Lock Nut
2844	A49001-111	Hex Cap Screw
2845	A49001-117	TOOL
2846	A49001-122	L-Pin
2847	A49001-123	L-Pin
2848	A49001-124	POST
2849	A49001-125	HINGE FITTING
2850	A49001-126	POST
2851	A49001-128	Nut
2852	A49001-129	L-Pin
2853	A49001-130	PIN HANDLE
2854	A49001-131	ROD
2855	A49001-132	ROD
2856	A49001-137	CRADLE - APU
2857	A49001-145	Bolt
2858	A49001-146	Bolt
2859	A49001-147	Bolt Spacer
2860	A49001-148	Nut
2861	A49001-149	Nut
2862	A49001-150	Washer
2863	A49001-151	Washer
2864	A49001-152	Pin Quick Release
2865	A49001-153	Cable Assy
2866	A49001-154	Bolt
2867	A49001-155	Nut
2868	A49001-156	Lock Washer
2869	A49001-157	Washer
2870	A49001-17	BALLASTS



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2871	A49001-2	TOOL
2872	A49001-21	SUPPORT
2873	A49001-22	SUPPORT
2874	A49001-23	SUPPORT
2875	A49001-24	POST
2876	A49001-25	LUG
2877	A49001-26	GUSSET
2878	A49001-27	GUSSET
2879	A49001-28	GUSSET
2880	A49001-29	CAP
2881	A49001-3	CRADLE - APU
2882	A49001-31	PLATE-TOP END
2883	A49001-32	PLATE-TOP END
2884	A49001-33	PLATE-BOTTOM END
2885	A49001-35	Cradle
2886	A49001-36	TUBE
2887	A49001-38	TUBE
2888	A49001-40	BRACKET WEB
2889	A490014-1	SUPPORT EQUIP
2890	A49001-42	SPACER
2891	A49001-48	BRACKET WEB
2892	A49001-50	BUTTON
2893	A49001-51	BEAM PIN
2894	A49001-55	WEIGHT
2895	A49001-56	CLIP
2896	A49001-58	LUG
2897	A49001-59	TURNBUCKLE ASSY
2898	A49001-60	ARM
2899	A49001-61	ARM
2900	A49001-62	APU CRADLE
2901	A49001-63	BRACKET
2902	A49001-64	APU CRADLEHST EQ
2903	A49001-67	BRACKET
2904	A49001-68	BRACKET
2905	A49001-69	ARM ASSY ASSY
2906	A49001-70	ARM ASSY CRADLE
2907	A49001-73	CRADLE - APU
2908	A49001-74	BEAM ASSY
2909	A49001-75	Adapter
2910	A49001-77	APU CRADLE HOIST
2911	A49001-78	CRADLE - APU
2912	A49001-79	APU CRADLE
2913	A49001-81	PLATE
2914	A49001-82	BALLAST WEIGHT
2915	A49001-83	CRADLE - APU
2916	A49001-84	CRADLE - APU
2917	A49001-85	CRADLE - APU
2918	A49001-86	CRADLE
2919	A49001-87	SHORT TUBE
2920	A49001-88	BASE MOUNT PLATE
2921	A49001-89	FORK CHANNEL
2922	A49001-90	FORK CHANNEL
2923	A49001-91	PAD
2924	A49001-92	MOUNT PLATE
2925	A49001-93	SHORT TUBE
2926	A49001-94	PLATE
2927	A49001-95	POST
2928	A49001-96	BASE PLATE
2929	A49001-97	TUBE
2930	A49001-98	AFT BRACKET
2931	A49001-99	AFT BRACKET
2932	A49005	SLING – APU SHOP HANDLING
2933	A49005- 2	APU SHOP HANDLING SLING ASSY
2934	A49005-1	SLING - APU SHOP HANDLING
2935	A49005-12	Sling-APU shop handling
2936	A49005-14	Cable Assy
2937	A49005-15	TOOLING PART
2938	A49005-16	TOOLING PART
2939	A49005-17	BEAM -0 WELDMENT
2940	A49005-18	SLING PTS



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
2941	A49005-19	SLING PTS
2942	A49005-20	SLING PTS
2943	A49005-21	SLING PTS
2944	A49005-3	BEAM
2945	A49005-7	BRACKET
2946	A49005-8	BRACKET
2947	A54004	JACKING EQPT – HINGE, HORIZ STAB
2948	A54004-1	FIXTURE
2949	A54004-19	PRELOAD STRUT FIXT.
2950	A54004-20	CYLINDER ASSEMBLY
2951	A54004-21	PUMP ASSEMBLY
2952	A54004-23	OUTER TUBE ASSEMBLY
2953	A54004-27	EQUIP PRE-LOAD STRUT
2954	A54004-4	BASE ASSEMBLY
2955	A55001-22	LOCK EQPT HORIZONTAL STABILIZER
2956	A55009	PLATFORM EQPT – EMPENNAGE ACCESS, VERTICAL FIN
2957	A55009-1	TOOL
2958	A55009-10	BEAM ASSY 1
2959	A55009-11	BEAM ASSY 2
2960	A55009-12	BEAM ASSY 3
2961	A55009-13	BEAM ASSY 4
2962	A55009-14	BEAM ASSY 5
2963	A55009-15	BEAM ASSY 6
2964	A55009-156	SHORT THUMB SCREW
2965	A55009-16	BEAM ASSY 7
2966	A55009-17	BEAM ASSY 8
2967	A55009-18	BEAM ASSY 9
2968	A55009-19	BEAM ASSY 10
2969	A55009-2	AFT FOOT ASSY
2970	A55009-20	BEAM ASSY 11
2971	A55009-21	BEAM ASSY 12
2972	A55009-219	BEAM ASSY D
2973	A55009-22	BEAM ASSY 13
2974	A55009-220	BEAM ASSY E
2975	A55009-221	BEAM ASSY F
2976	A55009-23	BEAM ASSY 14
2977	A55009-24	BEAM ASSY 15
2978	A55009-25	BEAM ASSY 16
2979	A55009-250	L PIN ASSY
2980	A55009-26	BEAM ASSY 17
2981	A55009-27	LADDER ASSY CENTER
2982	A55009-28	LADDERASSY LH
2983	A55009-29	LADDER ASSY RH
2984	A55009-3	FWD RIGHT FOOT ASSY
2985	A55009-30	STEP ASSY
2986	A55009-31	FLOORBOARD ASSY 1
2987	A55009-32	FLOORBOARD ASSY 2
2988	A55009-33	FLOORBOARD ASSY 3
2989	A55009-34	FLOORBOARD ASSY 4
2990	A55009-35	FLOORBOARD ASSY 5
2991	A55009-36	FLOORBOARD ASSY 6
2992	A55009-37	FLOORBOARD ASSY 7
2993	A55009-38	FLOORBOARD ASSY 8
2994	A55009-39	FLOORBOARD ASSY 9
2995	A55009-4	FWD RIGHT FOOT ASSY
2996	A55009-40	FLOORBOARD ASSY 10
2997	A55009-41	FLOORBOARD ASSY 11
2998	A55009-42	FLOORBOARD ASSY 12
2999	A55009-5	BEAM ASSY A
3000	A55009-6	BEAM ASSY B
3001	A55009-7	BEAM ASSY C
3002	A55009-8	SUPPORT REST ASSY LH
3003	A55009-9	SUPPORT REST ASSY RH
3004	A56001	SLING SET – NUMBER 1 & 3, CONTROL CAB WINDOWS
3005	A56001-1	SLING SET
3006	A56001-15	SLING SET - NUMBER 1 AND 3 CABIN WINDOW
3007	A56001-2	SLING ASSY NO.1 WINDOW
3008	A56001-3	Sling Assy No. 3 Window
3009	A653205	SEAL SETTING ASSY
3010	A666633	GREASE RETENTION SLEEVE



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3011	A71001	BOOTSTRAP EQPT- P&W ENGINES
3012	A71001-1	TOOL
3013	A71001-10	AFT brace assy-outbd
3014	A71001-100	TOOL
3015	A71001-115	TOOL
3016	A71001-116	AFT Bracket Assy
3017	A71001-120	BRACKET
3018	A71001-122	CLEVIS LUG
3019	A71001-128	TOOLS
3020	A71001-132	PIN
3021	A71001-133	LUG PAD
3022	A71001-136	CLAMP ASSY
3023	A71001-137	CLAMP ASSY
3024	A71001-138	CLAMP PAD
3025	A71001-139	CLAMP PAD
3026	A71001-140	LOCATOR
3027	A71001-142	OUTBD ARM
3028	A71001-143	INBD ARM
3029	A71001-144	LINK ASSY
3030	A71001-145	LINK ASSY
3031	A71001-147	ARM ASSY
3032	A71001-148	Arm Assembly
3033	A71001-149	ARM ASSY
3034	A71001-15	BRACKET
3035	A71001-150	LUG PLATE
3036	A71001-151	ARM
3037	A71001-152	ARM
3038	A71001-153	ARM
3039	A71001-154	LUG PLATE
3040	A71001-155	BASE
3041	A71001-156	LUG
3042	A71001-157	BASE
3043	A71001-158	BRACKET
3044	A71001-159	BRACKET
3045	A71001-160	Aft Bracket Assy
3046	A71001-162	LINK
3047	A71001-163	PIN
3048	A71001-164	LOAD CELL ASSY
3049	A71001-165	Aft Bracket Assy
3050	A71001-166	BRACKET
3051	A71001-167	BASE
3052	A71001-168	TOOL
3053	A71001-169	Support
3054	A71001-170	PAD
3055	A71001-171	PAD
3056	A71001-172	SUPPORT PLATE
3057	A71001-173	PAD SUPPORT
3058	A71001-174	FWD SUPPORT
3059	A71001-179	ENGINE BOOTSTRAP EQPT.
3060	A71001-18	Cableay
3061	A71001-182	Bootstrap -7R4D
3062	A71001-183	STORAGE BOX
3063	A71001-185	BOOTSTRAP EQPT, SUPERSEDED BY -191
3064	A71001-186	LWR AFT BRACKET
3065	A71001-188	BRACKET
3066	A71001-189	TOOL
3067	A71001-19	Sheave
3068	A71001-191	BOOT STRAP KIT
3069	A71001-192	Clamp assy
3070	A71001-193	Clamp assy
3071	A71001-195	CLAMP PAD
3072	A71001-196	CLAMP PAD
3073	A71001-20	SHEAVE
3074	A71001-27	TOOL
3075	A71001-331	BOOTSTRAP EQPT
3076	A71001-42	LINK
3077	A71001-43	CLEVIS FITTING
3078	A71001-46	Pin
3079	A71001-47	Pin
3080	A71001-48	LINK



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3081	A71001-51	ARM
3082	A71001-53	LUG
3083	A71001-59	ARM
3084	A71001-61	BRACE
3085	A71001-62	BRACE
3086	A71001-83	LUG
3087	A71001-84	LUG (OPP -83)
3088	A71001-85	BASE
3089	A71001-9	BRACE ASSY
3090	A71009	SLING – THRUST REVERSER CF6-80A
3091	A71009-19	FITTING
3092	A71009-20	TOOL
3093	A71009-22	CABLE
3094	A71009-25	Sling eqpt
3095	A71009-26	Sling eqpt
3096	A71009-6	CABLE
3097	A71011	BOOTSTRAP EQPT – G.E. ENGINES
3098	A71011- 16	LOAD CELL
3099	A71011-1	TOOL
3100	A71011-10	BRACKET-STAY
3101	A71011-101	CABLE ASSY
3102	A71011-102	TOOL
3103	A71011-112	TOOL
3104	A71011-119	GUIDE
3105	A71011-144	BOOTSTRAP PART
3106	A71011-145	TOOL
3107	A71011-149	ADAPTER
3108	A71011-150	TOOL
3109	A71011-164	FORWARD SUPPORT
3110	A71011-166	SHEAVE, 6 INCHES
3111	A71011-172	CLAMP -0 BOOTSTRAP
3112	A71011-173	CLAMP -0 BOOTSTRAP
3113	A71011-18	SHEAVE 4"
3114	A71011-181	NOSE GUIDE
3115	A71011-183	TOOL
3116	A71011-184	FWD SUPPORT
3117	A71011-185	AFT BRACKET LH
3118	A71011-186	AFT BRACKET RH
3119	A71011-187	Bolt
3120	A71011-188	ARM ASSY
3121	A71011-189	ARM ASSY
3122	A71011-19	SHEAVE 6"
3123	A71011-192	INSTRUCTION PLACARD
3124	A71011-195	AFT UPPER BRACKET ASSY - LH
3125	A71011-196	TOOL
3126	A71011-201	Link long
3127	A71011-202	TOOL
3128	A71011-203	ADAPTER
3129	A71011-204	INB. ARM ASSY
3130	A71011-214	FWD BRACKET LH
3131	A71011-215	FWD BRACKET RH
3132	A71011-224	TOOL
3133	A71011-234	TOOL
3134	A71011-236	TOOL
3135	A71011-238	TORQUE ADAPTER
3136	A71011-242	BOOTSTRAP
3137	A71011-243	TOOL
3138	A71011-245	AFT LOWER BRACKET LH
3139	A71011-246	AFT LOWER BRACKET RH
3140	A71011-247	FWD BRACKET LH
3141	A71011-248	FWD BRACKET RH
3142	A71011-249	ADAPTER
3143	A71011-250	TOOL
3144	A71011-251	PIVOT FOOT
3145	A71011-252	PIVOT FOOT
3146	A71011-254	PLACARD
3147	A71011-257	DATA PACKAGE
3148	A71011-258	TOOL
3149	A71011-261	PARTS PLACARD
3150	A71011-262	BOOTSTRAP



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3151	A71011-263	bootstrap kit
3152	A71011-264	AFT hoist
3153	A71011-265	FWD hoist
3154	A71011-267	BOOTSTRAP KIT - 767
3155	A71011-275	TOOL
3156	A71011-276	TOOL
3157	A71011-279	Gusset
3158	A71011-280	Gusset
3159	A71011-330	BOOTSTRAP KIT - 767
3160	A71011-331	BOOTSTRAP EQPT - GE ENGINES
3161	A71011-332	BOOTSTRAP EQPT -GENERAL ELECTRIC ENGINE CF6-8
3162	A71011-5	ARM AFT O/B
3163	A71011-7	COWL STAY
3164	A71011-82	BRACKET-STAY
3165	A71011-83	BRACKET-STAY
3166	A71011-84	FWD CENTRE LINK
3167	A71011-87	COWL STAY
3168	A71011-9	BRACKET-STAY
3169	A71011-90	TOOL
3170	A71011-93	OUTBD LINK
3171	A71011-94	INBD LINK
3172	A71011-95	ARM AFT I/B
3173	A71015-108	Lift Fixture - Engine Accessory
3174	A71023	CRADLE – CF6 – 80A ENGINE, 90 INCH RAIL
3175	A71023-30	FWD ADAPT
3176	A71023-31	FWD ADAPT WLDMT
3177	A71023-33	U ANGLE
3178	A71023-34	EYE
3179	A71023-35	BOTTOM PLATE
3180	A71023-37	Pin assy
3181	A71023-53	ENGINE CRADLE
3182	A71023-56	Cradle CF6-80A engine, 90 inch rail
3183	A78002	THREAD PROTECTOR EQPT - THRUST REVERSER INSTL AND REMOVAL
3184	A78002-1	THREAD PROTECTOR EQPT - THRUST REVERSER INSTL AND REMOVAL
3185	A78002-10	THREAD PROTECTOR
3186	A78002-11	THREAD PROTECTOR
3187	A78002-2	THREAD PROTECTOR
3188	A78002-3	THREAD PROT. EQUPT.
3189	A78002-4	THREAD PROTECTOR
3190	A78002-8	THREAD PROTECTOR EQPT - THRUST REVERSER INSTL AND REMOVAL
3191	A78002-9	THREAD PROTECTOR KIT
3192	A78013	SLING – EXHAUST SLEEVE, ENGINE
3193	A78013-1	SLING- EXHAUST NOZZLE
3194	A78013-10	Tag
3195	A78013-11	SLING-GE
3196	A78013-12	WEBBING ASSEMBLY
3197	A78013-14	Webbing
3198	A78013-15	LOK-A-LOY LINK
3199	A78013-16	MASTER LINK
3200	A78013-17	Dee Ring
3201	A78013-18	Buckle
3202	A78013-19	Web Protector
3203	A78013-2	Sling
3204	A78013-20	Sling-exhaust sleeve, engine
3205	A78013-21	Sling-exhaust sleeve, engine
3206	A78013-22	SLING
3207	A78013-23	Webbing Assy
3208	A78013-24	Webbing Assy
3209	A78013-25	WEBBING ASSEMBLY
3210	A78013-26	Hook
3211	A78013-27	D Ring
3212	A78013-28	Adapter
3213	A78013-29	Storage Box Assy
3214	A78013-3	Webbing Assy
3215	A78013-30	Storage Box Assy
3216	A78013-31	Storage Box Assy
3217	A78013-32	Placard
3218	A78013-33	Storage Box
3219	A78013-34	Proof Load Tag
3220	A78013-35	Identification Tag



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3221	A78013-4	Webbing Assy
3222	A78013-5	Webbing
3223	A78013-6	Webbing
3224	A78013-7	Webbing
3225	A78013-8	Webbing
3226	A78013-82	Sleeve Sling
3227	A78013-9	Narrow Hook
3228	A78018	SLING – THRUST REVERSER TRANSLATING SLEEVE, CF6-80C2
3229	A78018-1	SLING THRUST REVERSER
3230	A78018-11	SLING
3231	A78018-12	B767 THRUST REVERSE SLING TOOL
3232	A78018-13	SLEEVE BRACKET
3233	A78018-14	TOOL
3234	A78018-17	SLING ASSY
3235	A78018-4	SLEEVE BRACKET
3236	A813660T	WRENCH RETAINER REMOVING
3237	A820196T	SUPPORT FIXTURE CLOSURE REMOVAL
3238	A820496T	SUPPORT FIXTURE CLOSURE REMOVAL
3239	AC21810	BASE PLATE
3240	AC21817	LOOSENING WRENCH
3241	AC21860000	DUMMY WHEEL
3242	AEGG12547	SHIM SETTING ASSEMBLY TOOL
3243	AETL34168	STATOR BRG REMOVAL TOOL
3244	AGE-04383	LUG
3245	AGE-04383-001	LUG
3246	AGE-05697-401	HORIZONTAL ESTABILIZER REFERENCE STAND
3247	AGE-05698	REFERENCE STANDARD HORIZONTAL STABILIZER
3248	AGE-05698-401	REFERENCE STANDARD HORIZONTAL STABILIZER
3249	AGE-05698-403	REFERENCE STANDARD HORIZONTAL STABILIZER
3250	AGE-05698-405	REFERENCE STANDARD HORIZONTAL STABILIZER
3251	AGE-05700	BAG REFERENCE STANDARD - FABRIC
3252	AGE-05700-401	REFERENCE STANDARD BAG-FABRIC
3253	AGE10023	HOLDING FIXTURE
3254	AGE10024	DRIVER, BEARING
3255	AGE-10024	DRIVER, BEARING
3256	AGE10026	SPLITTER, DIFFERENTIAL
3257	AGE-10026	SPLITTER, DIFFERENTIAL
3258	AGE10027	SPLITTER, DIFFERENTIAL
3259	AGE-10027	SPLITTER, DIFFERENTIAL
3260	AGE10029	DRIVER, LINER
3261	AGE-10029	DRIVER, LINER
3262	AGE10031	BULLET
3263	AGE-10031	BULLET
3264	AGE10032	FIXTURE, HOLDING
3265	AGE-10032	FIXTURE, HOLDING
3266	AGE10034	DRIVER, BEARING
3267	AGE-10034	DRIVER, BEARING
3268	AGE10040	HOLDING FIXTURE
3269	AGE-10040	HOLDING FIXTURE
3270	AGE10042	DRIVER, LINER
3271	AGE-10042	DRIVER, LINER
3272	AGE10043	FIXTURE, ASSEMBLY HOLDING
3273	AGE-10043	FIXTURE, ASSEMBLY HOLDING
3274	AGE10044	DRIVER, PIN
3275	AGE-10044	DRIVER, PIN
3276	AGE10048	FIXTURE, HOLDING
3277	AGE-10048	FIXTURE, HOLDING
3278	AGE10049	DRIVER, BEARING ASSEMBLY
3279	AGE-10049	DRIVER, BEARING ASSEMBLY
3280	AGE10057	BUSHING DRIVER
3281	AGE10058	ASSEMBLY PUSHER
3282	AGE10060	COMPRESSOR, SPRING
3283	AGE-10060	COMPRESSOR, SPRING
3284	AGE10061	FIXTURE HOLDING
3285	AGE-10061	FIXTURE HOLDING
3286	AGE10062	LOCATER PLATE
3287	AGE-10062	LOCATER PLATE
3288	AGE10063	ASSEMBLY FIXTURE
3289	AGE10065	DRIVER, BEARING
3290	AGE-10065	DRIVER, BEARING





## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3291	AGE10066	DRIVER, JOURNAL
3292	AGE-10066	DRIVER, JOURNAL
3293	AGE10079	HOLDING FIXTURE
3294	AGE10080	PULLER, INNER RACE
3295	AGE-10080	PULLER, INNER RACE
3296	AGE10081	FIXTURE PMG PROTECTION
3297	AGE-10081	FIXTURE PMG PROTECTION
3298	AGE10082	FIXTURE, HOLDING
3299	AGE-10082	FIXTURE, HOLDING
3300	AGE10084	PULLER, EXCITER
3301	AGE-10084	PULLER, EXCITER
3302	AGE10087	PLIER TIPS, RETAINER
3303	AGE-10087	PLIER TIPS, RETAINER
3304	AGE10135	INSERTER, PISTON
3305	AGE-10135	INSERTER, PISTON
3306	AGE10138	HOLDER SPLIT BUSHING
3307	AGE-10138	HOLDER SPLIT BUSHING
3308	AGE10157	WRENCH, DIODE SPANNER
3309	AGE-10157	WRENCH, DIODE SPANNER
3310	AGE10290	PULLER ASSEMBLY CONNECTOR
3311	AGE-10290	PULLER ASSEMBLY CONNECTOR
3312	AGE10339	BUSHING LINEAR MOVEMENT
3313	AGE-10339	BUSHING LINEAR MOVEMENT
3314	AGE10341	FIXTURE, HOLDING
3315	AGE-10341	FIXTURE, HOLDING
3316	AGE10344	DRIVER, PIN
3317	AGE-10344	DRIVER, PIN
3318	AGE10346	HOLDING FIXTURE
3319	AGE-10346	HOLDING FIXTURE
3320	AGE10349	DRIVER, LINER
3321	AGE-10349	DRIVER, LINER
3322	AGE10359	DRIVER, RACE
3323	AGE-10359	DRIVER, RACE
3324	AGE10362	DRIVER, LINER
3325	AGE-10362	DRIVER, LINER
3326	AGE10366	DRIVER, RACE
3327	AGE-10366	DRIVER, RACE
3328	AGE10367	DRIVER, LINER
3329	AGE-10367	DRIVER, LINER
3330	AGE10370	WRENCH, TORQUE ADAPTER
3331	AGE-10370	WRENCH, TORQUE ADAPTER
3332	AGE10371	FIXTURE, HOLDING
3333	AGE-10371	FIXTURE, HOLDING
3334	AGE10372	WRENCH ASSEMBLY, SPANNER
3335	AGE-10372	WRENCH ASSEMBLY, SPANNER
3336	AGE10373	WRENCH, SPANNER
3337	AGE-10373	WRENCH, SPANNER
3338	AGE10374	WRENCH ASSEMBLY, SPANNER
3339	AGE-10374	WRENCH ASSEMBLY, SPANNER
3340	AGE10376	PULLER ASSEMBLY, DIODE
3341	AGE-10376	PULLER ASSEMBLY, DIODE
3342	AGE10377	DRIVER, BEARING
3343	AGE-10377	DRIVER, BEARING
3344	AGE10379	FIXTURE ASSEMBLY, HOLDING
3345	AGE-10379	FIXTURE ASSEMBLY, HOLDING
3346	AGE10382	PULLER ASSEMBLY, EXCITER
3347	AGE-10382	PULLER ASSEMBLY, EXCITER
3348	AGE10383	DRIVER, EXCITER
3349	AGE-10383	DRIVER, EXCITER
3350	AGE10388	DRIVER, LINER
3351	AGE-10388	DRIVER, LINER
3352	AGE10389	FIXTURE, ALIGNMENT
3353	AGE-10389	FIXTURE, ALIGNMENT
3354	AGE10390	PULLER, EXPANDABLE
3355	AGE-10390	PULLER, EXPANDABLE
3356	AGE10397	FIXTURE, HOLDING
3357	AGE-10397	FIXTURE, HOLDING
3358	AGE10773	DRIVER, BEARING
3359	AGE-10773	DRIVER, BEARING
3360	AGE10774	FIXTURE, HOLDING



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3361	AGE-10774	FIXTURE, HOLDING
3362	AGE10778	FIXTURE, HOLDING
3363	AGE-10778	FIXTURE, HOLDING
3364	AGE10784	FIXTURE, HOLDING
3365	AGE-10784	FIXTURE, HOLDING
3366	AGE10789	PULLER. VALVE SLEEVE
3367	AGE-10789	PULLER. VALVE SLEEVE
3368	AGE10793	DRIVER, SEAL
3369	AGE-10793	DRIVER, SEAL
3370	AGE10799	PULLER ASSEMBLY, RACE
3371	AGE-10799	PULLER ASSEMBLY, RACE
3372	AGE10801	SPANNER WRENCH
3373	AGE10802	FIXTURE, ASSEMBLY, PROTECTION
3374	AGE-10802	FIXTURE, ASSEMBLY, PROTECTION
3375	AGE10952	EXCITER STATOR GUIDE
3376	AGE10953	RETAINER, SPRING
3377	AGE-10953	RETAINER, SPRING
3378	AGE10955	ASSEMBLY TOOL, GEN STATOR
3379	AGE-10955	ASSEMBLY TOOL, GEN STATOR
3380	AGE10981	DRIVER ASSEMBLY, LAPPING PLATE, INSEPARABLE
3381	AGE-10981	DRIVER ASSEMBLY, LAPPING PLATE, INSEPARABLE
3382	AGE11320	TONGS ASSEMBLY, BRAZING
3383	AGE-11320	TONGS ASSEMBLY, BRAZING
3384	AGE11432	FIXTURE ASSEMBLY, HOLDING. FIXED WOBBLER
3385	AGE-11432	FIXTURE ASSEMBLY, HOLDING. FIXED WOBBLER
3386	AGE11575	WRENCH ASSEMBLY, SPANNER
3387	AGE-11575	WRENCH ASSEMBLY, SPANNER
3388	AGE11586	PULLER ASSEMBLY, EXCITER
3389	AGE-11586	PULLER ASSEMBLY, EXCITER
3390	AGE11589	DRIVER, LINER
3391	AGE-11589	DRIVER, LINER
3392	AGE11592	PULLER, DIODE
3393	AGE-11592	PULLER, DIODE
3394	AGE11594	SPANNER
3395	AGE-11594	SPANNER
3396	AGE11595	PULLER ASSEMBLY EXCITER
3397	AGE-11595	PULLER ASSEMBLY EXCITER
3398	AGE11597	ASSY, TOOL, MISC
3399	AGE-11597	ASSY, TOOL, MISC
3400	AGE11599	ASSEMBLY YOOL, PUMP
3401	AGE-11599	ASSEMBLY YOOL, PUMP
3402	AGE11732	DRIVER, PIN
3403	AGE-11732	DRIVER, PIN
3404	AGE11734	WRENCH SPANNER
3405	AGE-11734	WRENCH SPANNER
3406	AGE11808	SPRING COMPRESSOR
3407	AGE-11808	SPRING COMPRESSOR
3408	AGE11809	ASSEMBLY TOOL, "ORANGE PEEL"
3409	AGE-11809	ASSEMBLY TOOL, "ORANGE PEEL"
3410	AGE11812	HOLDING STAND, PIN ASSEMBLY
3411	AGE-11812	HOLDING STAND, PIN ASSEMBLY
3412	AGE11814	BULLET ASSEMBLY
3413	AGE-11814	BULLET ASSEMBLY
3414	AGE11815	DRIVER, PLUG
3415	AGE-11815	DRIVER, PLUG
3416	AGE11820	FIXTURE, COMPRESSION ASESEMBLY
3417	AGE-11820	FIXTURE, COMPRESSION ASESEMBLY
3418	AGE11828	SPACER, FORK
3419	AGE-11828	SPACER, FORK
3420	AGE11831	BLOCK, AXLE SUPPORT
3421	AGE-11831	BLOCK, AXLE SUPPORT
3422	AGE11848	FIXTURE, HOLDING, ROTOR
3423	AGE-11848	FIXTURE, HOLDING, ROTOR
3424	AGE11849	DRIVER, JOURNAL
3425	AGE-11849	DRIVER, JOURNAL
3426	AGE11856	BUSHING, SPLIT
3427	AGE-11856	BUSHING, SPLIT
3428	AGE11871	BUSHING, SPLIT
3429	AGE-11871	BUSHING, SPLIT
3430	AGE11885	BULLET



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3431	AGE-11885	BULLET
3432	AGE11891	BUSHING, SPLIT
3433	AGE-11891	BUSHING, SPLIT
3434	AGE11959	SLEEVE ASSEMBLY FIXTURE
3435	AGE-11959	SLEEVE ASSEMBLY FIXTURE
3436	AGE11961	DRIVER, BEARING
3437	AGE-11961	DRIVER, BEARING
3438	AGE11991	PMG STATOR INSTALLER
3439	AGE-11991	PMG STATOR INSTALLER
3440	AGE12033	CONTROLARM ASS'Y TOOL
3441	AGE-12033	CONTROLARM ASS'Y TOOL
3442	AGE12177	ALIGNMENT ROD
3443	AGE12223	SLEEVE PULLER
3444	AGE-12223	SLEEVE PULLER
3445	AGE12603	N/A
3446	AGE-12603	N/A
3447	AGE12628	PLIERS, RETAINER
3448	AGE-12628	PLIERS, RETAINER
3449	AGE12676	PUSHER
3450	AGE-12676	PUSHER
3451	AGE12725	FIXED WOBBLER HOLDER
3452	AGE-12725	FIXED WOBBLER HOLDER
3453	AGE12758	DIODE MANIFOLD PULLER
3454	AGE-12758	DIODE MANIFOLD PULLER
3455	AGE12759	DIODE MANIFOLD PULLER
3456	AGE-12759	DIODE MANIFOLD PULLER
3457	AGE12819	PMG PROTECTION FIXTURE
3458	AGE12845	GAGE, LINEAR MOVEMENT
3459	AGE-12845	GAGE, LINEAR MOVEMENT
3460	AGE12890	DRIVER, LINER
3461	AGE-12890	DRIVER, LINER
3462	AGE12959	SLEEVEE GUIDE
3463	AGE-12959	SLEEVEE GUIDE
3464	AGE12964	WRENCH ASSEMBLY, SPANNER
3465	AGE-12964	WRENCH ASSEMBLY, SPANNER
3466	AGE13055	ALIGNMENT PIN
3467	AGE-13055	PIN, ALINGMENT
3468	AGE13056	BULLET
3469	AGE-13056	BULLET
3470	AGE13076	EXTRACTOR ASSEMBLY, DISK
3471	AGE-13076	EXTRACTOR ASSEMBLY, DISK
3472	AGE13093	FIXTURE, COMPRESSION ASESEMBLY
3473	AGE-13093	FIXTURE, COMPRESSION ASESEMBLY
3474	AGE13107	FIXTURE, ASSEMBLY TAB BENDING
3475	AGE-13107	FIXTURE, ASSEMBLY TAB BENDING
3476	AGE13147	FIXTURE, TERMINAL ALIGNMENT
3477	AGE-13147	FIXTURE, TERMINAL ALIGNMENT
3478	AGE13229	DRIVER, LINER
3479	AGE-13229	DRIVER, LINER
3480	AGE13234	DRIVER, JOURNAL BEARING
3481	AGE-13234	DRIVER, JOURNAL BEARING
3482	AGE13239	LINER DRIVER
3483	AGE-13239	LINER DRIVER
3484	AGE13240	DRIVER, LINER
3485	AGE-13240	DRIVER, LINER
3486	AGE13241	HOLDING FIXTURE
3487	AGE13244	DRIVER, LINER
3488	AGE-13244	DRIVER, LINER
3489	AGE13293	SUPPORT FIXTURE
3490	AGE13535	COMPOSITE SLEEVE INSTALLER
3491	AGE-13535	COMPOSITE SLEEVE INSTALLER
3492	AGE13635	STACKING CHISEL
3493	AGE-13635	STACKING CHISEL
3494	AGE13730	TOOL-SLAVE RACE, OUTER
3495	AGE70505	TURBINE RING SUPPORT INSPECTION FIXTURE
3496	AGE-70505	TURBINE RING SUPPORT INSPECTION FIXTURE
3497	AGE70614	EXHAUST HOUSING INSPECTION FIXTURE
3498	AGE-70614	EXHAUST HOUSING INSPECTION FIXTURE
3499	AID-00661	PULLER FAN GEAR
3500	AID-00915	PRESS TOOL SLEEVE



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3501	AKS-30879	ASSEMBLY TOOL, MISC.
3502	AKS-31282	ASSY TOOL, MISC.
3503	AKS-31285	ASSY TOOL, MISC.
3504	AKS-31566	ASSEMBLY TOOL, (MISC.) (INSTALL LEE PLUGS)
3505	AKS-31566-9	ASSEMBLY TOOL
3506	AKS-32147	ASSY TOOL, MISC.
3507	AS1908	SOCKET -3-1/4 INCH, 3/4 INCH DRIVE, HEX
3508	AT-1234-82	ADAPTER CLUTCH CHECK RUN IN
3509	AT-226-1	WRENCH SPECIAL
3510	AT-3228	WRENCH SPECIAL
3511	AT-3346	FIXTURE PRESSING
3512	AT4591	ADAPTER CLUTCH SETTING
3513	ATI-246500	ASSEMBLY TOOL ROD END ADJUSTMENT & STROKE VERIFICATION UPLOCK ACTUATOR NLG
3514	B12004-1	RECEPTACLE - FUEL SAMPLING
3515	B24001	HOIST – MAIN BATTERY
3516	B24001-1	TOOL
3517	B24001-101	Hoist - Main Battery
3518	B24001-109	MAIN BATTERY HOIST
3519	B24001-110	SRV, HOIST, B757, MAIN BATTERY
3520	B24001-111	HOIST - MAIN BATTERY
3521	B24001-119	HOIST EQPT - MAIN BATTERY
3522	B24001-120	HOIST EQPT - MAIN BATTERY
3523	B24001-121	HOIST; BATTERY
3524	B24001-122	HANDLE
3525	B24001-29	HANDLE
3526	B24001-30	SPACER
3527	B24001-32	PIN
3528	B24001-49	CABLE, 3/32" DIA, IPS, GALV
3529	B24001-51	HOIST-MAIN BATTERY
3530	B24001-59	Bracket
3531	B24001-68	B737 BATTERY HOIST
3532	B24001-91	HOIST EQPT - MAIN BATTERY
3533	B24001-93	HOIST EQPT - MAIN BATTERY
3534	B24001-94	ADAPTOR ASSEMBLY, STOWAGE
3535	B26002	TEST EQPT. DISCHARGE LINES CARGO FIRE EXTINGUISHER
3536	B26002-1	Test Equipment - Discharge Lines, Cargo Fire Extinguisher
3537	B27008-1	LOCK-TRAILING EDGE FLAP,POWER DRIVE UNIT
3538	B27011-79	EQPT - REMOVAL/INSTALLATION, HORIZONTAL STABILIZER JACKSCREW
3539	B27012	SLING EQPT – INSTALLATION / REMOVAL AILERON
3540	B27012-1	REMOVE/INSTALL SLING EQPT - AILERON
3541	B27012-2	AILERON SLING TOOL
3542	B27012-3	LIFTING RING ASSY
3543	B27012-7	BASE
3544	B27013-20	LOCK EQPT - RUDDER POWER CONTROL UNIT
3545	B28003-1	PULLER-MAIN TANK BOOST PUMP ASSY
3546	B28005	PRESSURE PLUG EQPT FUEL SYSTEM
3547	B28009	ALIGNMENT EQPT-FUEL SHUTOFF VALVE
3548	B32001-4	DOWNLOCK-MLG & NLG
3549	B32002	EXTENDER – DOWNLOCK SPRING, MLG & NLG
3550	B32002-1	EXTENDER - DOWNLOCK SPRING, MLG AND NLG (MLG AND NLG)
3551	B32002-2	SHAFT ASSY
3552	B32002-3	BRACKET, MLG
3553	B32002-4	BRACKET, NLG
3554	B32002-5	BRACKET, NLG
3555	B32002-6	BRACKET, MLG
3556	B32002-9	SHAFT
3557	B32003	PIN PULLER – TRUNNION, NLG
3558	B32003-1	PIN PULLER - TRUNNION, NLG (NLG)
3559	B32003-10	SUPPORT PLATE
3560	B32003-12	LIFT SHAFT
3561	B32003-13	WRENCH
3562	B32003-2	PIN PULLER ASSY
3563	B32003-3	LIFT, PLUG
3564	B32003-4	TOP PLATE
3565	B32003-7	FIX SHAFT
3566	B32003-8	ADJUSTABLE SHAFT
3567	B32010	CHANGE EQPT – WHEEL & BRAKE, MLG
3568	B32010-1	CHANGE EQPT - WHEEL AND BRAKE, MLG (MLG)
3569	B32010-10	THREAD PROTECTOR
3570	B32010-11	THREAD PROT. SLEEVE



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3571	B32010-14	CHANGE EQPT - WHEEL AND BRAKE, MLG (MLG)
3572	B32010-15	CHANGE EQPT - WHEEL AND BRAKE, MLG (MLG)
3573	B32010-16	MAIN WHEEL SPANNER
3574	B32010-18	BAR
3575	B32010-1908	NLG WRENCH
3576	B32010-2	CHANGE EQPT - WHEEL AND BRAKE, MLG (MLG)
3577	B32010-23	WRENCH
3578	B32010-23-1	NOSE WHEEL WRENCH TOOL
3579	B32010-23-2	NOSE WHEEL WRENCH TOOL
3580	B32010-23-3	NOSE WHEEL WRENCH TOOL
3581	B32010-23-4	NOSE WHEEL WRENCH TOOL
3582	B32010-24	WRENCH
3583	B32010-25	TAB
3584	B32010-28	CHANGE EQPT - WHEEL AND BRAKE, MLG (MLG)
3585	B32010-3	THREAD PROTECTOR
3586	B32010-30	Protector
3587	B32010-4	LOCK EQPT. - DOOR ACT. - MLG
3588	B32010-5	MAIN AXLE PROTECTOR
3589	B32010-6	CAP
3590	B32010-7	PLUG
3591	B32016	BRAKE PULLER – MLG
3592	B32019	RESTRAINT -0 SHOCK STRUT, NLG
3593	B32019-1	RESTRAINT - SHOCK STRUT, NLG
3594	B32019-2	Strapay
3595	B32021-1	PROTECTOR
3596	B32027-2	SOCKET-TRUNNION BEARING RETENTION NUTS
3597	B32028	LOCK EQPT -0 SHOCK STRUT, MLG
3598	B32028-1	LOCK EQPT - SHOCK STRUT, MLG (MLG)
3599	B32028-12	SCREW
3600	B32028-13	Screw
3601	B32028-14	CABLE ASSY
3602	B32028-21	LOCK EQPT - SHOCK STRUT, MLG (MLG)
3603	B32028-27	ALIGNMENT EQPT
3604	B32028-6	UPPER FITTING
3605	B32028-7	PLUG
3606	B32028-8	FITTING
3607	B32028-9	FITTING
3608	B32044	PULLER EQPT -0 STRUCTURAL FUSE PIN, MLG
3609	B32044-1	Boeing
3610	B32044-12	PULLER EQPT - STRUCTURAL FUSE PIN, MLG (MLG)
3611	B32044-13	TRUNION PIN PULLER
3612	B32044-14	SPACER
3613	B32044-16	BEARING
3614	B32044-17	PLACARD
3615	B32044-6	PIN PULLER
3616	B32044-9	SUPPORT
3617	B49001-1-35	FRAME AUXILIARY POWER UNIT APU INSTALLATION
3618	B52001	SLING -0 PASSENGER DOOR
3619	B52001-1	SLING - PASSENGER DOOR
3620	B52001-4	ADAPTER ASSEMBLY
3621	B52001-5	TOOL
3622	B52001-6	TOOL
3623	B52004-1	INSTALLATION TOOL DOOR SEAL
3624	B54013	SLING EQPT -0 DIAGONAL BRACE UNLOAD, PW2000
3625	B54013-1	SLING EQUIP.
3626	B54013-38	SLING EQPT - DIAGONAL BRACE UNLOAD, PW2000 SERIES ENGINE
3627	B54013-48	SLING EQPT - DIAGONAL BRACE UNLOAD, PW2000 SERIES ENGINE
3628	B54016	REMOVAL TOOL-SPLIT BUSHING
3629	B54016-1	REMOVAL TOOL-SPLIT BUSHING
3630	B54017	SLING EQPT -0 FUSE PIN REM/INSTAL-RB211-535
3631	B54017-1	SLING EQPT - FUSE PIN
3632	B54017-18	SLING
3633	B54017-19	LIFT LINK ASSY
3634	B54017-2	SLING ASSY
3635	B54017-21	UPPER LINK
3636	B54017-22	SLING EQPT - FUSE PIN, REMOVAL/INSTALLATION - RB211-535 ENGINE
3637	B54017-5	SPREADER
3638	B54017-7	HANDLING
3639	B54017-8	Boltpin
3640	B54018-29	REMOVAL INSTALLATION KIT FUSE PIN



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3641	B54018-38	SPANNER WRENCH
3642	B55002-15	SUPPORT EQPT HORIZONTAL STABILIZER
3643	B57003	ADAPTER EQPT -0 TRUNNION BEARINGS AND MOUNT, MLG
3644	B57003-1	ADAPTER
3645	B57003-11	REACTION FITTING
3646	B57003-17	MOUNTING PLATE
3647	B57003-18	ALIGNING
3648	B57003-19	ALIGNING PIN
3649	B57003-2	TOOL
3650	B57003-20	ALIGNING PIN
3651	B57003-21	MOUNTING PLATE
3652	B57003-22	ALIGNING PLATE
3653	B57003-26	FITTING
3654	B57003-27	FITTING
3655	B57003-28	KIT MLG BRG & MOUNT R/I
3656	B57003-29	ADAPTER EQPT
3657	B57003-3	ADAPTER EQPT - TRUNNION BEARING AND MOUNT, MLG INSTL AND REMOVAL
3658	B57003-30	WRENCH ADAPTOR
3659	B57003-33	ADAPTER EQPT - TRUNNION BEARING AND MOUNT, MLG INSTL AND REMOVAL
3660	B57003-34	ADAPTER EQPT - TRUNNION BEARING AND MOUNT, MLG INSTL AND REMOVAL
3661	B57003-4	ADAPTER EQPT - TRUNNION BEARING AND MOUNT, MLG INSTL AND REMOVAL
3662	B57003-5	STORAGE BOX
3663	B57003-7	SOCKET
3664	B57003-9	FITTING
3665	B71033-21	CRADLE EXHAUST NOZZLE
3666	B71040	SLING
3667	B71040-1	Boeing
3668	B71040-10	Lower cable assy
3669	B71040-12	Bar
3670	B71040-13	End Plate
3671	B71040-14	Spreader Pipe
3672	B71040-15	End Plate
3673	B71040-16	Attach Plate
3674	B71040-17	Wire Rope
3675	B71040-18	Wire Rope
3676	B71040-2	Lifting Sling Assy
3677	B71040-20	SLING EQUIP INLET COWL RB211
3678	B71040-21	SLING ASSY
3679	B71040-22	Sling
3680	B71040-23	ENG NOSE COWL SLING - CFM56-7 & RB211
3681	B71040-24	LIFTING STRAP ASSEMBLY
3682	B71040-25	LIFTING STRAP ASSEMBLY
3683	B71040-26	STRAP END
3684	B71040-27	Strap
3685	B71040-28	TOOL
3686	B71040-29	Storage Box Assy
3687	B71040-3	Liftingbar
3688	B71040-30	Storage Box Assy
3689	B71040-31	Storage Box Assy
3690	B71040-32	LIFTING SLING ASSEMBLY
3691	B71040-33	Usage Placard
3692	B71040-34	Usage Placard
3693	B71040-35	Usage Placard
3694	B71040-36	SLING EQPT - INLET COWL
3695	B71040-37	SLING EQPT - INLET COWL
3696	B71040-38	Sling - Inlet Cowl
3697	B71040-39	Sling - Inlet Cowl
3698	B71040-4	Storage Box Assy
3699	B71040-40	LEVER HOIST
3700	B71040-42	SLING
3701	B71040-5	Lifting Bar
3702	B71040-6	Lifting pin
3703	B71040-66	SLING EQPT-INLET COWL
3704	B71040-7	Sheave Assy
3705	B71040-8	Spreader Beam Assy
3706	B71040-9	Cableay
3707	B71042-154	HANDLING FRAME EQPT
3708	B78001-1	Lock Assembly - Thrust Reverser Isolator Valve
3709	B78001-14	Thrust Reverser Lock Assy
3710	B78008	TORQUE LEAD SCREW NUT INTO PISTON



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3711	BL52536	ASSEMBLY TOOL
3712	BL52558	FITTING JIG
3713	BLS-31279	BULLET, SIZING
3714	BLS-32185	BULLET, ASSEMBLY
3715	BLS-34422	ASSEMBLY BULLET
3716	BLS-34533	ASSEMBLY BULLET
3717	BO-04M-DA42	Diamond DA42 Tow bar
3718	C07007	JACK FITTING FWD BODY STA 294.5
3719	C07007-11	Jack Fitting - Forward Body Station 294.5
3720	C07007-19	JACK FITTING - FORWARD BODY
3721	C1-47691	EXTRACTOR
3722	C21002-20	HEAT EXCHANGER-BACK FLUSHER
3723	C21003	BACKFLUSH EQPT. A/C PACK HEAT EXCHANGER
3724	C21003-133	Backflush Equipment - Air Conditioning Pack Heat Exchanger
3725	C21003-134	Backflush Equipment - Air Conditioning Pack Heat Exchanger
3726	C21003-135	Backflush Equipment - Air Conditioning Pack Heat Exchanger
3727	C21003-155	EQPT - BACKFLUSH, A/C PACK HEAT EXCHANGER
3728	C21003-156	BACKFLUSH EQPT - AIR CONDITIONING PACK HEAT E
3729	C21003-76	EQUIP BACKFLUSH
3730	C21003-80	Backflush Equipment - Air Conditioning Pack Heat Exchanger
3731	C21003-81	Backflush Equipment - Air Conditioning Pack Heat Exchanger
3732	C21003-82	Backflush Equipment - Air Conditioning Pack Heat Exchanger
3733	C24002-1	JACK ADAPTER
3734	C24002-100	Bearing
3735	C24002-101	Seal
3736	C24002-102	Keensert
3737	C24002-103	Spring Pin
3738	C24002-104	Keensert
3739	C24002-105	Center Plate
3740	C24002-106	Base Plate
3741	C24002-107	Storage Box Assy
3742	C24002-108	Storage Box Assy
3743	C24002-109	Nylon screw
3744	C24002-11	SHAFT
3745	C24002-110	Placard
3746	C24002-111	Placard
3747	C24002-112	Storage Box
3748	C24002-113	Identification Tag
3749	C24002-12	Buckle
3750	C24002-13	Shaft Block
3751	C24002-14	King Pin
3752	C24002-16	Center Plate
3753	C24002-17	Hex HD Cap Screw
3754	C24002-18	Locking Hex Nut
3755	C24002-19	Base Plate
3756	C24002-2	CRADLE VSCF ADAPTOR ASSEMBLY
3757	C24002-21	Support
3758	C24002-22	Buckle Mount
3759	C24002-23	Foot Adj Block
3760	C24002-24	Block
3761	C24002-25	Base
3762	C24002-26	End Bracket
3763	C24002-27	Shaft
3764	C24002-28	Hand Knob
3765	C24002-3	Storage Box Assy
3766	C24002-30	Base Plate
3767	C24002-31	Jack Adapter - VSCF and IDG
3768	C24002-32	VSCF Adapter Assy
3769	C24002-33	Top Plate Assy
3770	C24002-34	Cradle
3771	C24002-35	Left Pad
3772	C24002-36	Brg Surface
3773	C24002-37	Screw
3774	C24002-38	Screw
3775	C24002-39	Jack Adapter - VSCF and IDG
3776	C24002-40	JACK ADAPTOR
3777	C24002-41	TOOL-IDG REMOVAL/INSTAL EQPT
3778	C24002-42	Baseay
3779	C24002-43	VSCF Saddle Assy
3780	C24002-44	FIXED BASE





## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3781	C24002-45	VSCF
3782	C24002-46	SUPPORT
3783	C24002-47	Saddle
3784	C24002-48	BASE PLATE
3785	C24002-49	Saddle Plate
3786	C24002-5	Brg Housing Assy
3787	C24002-50	Buckle Lug
3788	C24002-51	Gusset
3789	C24002-52	Gusset
3790	C24002-53	Gusset
3791	C24002-54	Storage Box Assy
3792	C24002-56	BOX
3793	C24002-58	NYLON SCREW
3794	C24002-59	Rubber pad
3795	C24002-6	Slide Plate Assy
3796	C24002-60	Nylon nut
3797	C24002-61	Rubber pad
3798	C24002-62	Rubber pad
3799	C24002-63	Rubber pad
3800	C24002-65	Rubber pad
3801	C24002-68	VSCF-JACK ADAPTOR ASSY
3802	C24002-69	JACK ADAPTOR ASSY
3803	C24002-7	Adj Shaft Assy
3804	C24002-70	IDG REM/INSTL EQPT
3805	C24002-72	SADDLE
3806	C24002-73	Placard
3807	C24002-75	PLACARD
3808	C24002-76	Placard
3809	C24002-77	Jack Adapter -VSCF and IDG
3810	C24002-78	Jack Adapter -VSCF and IDG
3811	C24002-79	Jack adapter assy
3812	C24002-8	Base Plate Assy
3813	C24002-80	JACK ADAPTER ASSY
3814	C24002-81	Sliding Base Assy
3815	C24002-82	ldg Saddle Assy
3816	C24002-83	Fixed Base
3817	C24002-84	Saddle Assy
3818	C24002-85	Shaft Collar
3819	C24002-86	Strap
3820	C24002-87	Washer
3821	C24002-88	Knob
3822	C24002-89	Stud Leveling Foot
3823	C24002-9	Right Pad
3824	C24002-90	Nut
3825	C24002-91	Cotter Pin
3826	C24002-92	Screw
3827	C24002-93	Nut
3828	C24002-94	Slotted Hex Nut
3829	C24002-95	Hex Socket Set Screw
3830	C24002-96	Screw
3831	C24002-97	Bolt
3832	C24002-98	Threaded Collar
3833	C24002-99	Pin, Spring
3834	C25002-1	INSTALLATION/REMOVAL TOOL
3835	C25002-2	INSTALLATION/REMOVAL TOOL
3836	C26002-21	TEST BOX; ENGINE/APU FIRE DETECTION SYSTEM
3837	C27001	GROUND LOCK SET OUTBOARD SPOILER ACTUATORS
3838	C27001-16	Ground Lock Set - Outboard Spoiler Actuators
3839	C27001-23	GROUND LOCK (FOR SPOILERS 0, 1, 8, AND 9)
3840	C27001-24	GROUND LOCK (FOR SPOILERS 0, 1, 8, AND 9)
3841	C27001-34	GROUND LOCK SET
3842	C27001-35	GROUND LOCK SET - OUTBOARD SPOILER ACTUATORS (CONTAINS TWO LOCK ASSEMBLIES) (THE BOEING COMPANY)
3843	C27001-41	Ground Lock Set - Outboard Spoiler Actuators
3844	C27001-42	SET - GROUND LOCK, OUTBOARD SPOILER ACTUTATORS 1,12
3845	C27001-43	LOCK ASSY
3846	C27001-51	SET - GROUND LOCK, OUTBOARD SPOILER ACTUATORS
3847	C27003	RUDDER SLING
3848	C27003-1	SLING HANDLE RUDDER
3849	C27003-3	SLING ASSEMBLY ( WORKING LOAD 163 LBS. )
3850	C27003-31	Sling Equipment - Rudder Removal Installation



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3851	C27003-36	Lower Plate
3852	C27003-38	SLING EQPT
3853	C27003-39	REMOVAL/INSTALLATION SLING - RUDDER
3854	C27003-40	Cable Assy
3855	C27022	N/A
3856	C27022-1	Clamp Set - Trailing Edge Flap Torque Tube
3857	C27022-2	CLAMP
3858	C27022-3	CLAMP
3859	C27022-5	CLAMP HALF -0 TRAILING EDGE FLA
3860	C27022-7	ROD -0 TRAILING EDGE FLA
3861	C27022-9	KNOB -0 TRAILING EDGE FLA
3862	C27030	FLAP BACKLASH TOOL
3863	C27030-1	N/A
3864	C27030-100	Cable Assy
3865	C27030-101	Lever half AFT
3866	C27030-102	Load nose
3867	C27030-103	Lever half FWD
3868	C27030-104	Usage Placard
3869	C27030-105	Identification Tag
3870	C27030-106	Storage Box Assy
3871	C27030-12	DIAL GAUGE ASSY
3872	C27030-13	Adapter
3873	C27030-14	Arm Aft Assy
3874	C27030-17	Spring Retainer
3875	C27030-18	Arm Fwd Assy
3876	C27030-2	TEST EQPT - FLAP SCREW BACKLASH
3877	C27030-22	POINT ADAPTOR
3878	C27030-23	Arm Aft
3879	C27030-24	End Cap
3880	C27030-25	Arm Fwd
3881	C27030-26	Hex But
3882	C27030-27	Shoulder Screw
3883	C27030-28	Tap Bolt
3884	C27030-29	Magnet
3885	C27030-3	MEASURE ASSEMBLY
3886	C27030-32	Usage Placard
3887	C27030-33	Test Equipment - Flap Screw Backlash
3888	C27030-34	BACKLASH TOOL
3889	C27030-35	TEST EQUPT. FLAPBACK
3890	C27030-36	Lever Aft Assy
3891	C27030-37	Lever Fwd Assy
3892	C27030-38	Top Clevis Assy
3893	C27030-39	Horseshoe Fitting
3894	C27030-40	Lever Half Aft
3895	C27030-41	Lever Half Dwd
3896	C27030-42	Top Clevis
3897	C27030-43	Load Pad
3898	C27030-44	Load Pad
3899	C27030-45	Load Nose
3900	C27030-46	Spacer
3901	C27030-48	Usage Placard
3902	C27030-49	TEST EQPT, FLAP SCREW BACKLASH SEAL INST. QUIP'T, TE FLAP DRIVE
3903	C27030-50	Aft Arm Assy
3904	C27030-51	LEVER HALF AFT
3905	C27030-52	Arm Aft
3906	C27030-53	Arm Fwd
3907	C27030-54	LEVER HALF FWD
3908	C27030-55	Spacer
3909	C27030-56	Horseshoe Fitting
3910	C27030-57	LARGE TOP CLEVIS
3911	C27030-59	SMALL TOP CLEVIS
3912	C27030-6	Storage Box Assy
3913	C27030-60	STORAGE BOX
3914	C27030-62	BACKLASH TOOL
3915	C27030-63	CLAMP
3916	C27030-64	LEVER AFT
3917	C27030-65	LEVER FWD
3918	C27030-66	Arm Fwd Assy
3919	C27030-67	Usage Placard
3920	C27030-68	Washer



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3921	C27030-69	Washer
3922	C27030-7	Storage Box Assy
3923	C27030-70	Screw
3924	C27030-71	Warning Streamer
3925	C27030-72	Bolt
3926	C27030-73	Bolt
3927	C27030-74	Spring
3928	C27030-75	Calbe Assy
3929	C27030-76	Dial Gauge Eqpt
3930	C27030-77	Washer
3931	C27030-79	Spring Compression
3932	C27030-80	Pin
3933	C27030-81	Toggle Pad
3934	C27030-82	Dent Pin
3935	C27030-83	Cable Assy
3936	C27030-84	3/4 " Socket
3937	C27030-85	Spring Pin
3938	C27030-86	Screw Mechanical
3939	C27030-87	Ball Plunger
3940	C27030-88	E Ring
3941	C27030-89	Screw
3942	C27030-90	Identification Tag
3943	C27030-91	Storage Box
3944	C27030-92	Identification Tag
3945	C27030-93	Storage Box
3946	C27030-94	Test Equipment - Flap Screw Backlash
3947	C27030-95	Backlash tool assy
3948	C27030-96	Storage Box Assy
3949	C27030-97	Clamp Assy
3950	C27030-98	Lever Aft Assy
3951	C27030-99	Lever Fwd Assy
3952	C27033-5	Wrench - Retaining Nut, Stabilizer Trim Actuator
3953	C27033-6	Wrench - Retaining Nut, Stabilizer Trim Actuator
3954	C27034	SLING EQPT. ELEVATOR REMOVAL/INSTALLATION
3955	C27034-1	Sling - Elevator Removal/Installation
3956	C27034-10	MOUNTING PAD 2EA WHITH BOLTS (4EA - J644P18A) AND SHACKLES (2EA)
3957	C27034-11	RESTRAINT ASSY
3958	C27034-13	STRAP ASSY
3959	C27034-2	BRACKET ASSY
3960	C27034-3	Fitting Assy
3961	C27034-31	SLING EQPT - ELEVATOR REMOVAL/INSTALLATION
3962	C27034-4	Sling assy
3963	C27034-5	Strap assy
3964	C27034-6	BOX
3965	C27034-7	PAD
3966	C27034-8	PLATE
3967	C27034-9	RESTRAINT
3968	C27035	SLING EQPT. RUDDER REMOVAL/INSTALLATION
3969	C27035-20	Sling Equipment - Rudder Removal/Installation
3970	C27035-21	Beam Assy
3971	C27035-22	Strap Assy
3972	C27035-23	Mounting Pad
3973	C27035-25	TOOL
3974	C27035-3	Tether Assy
3975	C27035-5	Storage Box Assy
3976	C27035-6	WEB ASSY 2ea WITH SHACKLES
3977	C27038	LOCKPIN L.E. CRUISE DPRESSURIZATION VALVE
3978	C27038-1	LOCKOUT PIN - L. E. CRUISE DEPRESSURIZATION VALVE (THE BOEING COMPANY)
3979	C27038-2	Pin Assy
3980	C27038-3	Storage Box Assy
3981	C27038-4	PIN
3982	C27038-5	Usage Placard
3983	C27038-6	PIN - LOCKOUT DEPRESSURIZATION VALVE
3984	C27045	RIGGING EQPT. SLAT
3985	C27045-1	Kit - Rigging Equipment, Slat
3986	C27045-2	Gauge Assy
3987	C27045-4	Gage pin
3988	C27045-5	Preload Shim Assy
3989	C27045-6	V BLOCK
3990	C27045-7	GAGE HANDLE



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
3991	C27045-8	GAGE BUSHING
3992	C27045-9	SHIM
3993	C27046	LOCK SET INBOARD GROUND SPOILER ACTUATOR
3994	C27046-1	LOCK SET INBOARD GROUND SPOILER ACTUATOR
3995	C27046-13	LOCK SET INBOARD GROUND SPOILER ACTUATOR
3996	C27046-14	LOCK ASSEMBLY
3997	C27046-17	LOCK SET - INBOARD GROUND SPOILER ACTUATOR
3998	C27046-18	PADDING
3999	C27046-19	LOCK HALF
4000	C27046-2	INBOARD SPOILER ACTUATOR LOCK
4001	C27046-21	LOCK SET - INBOARD GROUND SPOILER ACTUATOR
4002	C27047	LOCK SET FLIGHT SPOILER ACTUATOR
4003	C27047-1	FLIGHT SPOILER LOCK SET
4004	C27047-16	LOCK SET FLIGHT SPOILER ACTUATOR
4005	C27047-19	LOCK SET FLIGHT SPOILER ACTUATOR
4006	C27047-20	LOCK SET FLIGHT SPOILER ACTUATOR
4007	C27047-41	LOCK SET FLIGHT SPOILER ACTUATOR
4008	C27047-42	LOCK SET FLIGHT SPOILER ACTUATOR
4009	C27047-43	LOCK SET FLIGHT SPOILER ACTUATOR
4010	C27047-44	SHORT LOCK ASSEMBLY
4011	C27047-51	LONG LOCK HALF ASSY
4012	C27050	HANDLING EQPT REM/INSTL STAB JACKSCREW
4013	C27050-125	Handling Equipment - Removal/Installation, Stabilizer Jackscrew
4014	C27050-126	FORWARD SUPPORT ASSEMBLY
4015	C27050-127	AIRWORKS123
4016	C27050-32	HANDLING EQPT - JACKSCREW, STABILIZER R/I
4017	C27050-33	HALF COLLAR
4018	C27050-35	PLACARD
4019	C27050-36	HANDLING EQPT
4020	C27050-82	Handling Equipment - Removal/Installation, Stabilizer Jackscrew
4021	C27050-85	LOCATOR ASSEMBLY (C27050-125)
4022	C27051	LOCK SET LE SLAT AND KRUEGER FLAP ACTUATORS
4023	C27051-1	Lock Set - Leading Edge Slat and Krueger Flap Actuators
4024	C27051-2	FLAP LOCK ASSEMBLY
4025	C27051-28	Usage Placard
4026	C27051-29	KIT LOCK SAFETY SLAT/FLAP
4027	C27051-3	Lock assy, slat
4028	C27051-49	DEACTIVATION TOOL
4029	C27051-7	Lock Half Assy
4030	C27051-9	Tube Assy
4031	C27052	SLING EQPT. TRAILING EDGE FLAPS
4032	C27052-1	TE FLAP SLING
4033	C27052-25	SLING EQPT
4034	C27052-33	Hoist Ring
4035	C27052-39	SLING EQPT-TRAILING EDGE FLAPS
4036	C27052-4	Strap assy
4037	C27052-6	INBOARD FITTING
4038	C27052-7	FITTING
4039	C27052-8	INBOARD WEBING ASSY
4040	C27055-1	SLING -AILERON
4041	C27056	SLING EQPT-LEADING EDGE SLAT. REMOVAL AND INSTALLATION
4042	C27056-16	BRACKET STRAP
4043	C27056-19	Sling Equipment - Leading Edge Slat, Removal and Installation
4044	C27056-2	SPREADER BAR
4045	C27056-20	WEDGE
4046	C27056-35	SLING -- LEADING EDGE SLAT REM
4047	C27056-4	LOWER FITTING
4048	C27060	ADAPTER EQPT. CONTROL WHEEL
4049	C27060-1	ADAPTER EQPT - CONTROL WHEEL
4050	C27060-2	Plate Assy
4051	C27060-3	Clamp Assy
4052	C27060-4	Opp 3
4053	C27060-5	Knob Assy
4054	C27060-6	Storage Box Assy
4055	C27060-7	Clamp Block
4056	C27060-8	Clamp Block
4057	C27060-9	Clamp Plate
4058	C27064	Torque Wrench Adapter - Manual Stabilizer Trim Wheel
4059	C27064-1	Torque Wrench Adapter - Manual Stabilizer Trim Wheel
4060	C27064-10	Placard



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4061	C27064-2	Adapter Assy
4062	C27064-3	Box Assy
4063	C27064-4	Socket Assy
4064	C27064-5	Plate
4065	C27064-6	Boss
4066	C27064-7	Hex Bar
4067	C27064-8	Shaft
4068	C27064-9	Washer
4069	C27066	LOCK EQPT AILERON/ELEVATOR PCU INPUT ROD (POGO)
4070	C27066-1	Lock Equipment - Aileron/Elevator PCU Input Rod (POGO)
4071	C27066-2	STORAGE BOX
4072	C27066-3	COLLAR
4073	C27066-4	COLLAR LOCK ASSY (2ea)
4074	C27066-5	COLLAR HALF
4075	C27069	RIGGING EQPT. INTERLOCK VALVE CABLE GROUND SPOILER
4076	C27069-1	RIGGING EQPT.
4077	C27069-12	Rigging Equipment - Interlock Valve Cable, Ground Spoiler
4078	C27069-2	ARM ASSY
4079	C27069-20	Rigging Equipment - Interlock Valve Cable, Ground Spoiler
4080	C27069-21	Arm Assembly
4081	C27069-23	Large Insert
4082	C27069-5	INSERT
4083	C27069-7	CABLE CATCH
4084	C27075	N/A
4085	C27075-1	Spanner Wrench - Brake Nut, Stabilizer Trim Actuator
4086	C27075-2	WRENCH
4087	C27075-9	WRENCH SPANNER
4088	C27078-2	PROTACTOR ASSEMBLY
4089	C27082	PUSROD ADJUSTMENT ELEVATOR TAB & AILERON
4090	C27082-1	Fixture Equipment - Pushrod Length Adjustment, Elevator Tab and Aileron
4091	C27082-2	Fixture assembly
4092	C27083	RIGGING BAR
4093	C27083-1	Rigging Bar - Elevator Tab
4094	C27083-18	RIGGING BAR - ELEVATOR TAB
4095	C27083-2	RIGGING BAR- ELEVATOR TAB
4096	C27085	REM/INSTR EQPT. TAB MECHANISM ASSY ELEVATOR CONTROL
4097	C27085-1	REMOVAL/INSTALLATION EQPT-TAB MECHANISM ASSY, ELEVATOR CONTROL
4098	C27085-2	Aft Pin Puller Assembly
4099	C27085-20	Plug
4100	C27085-23	Dowel Pin
4101	C27085-26	Short Punch Assy
4102	C27085-27	Medium Punch Assy
4103	C27085-28	Long Punch Assy
4104	C27085-3	FORWARD BUSHING PULLER ASSY
4105	C32011-7	SOCKET EQPT - BRAKE DISCONNECT VALVE
4106	C32011-8	TOOL
4107	C32012	REM/INSTR EQPT. WHEEL RETENTION NUT MLG AND NLG
4108	C32012-1	MLG / NLG AXLE NUT SOCKET EQPT.
4109	C32012-12	Removal/Installation Equipment - Wheel Retention Nut, Main Landing Gear and Nose Landing Gear
4110	C32012-13	ADAPTER
4111	C32012-2	MLG SOCKET ASSY
4112	C32012-3	NLG SOCKET
4113	C32012-8	REMOVAL/INSTR EQPT - WHEEL RETENTION NUT, MLG AND NLG (THE BOEING COMPANY)
4114	C32012-9	MLG SOCKET ASSY
4115	C32013	TORQUE WRENCH ADAPTER AFT BRG RTNR NUT MLG TRUN
4116	C32013-1	Torque Wrench Adapter - Aft Bearing Retainer Nut, Main Landing Gear Trunnion
4117	C32013-2	ADAPTER ASSEMBLY
4118	C32013-3	STORAGE BOX ASY
4119	C32013-4	HANDLE
4120	C32013-5	SLEEVE
4121	C32013-6	DOWEL PIN
4122	C32013-7	ROLL PIN
4123	C32014	SPRING EXTENDER DOWNLOCK NOSE AND MLG
4124	C32014-1	Spring Extender - Downlock, Nose and Main Landing Gear
4125	C32014-17	PLACARD
4126	C32014-2	Spring Extender
4127	C32014-3	ROD
4128	C32014-4	LEAD SCREW
4129	C32014-5	DRIVE ADAPTER
4130	C32014-6	KNURLED KNOB



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4131	C32014-7	ROLL PIN
4132	C32014-8	CLAMP
4133	C32016	REM/INSTL EQPT. NLG LOWER SEALS
4134	C32016-2	SCRAPER PLUNGER
4135	C32016-3	SCRAPER REDUCER
4136	C32016-33	Removal/Installation Equipment - Nose Landing Gear Lower Seals
4137	C32016-35	CENTERING ASSEMBLY
4138	C32016-4	SCRAPER RETAINER
4139	C32016-46	Removal/Installation Equipment - Nose Landing Gear Lower Seals
4140	C32016-47	Ram assy
4141	C32016-5	SCRAPER LOCK ASSEMBLY
4142	C32017	REPLACEMENT EQPT LWR BEARING SEALS MLG
4143	C32017-1	STRUT SEAL EQUIP
4144	C32017-13	Spring Pin
4145	C32017-4	SPACER ASSEMBLY
4146	C32017-43	REPLACEMENT EQPT - LOWER BEARING SEALS, MLG
4147	C32017-50	Usage placard
4148	C32017-51	Usage placard
4149	C32017-52	REPLACEMENT EQPT - MLG LWR BEARING SEALS
4150	C32017-53	REPLACEMENT EQPT - MLG LWR BEARING SEALS
4151	C32019	EXTENSION ORIFICE TUBE NOSE GEAR SHOCK STRUT
4152	C32019-1	Extension - Orifice Tube, Nose Gear Shock Strut
4153	C32019-2	EXTENSION
4154	C32021	WRENCH SET RETAINER NUT REM/INSTL ANTI SKID TRANSDUCER MLG
4155	C32021-1	WRENCH SET - RETAINER NUT, ANTI SKID TRANS MLG
4156	C32021-4	SPANNER
4157	C32021-5	Red Transducer Adapter Assembly
4158	C32021-6	TOOL
4159	C32021-7	TOOL
4160	C32021-8	Adapter
4161	C32022	THREAD PROTECTOR EQPT. MLG/NLG AXLE
4162	C32022-12	BRAKE PROTECTOR TUBE
4163	C32022-16	AXLE THREAD PROTECTOR
4164	C32022-17	PROTECTOR - THREAD, EQPT.
4165	C32022-2	PROTECTOR - THREAD, EQPT.
4166	C32022-20	NLG AXLE THREAD PROTECTOR EQPT.
4167	C32022-23	PROTECTOR - THREAD, EQPT.
4168	C32022-26	THREAD PROTECTOR
4169	C32022-3	THREAD PROTECTOR
4170	C32022-32	UNDERSIZED MLG THREAD PROTECTOR
4171	C32022-38	THREAD PROTECTOR
4172	C32022-39	THREAD PROTECTOR EQPT
4173	C32025	SPANNER WRENCH GLAND NUT NLG
4174	C32025-1	Spanner Wrench - Gland Nut, Nose Landing Gear
4175	C32025-10	Storage Box Assy
4176	C32025-11	Placard
4177	C32025-7	Spanner Wrench - Gland Nut, Nose Landing Gear
4178	C32025-8	WRENCH ASSEMBLY
4179	C32026	DOWNLOCK EQPT - NLG AND MLG * FLYAW
4180	C32026-1	Downlock Equipment - Nose Landing Gear and Main Landing Gear
4181	C32026-12	EQPT DOWNLOCK
4182	C32026-14	Quick Release Pin
4183	C32026-15	EQPT - DOWNLOCK, NLG AND MLG
4184	C32026-16	PIN LOCK SAFETY NLG/
4185	C32026-2	PIN LOCK SAFETY NLG/
4186	C32026-6	NG PIN
4187	C32029	PIN INSTLjRMLV KIT MLG
4188	C32029-1	KIT C32029-1
4189	C32029-11	DRIVER - SLUG
4190	C32029-12	THREAD PROTECTOR
4191	C32029-13	THREAD PROTECTOR
4192	C32029-15	THREAD PROTECTOR
4193	C32029-16	THREAD PROTECTOR
4194	C32029-3	ASSEMBLY - WRENCH ADAPTER
4195	C32029-31	WRENCH ADAPTER ASSY
4196	C32029-38	Pin Installation/Removal Kit - Main Landing Gear
4197	C32029-45	Pin Installation/Removal Kit - Main Landing Gear
4198	C32029-48	WRENCH ADAPTER
4199	C32029-49	WRENCH ADAPTER
4200	C32029-50	WRENCH ADAPTER



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4201	C32029-8	DRIVER - SLUG
4202	C32030-10	Retention Strap Equipment - Inner Cylinder, Nose and Main Landing Gear
4203	C32031	REM/INSTL EQPT AFT TRUNNION PIN MLG
4204	C32031-1	Removal/Installation Equipment - Aft Trunnion Pin, Main Landing Gear
4205	C32031-11	PULL ADAPTER
4206	C32031-12	PULL WASHER
4207	C32031-14	SHAFT
4208	C32031-15	HANDLE
4209	C32031-22	EQPT - REMOVAL/INSTALLATION, MLG AFT TRUNNION PIN
4210	C32031-8	PUSH ADAPTER
4211	C32033	REM/INSTL EQPT TRUNNION PIN NLG
4212	C32033-1	Removal/Installation Equipment - Trunnion Pin, Nose Landing Gear
4213	C32033-2	NLG ALIGNMENT SLUGS
4214	C32033-20	SMALL SLIDE HAMMER
4215	C32033-21	SLIDE SCREW
4216	C32033-22	SLIDE HAMMER
4217	C32033-4	DRAG STRUT ALIGNMENT SLUG
4218	C32033-5	TRUNNION PIN PULLER
4219	C32033-6	R/I EQPT - TRUNNION PIN
4220	C32034	RMVL/INSTL EQPT MLG
4221	C32034-14	SIDE STRUT ATTACH ASSEMBLY
4222	C32034-211	RMVL/INSTL EQPT, MLG (THE BOEING COMPANY)
4223	C32034-227	Removal/Installation Equipment - Main Landing Ge
4224	C32034-23	HYDRAULIC CIRCUIT
4225	C32034-246	DJ. HANDLE ASSY
4226	C32034-273	REM / INS. DOLLY
4227	C32034-279	WINCH CABLE ASSY
4228	C32034-33	Spring Pin
4229	C32034-37	PUMP
4230	C32035	METERING PIN RTNR RING REM/INSTL EQPT. NLG
4231	C32035-1	Metering Pin and Retainer Ring Removal/Installation Equipment - Nose Landing Gear
4232	C32035-3	SOCKET ASSEMBLY
4233	C32035-4	Ring Guide Assembly
4234	C32035-5	Knockout Rod Assembly
4235	C32035-6	WRENCH ASSEMBLY
4236	C32036-54	SPANNER
4237	C32036-8	LARGE CROWFOOT
4238	C32037	HOLDING FIXTURE MLG
4239	C32037-1	Holding Fixture - Main Landing Gear
4240	C32037-211	REMOVAL/INSTALL EQPT
4241	C32037-27	Side Strut Horiz Tube Assy
4242	C32037-3	Side Strut Attach Assembly
4243	C32037-4	Side Strut Attach Assembly
4244	C32037-5	Jackball Pin Assembly
4245	C32037-6	Jackball Fitting
4246	C32037-7	Hand Knob
4247	C32037-8	Shoulder Screw
4248	C32038	ROD END BEARING RMVL/INSTL EQPT. ACTUATORS MLG
4249	C32038-37	RETRACT WRENCH
4250	C32038-39	RETRACT SPANNER
4251	C32038-4	ACTUATOR RETAINER
4252	C32038-41	DOWNLOCK SPANNER
4253	C32038-42	UPLOCK SPANNER
4254	C32038-43	DOWNLOCK ROD
4255	C32038-44	UPLOCK ROD END WRENCH
4256	C32038-45	RETRACT ROD END WRENCH
4257	C32038-57	V-BLOCK ASSEMBLY
4258	C32040	N/A
4259	C32040-1	Spanner Wrench - NLG Steering Collar Retainer
4260	C32040-4	SPANNER WRENCH
4261	C32040-6	Spanner Wrench - NLG Steering Collar Retainer
4262	C32040-8	Spanner wrench
4263	C32041	BUILD UP EQPT. NLG
4264	C32041-1	BUILD UP EQPT
4265	C32041-40	BUILD UP EQPT
4266	C32041-45	Identification Tag
4267	C32041-57	Buildup Equipment - Nose Landing Gear
4268	C32041-58	Sling Assembly
4269	C32041-62	Clamp Assembly
4270	C32041-64	Plain Washer





# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4271	C32041-67	BUILDUP EQPT - NLG
4272	C32042	REM/INSTL EQPT. ORIFCE TUBE AND METERING PIN MLG
4273	C32042-1	REM/INST EQUPT. ORIFICE
4274	C32042-42	Long Screw
4275	C32042-5	Metering Pin Puller Assembly
4276	C32042-6	Upper Tube Assembly
4277	C32042-61	Removal/Installation Equipment - Orifice Tube and Metering Pin, Main Landing Gear
4278	C32042-62	Orifice Tube Lower Tube Assembly
4279	C32042-64	Upper plate
4280	C32053	FIXTURE EQPT. SIDE STRUT ASSY MLG
4281	C32053-1	Fixture Equipment - Side Strut Assembly, Main Landing Gear
4282	C32053-10	Medium Diamond Check Pin
4283	C32053-12	Spacer
4284	C32053-37	FIXTURE EQPT - SIDE STRUT ASSY MLG
4285	C32053-39	Large Diamond Check Pin
4286	C32053-41	FIXTURE EQPT
4287	C32053-5	Pin A
4288	C32053-6	Pin B
4289	C32053-7	Nut
4290	C35003	N/A
4291	C35003-1	PIN - SAFETY, FIRING PIN RETRACTION (A35001-8 PART OF A35001-10 EQPT), SPL-1937
4292	C35003-10	Retraction Equipment - Firing Pin, Oxygen System
4293	C35003-11	SAFETY PIN
4294	C35003-13	RETRACTION EQPT
4295	C35003-14	Warning Streamer
4296	C35003-15	Cable Assy
4297	C35003-16	Identification Tag
4298	C35003-17	Storage Box
4299	C35003-18	Storage Box Assy
4300	C35003-19	Usage Placard
4301	C35003-2	RETRACTION EQUIP. FIRING PIN OXY SYS
4302	C35003-20	Retraction Equipment - Firing Pin, Oxygen System
4303	C35003-21	Release Pin Assy
4304	C35003-22	Storage Box Assy
4305	C35003-23	Release Pin
4306	C35003-26	Usage Placard
4307	C35003-3	SAFETY PIN ASSY
4308	C35003-5	Pliers
4309	C35003-6	Lower Jaw
4310	C35003-7	Upper Jaw
4311	C35003-8	SAFETY PIN ASSY
4312	C36002	DISPATCH KIT PRECOOLER CONTROL VALVE
4313	C36002-1	DISPATCH KIT
4314	C36002-2	Storage Box Assy
4315	C36002-3	STORAGE BOX
4316	C36002-4	Storage Box
4317	C36002-5	Identification Tag
4318	C36002-6	Usage Placard
4319	C38001-29	Drain Mast Plug - Waste Water
4320	C38002-1	PLUG EQPT-SKIN FITTING-DOOR SILL DRAIN
4321	C47248	GUIDE CONE
4322	C47253	TENONED PLATE
4323	C47259	EXTRACTOR
4324	C47261	NLG WHEEL AXLE NUT ADAPTOR
4325	C47263	ADAPTER
4326	C47271	LOCATING PIN
4327	C47569	GUIDE CONE
4328	C47574	EXTRACTOR
4329	C47576	EXTRACTOR
4330	C47578	SCREW
4331	C47578-1	Nut
4332	C47578-2	SCREW
4333	C47580	SCREW
4334	C47725	ADAPTER
4335	C47941	CLAMP
4336	C47949	BUSH
4337	C47951	EXTRACTOR
4338	C47963	EXTRACTOR
4339	C47964	CLAMP
4340	C47981	WRENCH



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4341	C48287	EXTENSION SLEEVE
4342	C49003	N/A
4343	C49003-1	CRADLE APU
4344	C49003-10	FRAME WEIGHT ASSY
4345	C49003-2	APU CRADLE C49003-2
4346	C49003-3	BASE
4347	C49003-6	BRACKET
4348	C49003-7	SLIDE PLATE
4349	C49003-8	FWD YOKE
4350	C49003-9	AFT YOKE
4351	C49006	THREADED PROTECTOR EQPT. APU MOUNT BOLTS
4352	C49006-1	THREAD PROTECTOR EQPT - APU MOUNT BOLTS
4353	C49006-2	THREAD PROTECTOR
4354	C49006-3	Alignment pin assy
4355	C49006-4	BOX
4356	C49007	HOIST EQPT. AUXILIARY POWER UNIT
4357	C49007-1	EQUIP HANDLE HOIST A
4358	C49007-20	Plain Washer
4359	C49007-35	Hoist Equipment - Auxiliary Power Unit
4360	C49007-36	Hoist Equipment - Auxiliary Power Unit
4361	C49007-42	Hoist Equipment - Auxiliary Power Unit
4362	C49007-43	Fwd Arm Assy
4363	C49007-47	BALL LOCK PIN
4364	C49007-48	DETENT PIN
4365	C49007-50	STORAGE BOX
4366	C49007-52	CABLE ASSY
4367	C49010	CRADLE ASSY AE131-9B APU
4368	C49010-20	CONE BOLT
4369	C49010-21	NUT
4370	C49010-26	NUT
4371	C49010-27	WASHER
4372	C49010-44	Fwd Attachment
4373	C49010-48	RH Aft Attach Bar
4374	C49010-50	Cradle Assembly - AE131-9B Auxiliary Power Unit
4375	C52006	N/A
4376	C52006-1	ESCAPE SLIDE PASSENGER DOOR SIMULATOR
4377	C52006-12	RUBBER PAD
4378	C52006-14	THREADED ROD
4379	C52006-15	THUMB SCREW
4380	C52006-17	STRAP FITTING
4381	C52006-18	HOOK
4382	C52006-2	PLATE ASSEMBLY-20 LBS
4383	C52006-28	TUBE
4384	C52006-33	HAND KNOB
4385	C52006-34	RIGGING SIMULATOR - ESCAPE SLIDE, PASSENGER DOOR
4386	C52006-41	RIGGING SIMULATOR, ESCAPE SLIDE PAX
4387	C52006-5	RACK
4388	C52006-6	WEIGHT
4389	C52006-64	Rigging Simulator - Escape Slide, Passenger Door
4390	C52006-65	11 Lb Weight Assy
4391	C52006-7	WEIGHT
4392	C52006-74	Rigging Simulator - Escape Slide, Passenger Door
4393	C52006-74	RIGGING SIMULATOR - ESCAPE SLIDE PASSENGER DOOR
4394	C52006-75	Plate Assembly
4395	C52006-8	WEIGHT
4396	C52006-9	Foot
4397	C54001	SLING, ELEVATOR REMOVAL . INSTALL
4398	C54001-209	SCRAPPER
4399	C54001-32	N/A
4400	C54001-35	ATTACH PINS
4401	C54001-37	SLING EQPT
4402	C54001-38	Inbd Sling Assy
4403	C54001-5	Attach fitting assy
4404	C54015	SPANNER WRENCH THRUST REVERSER HINGE FITTING
4405	C54015-1	BEARING R/I WRENCH
4406	C54015-2	Spanner wrench
4407	C55002-1	SET - PUNCH, HORIZONTAL STABILIZER SECTION
4408	C55005	PIN REMOVAL EQPT. HORIZONTAL STABILIZER
4409	C55005-1	Pin Removal Equipment - Horizontal Stabilizer
4410	C55005-11	Pin Removal Equipment - Horizontal Stabilizer



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4411	C55005-13	PLUG ASSY
4412	C55005-19	EQUIP RMVL PIN H/S
4413	C55005-4	Clamp
4414	C55005-5	SCREW 5/8x5.5
4415	C55005-6	SCREW 5/8x3.0
4416	C55005-7	Screw
4417	C55005-8	THREAD PROTECTOR 1.4x2.5
4418	C55007	SLING EQPT. HORIZONTAL STAB REM/IN STL
4419	C55007-1	Sling Equipment - Horizontal Stabilizer Removal/Installation
4420	C55007-2	SLING ASSEMBLY
4421	C55007-29	Sling Equipment - Horizontal Stabilizer Removal/Installation
4422	C55007-31	SLING ASSY 1/4 DIA"
4423	C55010	N/A
4424	C55010-1	Sling Equipment - Vertical Fin
4425	C55010-15	PLATE
4426	C55010-16	PLATE
4427	C55010-17	ECC BUSHING A
4428	C55010-18	NARROW BUSHING
4429	C55010-19	SLOT BUSHING, SHORT
4430	C55010-2	Sling Assy
4431	C55010-20	BUSHING RETAINER
4432	C55010-21	BUSHING RETAINER
4433	C55010-22	PLATE
4434	C55010-23	PLATE
4435	C55010-24	ECC BUSHING C
4436	C55010-25	LONG BUSHING
4437	C55010-26	SLOT BUSHING, LONG
4438	C55010-27	ECC BUSHING B
4439	C55010-28	BUSHING
4440	C55010-29	PLATE
4441	C55010-30	PLATE
4442	C55010-33	Sling Equipment - Vertical Fin
4443	C55010-56	SLING EQPT - VERTICAL FIN
4444	C57002-2	WINGLET SLING
4445	C71003	TOOL
4446	C71003-247	BOOTSTRAP KIT CFM56-3
4447	C71006-6	THREAD PROTECTOR
4448	C71018-1	MANUFACTURING OF ALIGNMENT GUIDE-CONE BOLT FORWARD ENGINE MOUNT
4449	C71020	ENGINE BOOTSTRAP KIT
4450	C71020-91	Bootstrap Equipment - CFM56-7 Engine
4451	C75001-1	SWITCH PUSHER
4452	C76001-10	RIGGING PIN
4453	C78006-1	LOCK; ACTUATOR, REVERSER OPENING
4454	C78018	SLING EQPT. THRUST REVERSER CFM56-7
4455	C78018-1	SLING EQPT-THRUST REVERSER-CFM56-7
4456	C78018-13	THREAD PROTECTOR 2EA
4457	C78018-29	TOOL
4458	C78018-4	SLING
4459	C78018-47	EQPT - SLING, THRUST REVERSER, CFM56-7
4460	C78018-5	LATCH FTG
4461	C78018-50	SLING EQPT-THRUST REVERSER, CFM56-7
4462	C78018-52	TOOL
4463	C78018-53	STORAGE BOX ASSY
4464	C78018-54	BOLT
4465	C78019-1	T/R HOLD OPEN KIT
4466	C78019-15	COWL HOLD OPEN
4467	C78019-16	Hold Open Assy
4468	C78019-17	Center beam assy
4469	C78019-18	PIN STRUT ATTACHMENT
4470	C78019-19	Placard
4471	C78019-3	Storage Box Assy
4472	C78019-5	THRUST REVERSER ARM ASSEMBLY
4473	C78019-6	T/R arm assy
4474	C78019-7	Arm
4475	C78020	LATCHING TOOL-THRUST REVERSER C-DUCT HALVES
4476	C78020-1	T/R COWL LATCH TOOL
4477	C78020-11	T/R COWL LATCH TOOL
4478	C78020-14	TOOL - LATCHING, THRUST REVERSER C-DUCT HALVES
4479	C78020-15	LATCHING TOOL (WITHO
4480	C78020-16	LATCHNG TOOL



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4481	C78020-17	Storage Box Assy
4482	C78020-18	Storage Box Assy
4483	C78020-5	Dowel
4484	C78020-6	Vinyl Handle
4485	C78020-7	Usage Placard
4486	C78023	LOCK ASSY THRUST REVERSER ACTUATOR CFM56-7
4487	C78023-1	LOCK ASSY THRUST REVERSER ACTUATOR CFM56-7
4488	C78023-2	LOCK ASSY THRUST REVERSE NG
4489	C78023-3	Storage Box Assy
4490	C78023-4	LOCK
4491	C78023-5	Placard
4492	C78033	EQUIPMENT - HOLD OPEN, THRUST REVERSER COWL, LEAP-1B
4493	C78033-1	EQPT - HOLD OPEN, THRUST REVERSER COWL, LEAP-1B ENGINE
4494	CH1878-0520	ADAPTOR
4495	CH1878-0521	BLOCK
4496	CH1878-0522	BUSH
4497	CH1878-0523	SHOULDER SCREW
4498	CH1878-0525	LOCATOR
4499	CH1878-0528	LOCATION PEG
4500	CH1878-0546	SEAL GUIDE ENERGISER
4501	CH1878-0570	TORQUE ADAPTER
4502	CH1878-0579	PRESS TOOL AND BUSH
4503	CH1878-0588	HOLDING ROD
4504	CH1878-0739	SEAL ASSEMBLY TOOL
4505	CH1878-0740	GUIDE
4506	CH1878-0741	PUSHER
4507	CH1878-519	BASE PLATE
4508	CH723435	PIN - LOCKING THS ACTUATOR MECH. CONTROL
4509	CHA1878-0548	STTLING ASSY
4510	CTR5618-2D	BEARING LOCATOR
4511	CTR5618-3E	TEST STAND FORACTUATOR ASSY RETRACTION
4512	CUTA18070104C	LEE TOOL SET INSTALLATION AND EXTRACTION
4513	D23304000	SAFETY PIN - GROUNDLOCK, NLG
4514	D46002	CASTELLATED WRENCH
4515	D46009	EXTRACTOR
4516	D46046	CLAMP
4517	D46054	CLAMP
4518	D46083	WRENCH
4519	D46107	TENONED WRENCH
4520	D46110	COMPRESSION FIXTURE
4521	D46120	CLAMP
4522	D46189	EXTRACTOR
4523	D46218	POSITIONING TOOL
4524	D46219	EXTRACTOR
4525	D46224	EXTRACTOR
4526	D46226	EXTRACTOR
4527	D46301	PLATE
4528	D46345	CONNECTING BLOCK
4529	D46350	CONTROL EQPT
4530	D46369	EXTRACTOR
4531	D46454	WRENCH
4532	D46460	CASTELLATED WRENCH
4533	D46461	EXTRACTOR
4534	D46465	CASTELLATED WRENCH
4535	D46466	CLAMP
4536	D46468	RETAINING PIN
4537	D46469	RETAINING TOOL
4538	D46470	RETAINING TOOL
4539	D46478	HOLDING WRENCH
4540	D46484	EXTRACTOR
4541	D46485	EXTRACTOR
4542	D46489	GUIDE CONE
4543	D46491	RETAINING TOOL
4544	D46553	IDENTIFICATION PLATE
4545	D46554	IDENTIFICATION PLATE
4546	D46795	JAWS-FALSE
4547	D47365	CASTELLATED WRENCH
4548	D47578	PROTECTOR
4549	D47584	ADAPTER
4550	D47792	EXTRACTOR



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4551	D47855	WRENCH
4552	D4907003500051	SUBSTITUTION APU KIT
4553	DJS-32141	DRIVER, MISC.
4554	DJS-35263	DRIVER, MISC.
4555	DLS-33108	DRIVER, PIN
4556	DLS-33109	DRIVER, PIN
4557	DLS-33308	DRIVER, PIN
4558	DLS-33321	DRIVER, PIN
4559	DMS-27024	DRIVER, BEARING
4560	DMS-34186	DRIVER, BEARING
4561	DMS-37186	DRIVER, MISC.
4562	DRT67212	TO TORQUE TIGHTEN BOGIE PIVOT PIN NUT
4563	DRT68003	SPRING COMPRESSOR
4564	DRT68006	SPRING EXPANDER
4565	DRT68385	HOLDING FIXTURE
4566	DRT68817	TORQUE REACTOR
4567	DRT68838	GAG SCHOK ABSORBER
4568	DRT68842	BELLCRANK RESTRAINT
4569	DRT68865	TO ASSEMBLY BOGIE PIVOT PIN
4570	DRT68906	SPACER REMOVAL TOOL
4571	DRT68908	SPACER-BRAKE ROD
4572	DRT68909	SPACER-BRAKE ROD
4573	DRT68925	RECOIL NUT SPANNER
4574	DRT68930	GLAND HOUSING ASSY EXTRACTING TOOL
4575	DRT68973	INFLATION TOOLING
4576	DST190	PRESS PAD
4577	DST190-151	PRESS PAD
4578	DST190-152	PRESS PAD
4579	DST190-153	PRESS PAD
4580	DST190-154	PRESS PAD
4581	DST190-155	PRESS PAD
4582	DST190-156	PRESS PAD
4583	DST190-157	PRESS PAD
4584	DST190-158	PRESS PAD
4585	DST190-159	PRESS PAD
4586	DST190-160	PRESS PAD
4587	DST190-161	PRESS PAD
4588	DST190-162	PRESS PAD
4589	DST190-163	PRESS PAD
4590	DST190-164	PRESS PAD
4591	DST190-165	PRESS PAD
4592	DST190-166	PRESS PAD
4593	DST190-167	PRESS PAD
4594	DST190-168	PRESS PAD
4595	DST190-169	PRESS PAD
4596	DST190-170	PRESS PAD
4597	DST190-171	PRESS PAD
4598	DST190-172	PRESS PAD
4599	DST190-173	PRESS PAD
4600	DST190-174	PRESS PAD
4601	DST190-175	PRESS PAD
4602	DT2236	TACHOMETER (2.5 TO 99,999)RPM
4603	DZ27352-1	COMPENSING PLATE INSPECTION FIXTURE
4604	E10285	PULLER FILTER ASSY
4605	ED1761	TOOL SIZING VOLUMETRIC FUSE
4606	ES750-33	GAUGE-PDU ROLLER WEAR
4607	ES750-53	GAUGE ASSY
4608	ES750-99	GAUGE
4609	F 80-6-50007	SEAL ASSEMBLY TOOL
4610	F46052	ADAPTER
4611	F46153	RETAINING WRENCH
4612	F46495	PIN WRENCH
4613	F46753	PROTECTOR
4614	F467541000	PROTECTOR
4615	F46754-1000	PROTECTOR
4616	F47446	CASTELLATED WRENCH
4617	F47700	FORMING
4618	F47881	CONNECTING BLOCK
4619	F47941	PIN WRENCH
4620	F490700250051	APU SUBSTITUTION KIT



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4621	F65-0-3060	TEST FIXTURE
4622	F65-0-3170	TEST FIXTURE
4623	F65-0-3218	TARE FIXTURE 737-300 THRUST REVERSER VALVE
4624	F70199	INFLATION TOOL TIRE
4625	F70199-1	INFLATION TOOL - TIRE, ANALOG
4626	F70199-13	INFLATOR
4627	F70199-15	VALVE COVER
4628	F70199-17	INFLATION TOOL
4629	F70199-18	INFLATION TOOL - TIRE
4630	F70199-20	INFLATION TOOL
4631	F70199-24	Inflation Tool - Tire
4632	F70199-25	Inflation Tool - Tire
4633	F70199-52	TIRE INFLATOR
4634	F70199-53	INFLATION TOOL - TIRE
4635	F70199-6	AIRCHUCK
4636	F70200	OUTILLAGE
4637	F70200-1	STRUT INFLATION TOOL
4638	F70200-14	INFLATION TOOL STRUT
4639	F70200-15	HOSE
4640	F70200-17	Inflation Tool - Strut
4641	F70200-18	INFLATION TOOL - STRUT, DIGITAL
4642	F70200-20	Inflation Tool - Strut
4643	F70200-35	Inflation Tool - Strut
4644	F70200-4	NEEDLE VALVE
4645	F70200-6	AIR CHUCK
4646	F70207	KIT -0 RIGGING PINS. USED TO IMMOBILIZE
4647	F70207-107	Rigging Pin Kit - All System
4648	F70207-109	KIT - RIGGING PIN
4649	F70207-128	KIT - RIGGING PIN
4650	F70207-135	KIT - RIGGING PIN
4651	F70207-139	KIT - RIGGING PIN
4652	F70207-151	KIT - RIGGING PIN
4653	F70207-2	KIT - RIGGING PIN
4654	F70207-8	KIT - RIGGING PIN
4655	F70207-93	KIT - RIGGING PIN
4656	F70284-1	Wear Gauge Set - Plug and Receptacle, Ground Power
4657	F70312	WRENCHES
4658	F70312-1	WRENCHES
4659	F70312-10	CROWFOOT WRENCH
4660	F70312-11	Wrench-crowfoot
4661	F70312-12	Wrench-crowfoot
4662	F70312-13	CROW FOOT WRENCH
4663	F70312-14	WRENCH - CROWFOOT
4664	F70312-15	CROW FOOT WRENCH
4665	F70312-16	WRENCH-CROWFOOT
4666	F70312-17	Wrench Crowfoot
4667	F70312-18	WRENCH-CROWFOOT
4668	F70312-19	Wrench Crowfoot
4669	F70312-2	FWD WRENCH TRUNNION
4670	F70312-20	TORQUE WRENCH ADAPTOR
4671	F70312-21	Wrench Crowfoot
4672	F70312-22	KIT - CROWFOOT WRENCHES
4673	F70312-23	TORQUE WRENCH ADAPTER CROW-FOOT SPL-5284
4674	F70312-24	CROWFOOT WRENCH
4675	F70312-25	Wrench-crowfoot
4676	F70312-26	CROWFOOT WRENCH
4677	F70312-27	KIT - CROWFOOT WRENCHES
4678	F70312-28	Wrench-crowfoot
4679	F70312-29	Wrench-crowfoot
4680	F70312-3	KIT-CROWFOOT WRENCH
4681	F70312-30	KIT - CROWFOOT WRENCHES
4682	F70312-31	KIT - CROWFOOT WRENCHES
4683	F70312-32	Wrench-crowfoot
4684	F70312-34	WRENCH, CROWFOOT
4685	F70312-35	WRENCH-CROWFOOT
4686	F70312-36	TORSION LINK APEX NUT,MLG
4687	F70312-37	KIT - CROWFOOT WRENCHES
4688	F70312-38	KIT - CROWFOOT WRENCHES
4689	F70312-39	Wrench-crowfoot
4690	F70312-4	KIT-CROWFOOT WRENCH



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4691	F70312-40	Wrench-crowfoot
4692	F70312-41	Wrench-crowfoot
4693	F70312-42	Wrench
4694	F70312-45	Wrench-crowfoot
4695	F70312-46	WRENCH
4696	F70312-47	KIT - CROWFOOT WRENCHES
4697	F70312-48	Wrench-crowfoot
4698	F70312-49	Wrench-crowfoot
4699	F70312-50	WRENCH
4700	F70312-51	KIT - CROWFOOT WRENCHES
4701	F70312-52	Wrench-crowfoot
4702	F70312-767	767 Crow Foot Wrench Set
4703	F70312-8	WRENCH TRUNNION MLG
4704	F70330	BALANCING TOOL
4705	F70330-1	STATIC BAL EQPT
4706	F70330-10	FITTING ASSEMBLY
4707	F70330-104	Static Balance Equipment - Control Surfaces
4708	F70330-105	FITTING ASSY
4709	F70330-108	PIN AILERON
4710	F70330-109	PIN AILERON
4711	F70330-110	PIN ELEVATOR
4712	F70330-111	PIN RUDDER
4713	F70330-12	Support tip
4714	F70330-125	Static balance equip-control surfaces
4715	F70330-126	STATIC BALANCE EQPT - CONTROL SURFACES
4716	F70330-13	FITTING ASSEMBLY
4717	F70330-14	SUPPORT ASSY
4718	F70330-15	FITTING
4719	F70330-16	BEAM
4720	F70330-162	STATIC BALANCE EQPT - CONTROL SURFACES
4721	F70330-17	SUPPORT
4722	F70330-18	Support yoke assy
4723	F70330-19	Support blade assy
4724	F70330-2	Static Balance Eqpt - 727 Kit
4725	F70330-21	ADJUSTABLE TOOL STAND
4726	F70330-24	ADAPTOR SET
4727	F70330-25	ADAPTOR SET
4728	F70330-3	Static Balance Equipment - Control Surfaces
4729	F70330-32	BEAM
4730	F70330-33	Column Assy
4731	F70330-4	Static Balance Equipment - Control Surfaces
4732	F70330-5	FITTING ASSEMBLY
4733	F70330-6	FITTING ASSEMBLY
4734	F70330-8	FITTING ASSEMBLY
4735	F70330-87	STATIC BALANCE EQUIP. KIT
4736	F70330-88	FITTING
4737	F70330-89	TOOL
4738	F70330-9	FITTING ASSEMBLY
4739	F70330-99	STATIC BALANCE EQPT - CONTROL SURFACES
4740	F70336	SPANNER WRENCH ASSIST HANDLE MAIN ENTRY DOOR
4741	F70336-1	Spanner Wrench - Assist Handle, Main Entry Door
4742	F70336-2	Handle
4743	F70336-3	Pin
4744	F71267	WRENCH ASSEMBLY PINION GEAR
4745	F71267-1	PINION GEAR WRENCH ASSY
4746	F71267-2	HANDLE
4747	F71313	WRENCH SOCKET ROD END BEARING
4748	F71313-10	Wrench - Socket, Rod End Bearing
4749	F71313-12	Wrench - Socket, Rod End Bearing
4750	F71313-16	Wrench - Socket, Rod End Bearing
4751	F71313-20	TOOL
4752	F71313-33	Wrench - Socket, Rod End Bearing
4753	F71313-36	Wrench - Socket, Rod End Bearing
4754	F71313-37	Wrench - Socket, Rod End Bearing
4755	F71313-41	Wrench - Socket, Rod End Bearing
4756	F71313-8	Wrench - Socket, Rod End Bearing
4757	F71329	Leakage Tracing Device - Integral Tank Leakage Test
4758	F71336	LOCK ASSY STABILIZER TRIM
4759	F71336-10	BRACKET
4760	F71336-13	END PLATE





## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4761	F71336-17	METAL TAG
4762	F71336-19	SCREW
4763	F71336-20	TOOL
4764	F71336-23	LEG
4765	F71336-5	PIN
4766	F71336-500	LOCK ASSY - STAB. TRIM
4767	F71336-501	Lock Assembly - Stabilizer Trim
4768	F71336-6	Nut
4769	F71422	TEST JIG CABLE TENSION STABILIZER TRIM ACTUATOR
4770	F71422-200	Boeing
4771	F71422-500	TEST JIG
4772	F71422-501	Boeing
4773	F71422-829	Test Jig - Cable Tension, Stabilizer Trim Actuator
4774	F71422-839	Test Jig - Cable Tension, Stabilizer Trim Actuator
4775	F71422-844	Test Jig - Cable Tension, Stabilizer Trim Actuator
4776	F71422-884	TEST FIXTURE - STABILIZER TRIM ACTUATOR
4777	F72719	TOWING EYE BOLT ASSEMBLY MAIN GEAR
4778	F72719-3	TOWING EYEBOLT ASSY
4779	F72719-5	Towing Eye Bolt Assembly - Main Gear
4780	F72719-500	Towing Eye Bolt Assembly - Main Gear
4781	F72719-6	SPACER
4782	F72719-7	EYEBOLTS
4783	F72719-8	MLG TOWING
4784	F72735	GROUND LOCK ASSY
4785	F72735-1	PIN
4786	F72735-12	PIN
4787	F72735-13	PIN SAFETY TOW NLG..
4788	F72735-2	LANYARD
4789	F72735-3	CABLE
4790	F72735-4	PIN SAFETY TOW NLG
4791	F72735-5	Placard
4792	F72735-6	SPACER
4793	F72735-7	PIN - NOSE GEAR
4794	F72735-8	MAIN AXLE PROTECTOR
4795	F72913	TOOL
4796	F72913-1	PROTECTION, AXLE
4797	F72913-10	AXLE & THREAD PROTECTOR, MAIN & NOSE GEAR
4798	F72913-11	THREAD PROTECTOR MLG
4799	F72913-13	PROTECTOR - THREAD NLG & MLG AXLE
4800	F72913-14	AXLE NUT PROTECTOR
4801	F72913-15	XLE THREAD PROTECTOR, NLG (UNDERSIZED)
4802	F72913-3	AXLE & THREAD PROT. MAIN & NOSE GEAR
4803	F72913-6	AXLE THD PROTECTOR NLG B727
4804	F72913-8	AXLE PROTECTOR MLG
4805	F72950	AUXILIARY POWER UNIT TRANSPORTATION EQUIP
4806	F72950-138	Auxiliary Power Unit Transportation Equipment
4807	F72950-158	DOLLY APU – MODEL
4808	F72959	SPANNER WRENCH AN STANDARD TYPE
4809	F72959-1	Spanner Wrench - AN Standard Type
4810	F72959-31	MFD PARTS FOR -31
4811	F72959-33	Spanner Wrench - AN Standard Type
4812	F72959-35	Spanner Wrench - AN Standard Type
4813	F72959-36	Spanner Wrench - AN Standard Type
4814	F72959-37	Spanner Wrench - AN Standard Type
4815	F72959-4	Spanner Wrench - AN Standard Type
4816	F72959-40	Spanner Wrench - AN Standard Type
4817	F72959-42	Spanner Wrench - AN Standard Type
4818	F73010	LEAKAGE TEST CHAMBER FWD LAVATORY DRAIN
4819	F73010-1	Boeing
4820	F73010-18	TOOLING
4821	F73010-20	BOX WELDMENT
4822	F73010-21	PLATE DETAILS
4823	F73010-22	BOX BODY
4824	F73010-24	Storage Box Assy
4825	F73010-26	BOX END PLATE
4826	F73010-27	LEAKAGE TEST CHAMBER
4827	F80017-33	LOCK ASSY-GROUND/FLT SPOILERS
4828	F80018	SPANNER WRENCH
4829	F80020	ADAPTER WRENCH
4830	F80-0-2568	RETAINER INSTALLER



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4831	F80027	LOCK EQPT HORIZONTAL STABILIZER
4832	F80027-1	HORIZONTAL STAB LOCK
4833	F80027-13	HORIZONTAL STABILIZER LOCK ASSEMBLY
4834	F80027-18	ASSEMBLY - LOCK, HORIZONTAL STABILIZER
4835	F80-0-2735	ROLLER STAKE TOOL & BASE
4836	F80027-41	ASSEMBLY - LOCK, HORIZONTAL STABILIZER
4837	F80-0-2772	ASSEMBLY FIXTURE
4838	F80033	ADAPTER ASSY WRENCH HOOK SPANNER
4839	F80033-1	Adapter Assembly - Wrench, Hook Spanner
4840	F80033-2	Wrench
4841	F80033-3	Socket
4842	F80033-4	Wrench Assembly
4843	F80033-5	Storage Box Assy
4844	F80033-6	Wrench
4845	F80033-7	Usage Placard
4846	F80033-8	Adapter Assembly - Wrench, Hook Spanner
4847	F80033-9	MLG OLEO GLAND SPANNER
4848	F80040-2	LOCK ASSY-GROUND SPOILER ACTUATOR
4849	F80048	LOCK ASSEMBLY LEADING EDGE FLAP AND SLAT ACTUATORS
4850	F80048-84	LOCK ASSEMBLY
4851	F80048-89	ACTUATOR LOC ASY-LEAD EDG
4852	F80048-90	LOCK ACTUATOR LEADING EDGE FLAP
4853	F80049	LCOK ASSEMBLY FLIGHT CONTROLS
4854	F80049-12	LOCK ASSY-FLIGHT CONTROL
4855	F80049-17	Lock Assembly - Flight Controls
4856	F80049-2	Lock Assembly - Flight Controls
4857	F80049-31	Lock Assembly - Flight Controls
4858	F80049-32	Lock Assembly - Flight Controls
4859	F80049-46	Lock Assembly - Flight Controls
4860	F80049-56	LOCK ASSEMBLY-FLIGHT CONTROL
4861	F80049-65	LOCK ASSY
4862	F80049-66	LOCK ASSY
4863	F80-0-50463	ASSEMBLY TOOL
4864	F80055	ASSEMBLY - TRAMMEL BAR, STABILIZER TRIM ACTUATOR, SPL-1677
4865	F80055-1	Trammel Bar Assembly - Stabilizer Trim Actuator
4866	F80-10-1	SLEEVE BUSHING PULLER
4867	F80115	THREAD PROTECTOR
4868	F80115-1	TREAD PROTECTOR AND ALIGNMENT TOOLS- MAIN GEAR
4869	F80115-10	THREAD PROTECTOR & ALIGNMENT TOOL
4870	F80115-105	Kit -Roller Swage
4871	F80115-11	THREAD PROTECTOR&ALIGNMENT TOOL
4872	F80115-12	THREAD PROTECTOR
4873	F80115-13	THREAD PROTECTOR
4874	F80115-14	THREAD PROTECTOR
4875	F80115-15	MLG ALIGNMENT TOOL
4876	F80115-16	THREAD PROTECTOR
4877	F80115-17	THREAD PROTECTOR
4878	F80115-18	Boeing
4879	F80115-2	TREAD PROTECTOR AND ALIGNMENT TOOLS - MAIN
4880	F80115-3	TREAD PROTECTOR AND ALIGNMENT TOOLS - MAIN
4881	F80115-4	TREAD PROTECTOR AND ALIGNMENT TOOLS - MAIN
4882	F80115-5	TREAD PROTECTOR AND ALIGNMENT TOOLS - MAIN
4883	F80115-6	TREAD PROTECTOR AND ALIGNMENT TOOLS - MAIN
4884	F80115-7	TREAD PROTECTOR AND ALIGNMENT TOOLS - MAIN
4885	F80115-8	TREAD PROTECTOR AND ALIGNMENT TOOLS - MAIN
4886	F80115-9	THREAD PROT. & ALIGNMENT TOOL
4887	F80141	THREAD PROT.
4888	F80141-1	THREAD PROT.
4889	F80153	SAFETY PIN ELEV. FEEL COMPUTER
4890	F80153-1	SAFETY PIN - ELEVATOR FEEL COMP
4891	F80153-2	Pin
4892	F80153-3	SPACER-ENG FUEL SOV SWITCH ADJ
4893	F80162-1	CLAMP
4894	F80166-1	Test Fixture - Pressure Relief Valve, Flame Arrestor Surge Tank
4895	F80168	TO TORQUE WHEEL RETAINING NUTS
4896	F80168-1	NLG R/I ADAPTOR SOKET
4897	F80168-2	Socket - Axle Nut
4898	F80168-3	MLG TIRE R/I ADAPTOR SOCKET
4899	F80176	ADAPTER, TORQUE WRENCH- MLG
4900	F80197-5	WRENCH-LIMIT SWITCH



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4901	F80198-12	PLUG GAGE, LG NUT
4902	F80201	DRAIN TOOL FUEL SUMP
4903	F80201-1	TOOL - DRAIN - FUEL SUMP
4904	F80201-3	Washer Flat
4905	F80201-4	Probe
4906	F80201-5	Beaker
4907	F80201-6	Hose
4908	F80201-7	Tube
4909	F80201-8	Plate
4910	F80209	FLAP RIGGING
4911	F80209-1	RIGGING BEAM - FLAP
4912	F80209-10	ANGLE
4913	F80209-11	Bar
4914	F80209-12	Rod
4915	F80209-13	SPACER
4916	F80209-16	PLACARD
4917	F80209-2	RIGGING BAR OUTBOARD
4918	F80209-3	RIGGING BAR INBOARD
4919	F80209-4	BEAM
4920	F80209-5	BEAM
4921	F80209-6	BLOCK
4922	F80209-7	SCALE
4923	F80209-8	SCALE
4924	F80209-9	ANGLE
4925	F80249	TORQUE SOCKET-BALL NUT/SCREW ASSY STABILIZER TRIM
4926	F80249-1	Boeing
4927	F80249-2	Boeing
4928	F80249-4	TOOL
4929	F80249-7	Torque Socket - Ball Nut/Screw Assembly, Stabilizer Trim
4930	F80260	WRENCH PILOTED SPANNER
4931	F80260-1	Piloted Spanner Wrench
4932	F80260-7	PILOTED SPANNER WRENCH
4933	F80260-8	WRENCH- PILOT SPANNER
4934	F80-4-50022	SOCKET WRENCH
4935	F80-6-50007	SEAL ASSEMBLY TOOL
4936	FBS 30128	FIXTURE, SUPPORT
4937	FBS30128	SUPPORT FIXTURE
4938	FBS-30128	FIXTURE, SUPPORT
4939	FBS-30130	BRG. INNER RACE PULLER
4940	FBS-30132	FIXTURE BEARING PULLER
4941	FCS-32434	FIXTURE, ALIGNING
4942	FCS-33106	FIXTURE, ALIGNING
4943	FCS-34316	FIXTURE, ALIGNING
4944	FDS-10708	FIXTURE, ASSEMBLY, HOLDING
4945	FDS-32140	FIXTURE, ASSEMBLY, HOLDING
4946	FDS-34302	FIXTURE, ASSEMBLY, HOLDING
4947	FDS-34332	FIXTURE, ASSEMBLY, HOLDING
4948	FDS-34702	FIXTURE, ASSEMBLY, HOLDING
4949	FDS-36638	FIXTURE, ASSEMBLY, HOLDING
4950	FG13	ADJUSTING TOOL
4951	FS0009	Extracting Jig - Matrix
4952	FS0010	EXTRACTING TOOL VALVE
4953	FS0012	Wrench
4954	FS0013	Needle
4955	FXT-11032	FAN SUPPORT FIXTURE
4956	FXT-15147	BLADE LOCKING TOOL
4957	G1002760001	GSE, SPOILER BLOCKS
4958	G28005	CHECK FIXTURE EQPT. PRESSURE RELIEF VALVE
4959	G28005-23	CHECK FIXTURE EQPT - PRESSURE RELIEF VALVE
4960	G28005-24	PRESSURE VACUUM TESTER
4961	G28005-35	Check Fixture Equipment - Pressure Relief Valve
4962	G28005-39	SCREW
4963	G28005-4	COVER PLATE
4964	G28005-40	BASE GASKET
4965	G28005-42	CHECK FIXTURE - PRESSURE RELIEF VALVE
4966	G28005-48	CHECK FIXTURE EQUIP
4967	G38005	TEST CHAMBER EQPT. LAVATORY SERVICE PANEL
4968	G38005-1	TEST CHAMBER EQPT - LAVATORY SERVICE PANEL
4969	G38005-111	TEST CHAMBER EQPT - LAVATORY SERVICE PANEL
4970	G38005-35	SIDE PANEL OPP -34



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
4971	G38005-37	MID SUPPORT BEAM
4972	G38005-38	QTR SUPPORT BEAM
4973	G38005-39	BOSS
4974	G38005-87	TEST CHAMBER EQPT - LAVATORY SERVICE PANEL
4975	G49002	CRADLE/DOLLY -0 UNIVERSAL APU
4976	G49002-1	Boeing
4977	G49002-100	Cradle Assembly
4978	G49002-102	SADDLE ASSY
4979	G49002-103	Bracket Assy
4980	G49002-104	Plate
4981	G49002-116	PLATE
4982	G49002-2	Boeing
4983	G49002-3	SADDLE
4984	G49002-38	BRACKET
4985	G49002-42	BRACKET
4986	G49002-43	APU BRACKET
4987	G49002-46	Jackay
4988	G49002-53	TOOL
4989	G49002-60	CRADLE
4990	G49002-63	Caster
4991	G49002-68	CRADLE
4992	G49002-69	TOOL
4993	G49002-70	TOOL
4994	G49002-73	BRACKET
4995	G49002-81	SPACER
4996	G49002-84	SUPERSEDED BY -94
4997	G49002-85	CRADLE/DOLLY - APU
4998	G49002-87	CRADLE/DOLLY FOR EITHER GARRETT OR P&W
4999	G49002-88	APU, DOLLY ONLY
5000	G49002-94	APU CRADLE
5001	G49002-95	CRADLE/DOLLY -UNIVERSAL APU (CE)
5002	G49002-96	CRADLE/DOLLY -UNIVERSAL APU (CE)
5003	G49002-98	CRADLE DOLLY
5004	G49002-99	Cradle Assembly
5005	G71002	N/A
5006	G71002-1	HOLD OPEN EQUPT. CF6-80C2
5007	G710022-1	HOLD OPEN EQPT
5008	G71002-34	FWD ADAPTOR ASSY CF680-C2
5009	G71002-35	ALIGNMENT PIN ASSY
5010	G71002-36	PIN HOUSING ASSEMBLY
5011	G71002-45	Boeing
5012	G71002-47	Keeper
5013	G71002-48	CRADLE CF6-80C2B ENGINE B747
5014	GA47181	FIXED FLANGE
5015	GA47182	PUSHROD
5016	GA47183	FLANGE
5017	GA47340-260	UNION
5018	GA47546	UNION
5019	GS23880	WRENCH KIT ROTOR RETENTION NUT ANGLE
5020	H21808	EXTRACTOR PIN
5021	H21808-1000	EXTRACTOR
5022	H21841	CHECKING TOOL
5023	H21841-1000	CONTROL FIXTURE
5024	H46154	PIN WRENCH
5025	H46180	BLANKING PLATE
5026	H46500	ADAPTER
5027	H46946	TEST PLUG
5028	H47281	EXTRACTOR
5029	H47282	EXTRACTOR
5030	H47682	ADAPTER
5031	H47682LF	ADAPTER(USEDONWHEELSOFLAN)
5032	H47779	ADAPTER
5033	H47797	ADAPTER
5034	H47827	RETAINING TOOL
5035	HIX1001	HANDLING SLING
5036	HIX10010G	SLING
5037	HIX1001-OG	HANDLING SLING
5038	HIX3001	WORKSTAND-MOBILE
5039	HIX3002	HOLD,OPEN ROD-PIVOTING DOOR
5040	HIX3005	SAFETY SLEEVE - PIVOTING DOOR ACTUATOR



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5041	HIX3008	CFM56 T/R BY PASS PIN
5042	HTET20324	SOCKET SPANNER
5043	HU28096	PROTRUSION GAUGE
5044	HU28096-1	PROTRUSION GAUGE
5045	HU43327	COVER TOOL
5046	IAE1F10021	STAND STORAGE ENGINE ASSY GEARBOX MODULE GROUP
5047	IAE1F10023	ADAPTER HANDLING-GEARBOX
5048	IAE1F10028	PEDESTAL, FIXED
5049	IAE1F10042	EYE LIFTING REAR BARE ENGINE
5050	IAE1F10043	FIXTURE SUPPORT TEC
5051	IAE1F10049	STAND VERTICAL LPT MODULE GROUP
5052	IAE1F10052	SLING, TWO CABLES
5053	IAE1F10058	FIXTURE HANDLING LPT MODULE GROUP
5054	IAE1F10080	STAND HORIZONTAL LPT MODULE GROUP
5055	IAE1F10084	FIXTURE SUPPORT
5056	IAE1F10085	PEDESTAL ADJUSTABLE
5057	IAE1F10087	HOLDER BASE VERTICAL GEARSHAFT
5058	IAE1F10104	WRENCH HAND NUT
5059	IAE1F10178	ADAPTER STORAGE AND TURN OVER T.E.C.
5060	IAE1F10260	V2500 LIGHTING BEAM
5061	IAE1J12000	BRACKET REAR ENGINE ASSY HORIZONTAL INTERMEDIATE
5062	IAE1J12008	TRUNNION REAR ENGINE ASSY INTERMEDIATE
5063	IAE1J12019	STAND TRANSPORT STORAGE ENGINE ASSY FAN ROTOR
5064	IAE1J12024	WRENCH SPECIAL ENGINE ASSY BOLT NO2 BRG HSG
5065	IAE1J12118	STAND STORAGE-LP STUB SHAFT AND NO1 BEARING SUPPORT ASSY INTERMEDIATE
5066	IAE1J12119	ADAPTER EXTENSION INTERNAL GEARBOX AND BEARING SUPPORT ASSY INTERMEDIATE
5067	IAE1J12211	STAND TRANSPORT STORAGE ENGINE ASSY NO1 BRG-LPC STUB SHAFT INTERMEDIATE
5068	IAE1J12212	STAND TRANSPORT STORAGE ENGINE ASSY LP TURBINE SHAFT
5069	IAE1J12220	PULLER HYDRAULIC ENGINE ASSY LP SHAFT
5070	IAE1J12311	STAND TURN OVER INTERMEDIATE CASE MODULE
5071	IAE1J12386	HOLDER RESTRAINT LPC STUB SHAFT INTERMEDIATE
5072	IAE1J12387	STAND WORK FAN ROTOR CENTER LPC STUB SHAFT INTERMEDIATE
5073	IAE1J12507	PIN ALIGNING LPC ROTOR NO1 BPG ROTOR CENTER INTERMEDIATE
5074	IAE1J12517	HANDLE-TURNING
5075	IAE1J12533	STAND STORAGE LPC ROTOR ASSY INTERMEDIATE
5076	IAE1J12541	SUPPORT HOLDING ENGINE ASSY LPC ROTOR INTERMEDIATE
5077	IAE1J12542	SUPPORT LONG LPC ROTOR CASE FRONT INTERMEDIATE
5078	IAE1J13400	WRENCH MECHANICAL ENGINE ASSY DRAIN PORT FUEL COOLED OIL COOLER
5079	IAE1M14000	FIXTURE LIFTING LP TURBINE
5080	IAE1M14001	FIXTURE SUPPORT LP TURBINE ROTOR
5081	IAE1M14002	FIXTURE SUPPORT LP TURBINE SHAFT
5082	IAE1M14003	ARM SUPPORT LP TURBINE
5083	IAE1M14009	STAND STORAGE LPT ROTOR AND STATOR
5084	IAE1M14010	FIXTURE ASSY DISSASY LPT ROTOR AND STATOR
5085	IAE1M14014	FIXTURE SUPPORT LPT ROTOR AND STATOR
5086	IAE1M14050	DISK LOCATING LPT ROTOR STG, 6
5087	IAE1M14051	DISK LOCATING LPT ROTOR STG, 7
5088	IAE1M14074	CARRIER FIXTURE HEATING LPT TURBINE STG 3,4,5,6,7
5089	IAE1M14110	STAND TURN OVER LPT ROTOR AND STATOR
5090	IAE1M14125	PIN GUIDE LPT ROTOR
5091	IAE1M14143	FIXTURE SUPPORTING LPT ROTOR
5092	IAE1M14146	PLATE SUPPORT LPT SHAFT
5093	IAE1N20001	FIXTURE SUPPORT
5094	IAE1N20002	SLING - FAN THRUST REVERSER
5095	IAE1N20003	SLING, LIFTING - COMMON NOZZLE ASSY.
5096	IAE1N20004	DOLLY, COMMON NOZZLE
5097	IAE1N20010	LOCKOUT PIN - THRUST REVERSER
5098	IAE1N20012	HANDLING TOOL
5099	IAE1N20014	SLING ENGINE MOUNT
5100	IAE1N20015	SLING AFT ENGINE MOUNT
5101	IAE1N20049	LOCKOUT ACTUATOR
5102	IAE1N20403	SLING-INLET COWL
5103	IAE1N20404	SLING-FAN COWL DOORS
5104	IAE1N20405	PROTECTOR, THREAD - FAN COWL DOOR, BOLTS
5105	IAE1N20444	MANUAL SONIC TEST TOOL
5106	IAE1P16004	BRACKET HANDLING DIFFUSER COMBUST. GROUP FRONT FLANGE
5107	IAE1P16005	STAND BUILD DIFFUSER COMBUSTION
5108	IAE1P16014	FIXTURE LIFT TURN HPT ROTOR FIRST STAGE
5109	IAE1P16028	STAND BUILD HPT ROTOR AND STATOR ASSY
5110	IAE1P16046	FIXTURE REMOV INSTALL ENGINE ASSY HPT



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5111	IAE1P16047	ADAPTER HYDRAULIC ENGINE ASSY HPT REMOVE INSTALL
5112	IAE1P16051	ADAPTER CLAMP HPT ROTORS
5113	IAE1P16285	ADAPTER TIEROD ENGINE ASSY HP SYSTEM
5114	IAE1P17038	PULLER SLIDE CASE TURBO EXHAUST ASSY
5115	IAE1R18001	WRENCH ENGINE ASS EXTERNAL PLUMBING
5116	IAE1R18002	WRENCH ENGINE ASS EXTERNAL PLUMBING
5117	IAE1R18003	WRENCH ENGINE ASS EXTERNAL PLUMBING
5118	IAE1R18020	STAND BUILDUP
5119	IAE1R18021	RING SUPPORT
5120	IAE1R18022	RING SUPPORT
5121	IAE1R18059	TROLLEY
5122	IAE1R18061	RAIL
5123	IAE1R18080	DRIFT (STG 4&5)
5124	IAE1R18089	ADAPTOR LIFTING
5125	IAE1R18095	ADAPTOR SLINGING UNIVERSAL (MANDRELS)
5126	IAE1R18214	BUILD STAND
5127	IAE1R18217	FIXTURE LIFT
5128	IAE1R18222	SUPPORT RING
5129	IAE1R18234	SUPPORT ROD
5130	IAE1R18254	PIN RIGGING
5131	IAE1R18401	SUPPORT STAND
5132	IAE1R18434	EXTRACTOR
5133	IAE1R18673	SHAFT STUB DUMMY ASSY SHAFT STG3-8 DISCS COM.
5134	IAE1R18685	INHIBITING RIG ADAPTOR
5135	IAE1R18693	RING SUPPORT
5136	IAE1R18757	INHIBITING RIG
5137	IAE1R18891	PIN RIGGING
5138	IAE1R18907	RETAINER EXPANDING LPT SHAFT
5139	IAE1R19407	EXTRACTOR (STAGES8,9,10,11)
5140	IAE1R19416	WRENCH SPECIAL ENGINE ASSY HARNESS FAN EEC
5141	IAE2R18771	BRIDGE, INSPECTION (DEPTH GAUGE INCLUDED)
5142	IAE2R18871	BRIDGE INSPECTION
5143	IAE3J13053	BONDING FIXTURE
5144	IAE3J13055	BONDING FIXTURE
5145	I-ST-70236	PLATE-ARBOR PLATE
5146	IT-1776	PULLEY ADAPTOR
5147	IT-1809	HEK TOOL
5148	IT-585 PTA-45B	FIXURE SPECIAL TOOL
5149	J12007-1	ADAPTER - NLG STRUT SERVICING
5150	J20003-10	PIN RIG
5151	J20003-11	PIN RIG
5152	J20003-12	PIN RIG
5153	J20003-13	PIN RIG
5154	J20003-14	PIN RIG
5155	J20003-15	PIN RIG
5156	J20003-16	PIN RIG
5157	J20003-2	PIN RIG
5158	J20003-3	PIN RIG
5159	J20003-34	PIN SET - RIGGING
5160	J20003-4	PIN RIG
5161	J20003-5	PIN RIG
5162	J20003-6	PIN RIG
5163	J20003-7	Pin set-rigging
5164	J20003-8	RIGGING PIN
5165	J20003-9	Pin set-rigging
5166	J27028	LOCK RUDDER AND ELEVATOR POWER CONTROL UNIT
5167	J27028-1	LOCK RUDDER ACTUATOR
5168	J27028-14	LOCK - POWER CONTROL UNIT, ELEVATOR
5169	J27028-15	Lock assy
5170	J27028-16	SHELL
5171	J27028-17	SHELL
5172	J27028-18	ANTI-ROTATING FTG
5173	J27028-19	ANTI-ROTATING FTG
5174	J27028-20	LOCK - RUDDER AND ELEVATOR POWER CONTROL UNIT
5175	J27028-21	LOCK - RUDDER AND ELEVATOR POWER CONTROL UNIT
5176	J27028-31	LOCK - RUDDER AND ELEVATOR POWER CONTROL UNIT
5177	J27028-34	SHELL
5178	J27028-35	SHELL
5179	J320003-35	RIG PIN ASSEMBLY
5180	J32007	PROTECTOR EQPT-AXLE & THREAD. NLG



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5181	J32007-1	AXLE PROTECTOR
5182	J32007-2	THREAD PROTECTOR
5183	J32007-3	AXLE PROTECTOR
5184	J32008-1	PULLER EQPT - BRAKE SYSTEM PINS, MLG
5185	J32009	REPLACEMENT EQPT NLG LOWER SEALS
5186	J32011	DOWNLOCK EQPT NLG & MLG
5187	J32011-3	DOWNLOCK EQPT - NLG & MLG
5188	J32011-7	DOWNLOCK EQPT - NLG & MLG
5189	J32012-18	PULLER EQPT, BRAKE MLG
5190	J32018	ADJUSTMENT EQPT DOWNLOCK STOP MLG SIDE & DRAG STRUTS
5191	J32019	SLING EQPT. RETRACT ACTUATOR R & I MLG
5192	J32026	SLING EQPT. HANDLING NLG
5193	J32031	PROTECTOR EQPT. AXLE MLG
5194	J32031-12	EQPT - PROTECTOR, MLG
5195	J32032	WRENCH EQPT - WHEEL RETENTION NUT, MLG
5196	J32032-22	WRENCH EQPT - WHEEL RETENTION NUT, MLG
5197	J32032-25	Wrench Cap
5198	J32034	TURNBUCKLE TRUCK POSITION ACTUATOR MLG
5199	J32037	SPRING RMVL/INSTL EQPT MLG & NLG
5200	J32037-106	Spring Removal/Installation Equipment -MLG and NLG
5201	J32043	EQPT. MLG RMVL/INSTL
5202	J32043-1	SLING EQUPT. - MLG REM/INSTALL B777
5203	J32043-10	LEVER ASSEMBLY
5204	J32043-101	Teflon spray
5205	J32043-109	PLATE ASSY
5206	J32043-110	PLATE
5207	J32043-111	PLATE
5208	J32043-114	R/I EQPT - MLG
5209	J32043-115	CHAIN ASSEMBLY
5210	J32043-116	TOWER ASSEMBLY
5211	J32043-119	EQPT - MLG, REMOVAL AND INSTL
5212	J32043-120	Lift lug assy
5213	J32043-121	Sleeve assy
5214	J32043-122	Guide assy
5215	J32043-123	EQPT - MLG, REMOVAL AND INSTL
5216	J32043-124	EQPT - MLG, REMOVAL AND INSTL
5217	J32043-125	EQPT - MLG, REMOVAL AND INSTL
5218	J32043-126	LOCATOR
5219	J32043-127	CLAMP
5220	J32043-128	PLATE
5221	J32043-129	LIFT BODY
5222	J32043-13	RETAINER NUT
5223	J32043-131	Support ring
5224	J32043-132	SLEEVE HALF
5225	J32043-133	TUBE HALF
5226	J32043-14	SLIDE
5227	J32043-141	Tower assy
5228	J32043-142	Lift plate assy
5229	J32043-143	Slide plate
5230	J32043-144	GUIDE ASSEMBLY
5231	J32043-145	TUBE HALF
5232	J32043-146	LIFT LUG ASSEMBLY
5233	J32043-147	SUPPORT RING
5234	J32043-148	PLATE
5235	J32043-149	LIFT BODY
5236	J32043-15	ELBOW
5237	J32043-150	EQPT - MLG, REMOVAL AND INSTL
5238	J32043-151	EQPT - MLG, REMOVAL AND INSTL
5239	J32043-152	Usage placard
5240	J32043-153	Swivel hoist ring
5241	J32043-154	Round pin
5242	J32043-155	Diamond pin
5243	J32043-156	Starp assy
5244	J32043-157	Swivel hoist ring
5245	J32043-158	Clevis pin
5246	J32043-159	Spring pin
5247	J32043-160	Lynch pin
5248	J32043-161	Lok-a-loy
5249	J32043-162	Swivel hoist ring
5250	J32043-163	Shackle





## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5251	J32043-164	L-pin
5252	J32043-165	Cable assy
5253	J32043-166	Sleeve
5254	J32043-167	Thimble
5255	J32043-168	Identification tag
5256	J32043-169	Grab hook
5257	J32043-17	Plate assy
5258	J32043-170	Shackle
5259	J32043-171	Storage box
5260	J32043-172	Storage box
5261	J32043-173	Identification tag
5262	J32043-174	Proof load tag
5263	J32043-175	Eqpt-MLG, rmvl & instl
5264	J32043-176	Eqpt-MLG, rmvl & instl
5265	J32043-177	SUPPORT RING
5266	J32043-178	Eqpt-MLG, rmvl & instl
5267	J32043-18	Plate assy
5268	J32043-19	PLATE
5269	J32043-22	SLIDE BRACKET
5270	J32043-24	PIN
5271	J32043-26	SLIDE BRACKET
5272	J32043-27	AXLE SLEEVE
5273	J32043-29	PAD
5274	J32043-31	MOUNT BRACKET
5275	J32043-32	STOP
5276	J32043-36	SHEAVE
5277	J32043-37	LOCATOR
5278	J32043-38	CLAMP
5279	J32043-4	CABLE
5280	J32043-40	Support ring
5281	J32043-42	PLATE
5282	J32043-44	SPACER
5283	J32043-46	HANDLE
5284	J32043-5	TOWER
5285	J32043-51	10-12 X 75 HEX CAP SCREW
5286	J32043-6	LIFT LUG ASSY
5287	J32043-61	Nut
5288	J32043-65	Screw
5289	J32043-66	Washer
5290	J32043-7	Lift lug assy
5291	J32043-72	PLATE
5292	J32043-73	PLATE
5293	J32043-74	TRACK
5294	J32043-75	BEARING
5295	J32043-8	Sleeve assy
5296	J32043-80	Strap
5297	J32043-85	ELBOW
5298	J32043-86	HANDLE ARM
5299	J32043-9	Guide assy
5300	J32043-92	Sleeve assy
5301	J32043-93	STOP
5302	J32043-97	TUBE
5303	J32043-98	PLATE
5304	J32043-99	PLATE
5305	J32048	HANDLING EQPT. MLG TORSION LINKS
5306	J32048-1	EQUIP.-HANDLING MLG TORSION LINKS
5307	J32048-2	Upper Link Lift Assembly
5308	J32048-25	EQUIP.-HANDLING MLG TORSION LINK
5309	J32048-27	HANDLING EQUPT. - MLG TORSION
5310	J32048-28	Upr link lift assy
5311	J32048-29	Lwr link lift assy
5312	J32048-30	LOWER SUPPORT ASSY
5313	J32048-31	Ratchet strap assy
5314	J32048-33	UPR LINK LIFT BAR
5315	J32048-35	UPR LINK LIFT BAR
5316	J32048-39	WEBBING
5317	J32048-4	Lower Link Lift Assembly
5318	J32048-40	WEBBING
5319	J32048-43	ROD
5320	J32048-47	TUBE



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5321	J32048-48	TURNBUCKLE
5322	J32048-49	BLOCK
5323	J32048-5	Lower Support Assembly
5324	J32048-50	BLOCK
5325	J32048-52	HANDLING EQPT - MLG TORSION LINKS (CE)
5326	J32048-53	HANDLING EQPT - MLG TORSION LINKS (CE)
5327	J32048-55	STRAPS
5328	J32048-56	CAM BUCKLE ASSY
5329	J32048-57	Strap assy
5330	J32048-7	Lower Link Bar Assembly
5331	J32054	RETAINER EQPT. MLG/NLG TORSION LINK
5332	J32054-1	RETENTION EQUIPT.
5333	J32054-12	CABLE ASSY
5334	J32054-14	CABLE ASSY
5335	J32054-21	PLUG
5336	J32054-22	BUSHING
5337	J32054-23	BUSHING
5338	J32054-27	Hex Head Screw
5339	J32054-28	Lock Washer
5340	J32054-29	RETAINER EQUIPT. -
5341	J32054-30	Plug Assembly
5342	J32054-31	BUSHING
5343	J32054-34	RETAINER EQUIPT. -
5344	J32054-35	RETAINER EQUIPT.
5345	J32054-37	RETAINER EQUIPT. -
5346	J32054-38	RETAINER EQUIPT. -
5347	J32054-39	EQUPT. - RETAINER,
5348	J32054-43	HAND KNOB
5349	J32054-45	FAR SIDE PLUG
5350	J32054-47	LOWER ASSY MLG
5351	J32054-48	LOWER ASSY MLG
5352	J32054-49	Chain keeper
5353	J32054-5	LOWER ASSY - MLG
5354	J32054-50	RETAINER EQPT - MLG/NLG TORSION LINK
5355	J32054-51	RETAINER EQPT - MLG/NLG TORSION LINK
5356	J32054-52	RETAINER EQUIPT-MLG/NLG TORSION LINK
5357	J32054-53	TOOL
5358	J32054-54	THIS IS NOT A TOOL
5359	J32054-55	THIS IS NOT A TOOL
5360	J32054-56	Lower assy MLG
5361	J32054-57	LINK ASSEMBLY
5362	J32054-58	Retainer assy
5363	J32054-59	Cable-pin assy
5364	J32054-6	UPPER ASSY MLG
5365	J32054-60	Upper assy, MLG
5366	J32054-61	RETAINER NLG
5367	J32054-62	Far Side Plug
5368	J32054-63	Upper cable assy
5369	J32054-65	NUT
5370	J32054-68	Lower cable assy
5371	J32054-70	Lower plug
5372	J32054-71	Cover plate
5373	J32054-72	MACHINED LINK
5374	J32054-73	PIN
5375	J32054-75	PIN
5376	J32054-77	PIN
5377	J32054-78	PIN
5378	J32054-79	Upper cable assy
5379	J32054-82	BUSHING
5380	J32054-9	Chain Keeper
5381	J32054-91	RETAINER EQPT - MLG/NLG TORSION LINK
5382	J32054-92	RETAINER EQPT - MLG/NLG TORSION LINK
5383	J32054-93	Long hand knob
5384	J32054-95	Storage box assy
5385	J32054-97	PLACARD
5386	J32054-98	Placard
5387	J32060	N/A
5388	J32060-1	DRAIN EQPT-OLEO STRUT, MLG/NLG
5389	J32060-2	DRAIN EQPT
5390	J32060-3	Box Assy



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5391	J32060-4	Long Tube
5392	J32060-5	Hose Barb
5393	J32060-6	Plunger
5394	J32060-7	Tube
5395	J32060-8	Usage Placard
5396	J32060-9	Usage Placard
5397	J32063	LOCATING EQPT - UPLOCK ROLLER, MLG DOOR
5398	J32063-1	LOCATING EQPT - UPLOCK ROLLER, MLG DOOR
5399	J32063-6	GO NOGO GAUGE ASSEMBLY
5400	J32064	OVERHAUL EQPT - UPLOCK ASSEMBLY, MLG
5401	J32064-1	OVERHAUL EQPT - UPLOCK ASSEMBLY, MLG
5402	J32065	ALIGNMENT PIN MLG TOW FITTING
5403	J32065-1	ALIGNMENT PIN MLG TOW FITTING
5404	J32065-13	PIN - ALIGNMENT, MLG TOW FITTING
5405	J32065-7	ALIGNMENT PIN MLG TOW FITTING
5406	J32065-8	Pin assy
5407	J32066	BUILD UP EQPT. TRUCK BEAM MLG
5408	J32066-1	BUILD-UP EQPT - TRUCK BEAM, MLG
5409	J32066-10	NUT WRENCH ASSEMBLY
5410	J32066-11	SOCKET ASSEMBLY
5411	J32066-12	Alignment/thread protector slug
5412	J32066-13	Large floor mount plate
5413	J32066-14	Small floor mount plate
5414	J32066-15	HEX CAP SCREW
5415	J32066-157	BUILD-UP EQPT - TRUCK BEAM, MLG
5416	J32066-158	STRUT SUPPORT ASSEMBLY
5417	J32066-159	LEFT HAND ROLLER SUPPORT ASSEMBLY
5418	J32066-16	PLAIN WASHER
5419	J32066-160	RIGHT HAND ROLLER SUPPORT ASSEMBLY
5420	J32066-17	Center jack assy
5421	J32066-2	Aft truck support assy
5422	J32066-3	Fwd truck support assy
5423	J32066-4	Tire support assy
5424	J32066-5	Axle support assy
5425	J32066-6	Strut support assy
5426	J32066-7	Lh roller support assy
5427	J32066-8	Rh roller support assy
5428	J32066-9	Axle cart assy
5429	J32067	FIXTURE FUNCTIONAL TEST LANDING GEAR SPRINGS
5430	J32067-1	FIXTURE - FUNCTIONAL TEST, LANDING GEAR SPRINGS
5431	J32067-2	LANDING GEAR SPRINGS ASSEMBLY FUNCTIONAL TEST,
5432	J32067-42	SPOOL ADAPTER
5433	J32067-43	SPOOL ADAPTER
5434	J32067-44	SPOOL ADAPTER
5435	J32067-46	FIXTURE - FUNCTIONAL TEST, LANDING GEAR SPRINGS
5436	J32067-47	LANDING GEAR SPRINGS ASSEMBLY FUNCTIONAL TEST
5437	J32067-49	ACCESSORY EQPT
5438	J32067-81	SMALL PIN ASSEMBLY
5439	J32067-85	Fixture -Functional Test. Landing Gear Springs
5440	J32069	BUILD UP FIXTURE EQPT OLEO STRUT MLG
5441	J32069-1	SUPPORT FIXTURE
5442	J32069-10	B PIN/INDEX ASSEMBLY (OPPOSITE J32069-9)
5443	J32069-11	Torsion link assy
5444	J32069-112	BUILDUP EQUPT. - BOX
5445	J32069-113	BUILDUP EQUPT. - BOX
5446	J32069-12	Torsion link assy
5447	J32069-129	BUILD-UP FIXTURE EQPT -OLEO STRUT, MLG
5448	J32069-13	Torsion link assy
5449	J32069-130	Long index assy
5450	J32069-131	Short index assy
5451	J32069-132	"A" small index assy
5452	J32069-133	"B" small index assy
5453	J32069-134	"A" pin/index assy
5454	J32069-135	"B" pin/index assy
5455	J32069-136	Torsion link assy
5456	J32069-137	Torsion link assy
5457	J32069-138	"A" torque retainer assy
5458	J32069-139	B TORQUE RETAINER ASSEMBLY
5459	J32069-14	Torsion link assy
5460	J32069-140	A CLOCKING ASSEMBLY



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5461	J32069-141	B CLOCKING ASSEMBLY (OPPOSITE J32069-140)
5462	J32069-143	A SHIM
5463	J32069-144	B SHIM
5464	J32069-145	TIE ROD
5465	J32069-15	ANTI-ROTATION ASSEMBLY
5466	J32069-16	SPINDLE ASSEMBLY
5467	J32069-17	KNURLED PIN
5468	J32069-176	BUILD-UP FIXTURE EQPT -OLEO STRUT, MLG
5469	J32069-179	BUILD-UP FIXTURE EQPT -OLEO STRUT, MLG
5470	J32069-18	KNURLED NUT
5471	J32069-180	BUILD-UP FIXTURE EQPT -OLEO STRUT, MLG
5472	J32069-181	BUILD-UP FIXTURE EQPT -OLEO STRUT, MLG
5473	J32069-182	777
5474	J32069-183	777
5475	J32069-184	777
5476	J32069-185	777
5477	J32069-186	LIFT LUG ASSEMBLY
5478	J32069-188	HAND KNOB
5479	J32069-189	BALL LOCK PIN
5480	J32069-19	B SHIM
5481	J32069-2	BUILDUP FIX - MLG
5482	J32069-20	TORQUE RETAINER ASSEMBLY
5483	J32069-21	A CLOCKING ASSEMBLY
5484	J32069-217	LIFT LUG ASSEMBLY
5485	J32069-22	B CLOCKING ASSEMBLY (OPPOSITE J32069-21)
5486	J32069-3	TOOL
5487	J32069-4	LARGE BASE ASSEMBLY
5488	J32069-40	TIE ROD
5489	J32069-44	LOCATING PIN
5490	J32069-5	SMALL BASE ASSEMBLY
5491	J32069-6	Long index assy
5492	J32069-65	A SHIM
5493	J32069-7	Short index assy
5494	J32069-8	SMALL INDEX ASSEMBLY
5495	J32069-9	A PIN/INDEX ASSEMBLY
5496	J32070	BUILD UP FIXTURE EQPT. SHOCK STRUT NLG
5497	J32070-1	Fixture
5498	J32070-59	BUILD-UP FIXTURE EQPT - SHOCK STRUT, NLG
5499	J32070-64	BUILD-UP FIXTURE EQPT - SHOCK STRUT, NLG
5500	J32076	SLING EQPT. INNER CYLINDER MLG
5501	J32076-1	SLING EQPT - INNER CYLINDER, MLG
5502	J32076-13	SLING EQPT - INNER CYLINDER, MLG
5503	J32076-14	STRAP / BLOCK ASSEMBLY
5504	J32076-19	LOWER STRAP (EE2-802T)
5505	J32076-2	STRAP / BLOCK ASSEMBLY
5506	J32076-20	CHOKER STRAP (EE2-804T)
5507	J32076-21	CHOKER STRAP (EE2-804T)
5508	J32076-3	WEAR PAD
5509	J32076-5	BLOCK
5510	J32076-6	BUCKLE PLATE
5511	J32077	TRANSPORTATION DOLLY EQPT. STRUT ASSY/INNER CYLINDER MLG
5512	J32077-1	TRANSPORTATION DOLLY EQPT - STRUT ASSEMBLY/INNER CYLINDER MLG
5513	J32077-13	SADDLE PAD
5514	J32077-14	SADDLE PAD
5515	J32077-15	Round pad
5516	J32077-16	LINK
5517	J32077-17	ANGLE
5518	J32077-18	SUPPORT TUBE
5519	J32077-19	SUPPORT TUBE
5520	J32077-2	DOLLY FRAME ASSEMBLY
5521	J32077-23	ANGLE
5522	J32077-29	SADDLE
5523	J32077-3	SUPPORT ASSEMBLY
5524	J32077-30	SUPPORT PLATE
5525	J32077-31	V-BLOCK PLATE
5526	J32077-37	SADDLE
5527	J32077-39	PLATE
5528	J32077-4	TOW BAR ASSEMBLY
5529	J32077-44	BASE PLATE
5530	J32077-47	PLATE



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5531	J32077-5	V-BLOCK ASSEMBLY
5532	J32077-55	TRANSPORTATION DOLLY EQPT - STRUT ASSEMBLY/INNER CYLINDER MLG
5533	J32077-56	DOLLY FRAME ASSEMBLY
5534	J32077-58	SUPPORT TUBE
5535	J32077-59	SUPPORT TUBE
5536	J32077-60	RATCHET STRAP
5537	J32077-67	TRANSPORTATION DOLLY EQPT - STRUT ASSEMBLY/INNER CYLINDER MLG
5538	J32081	SOCKET EQPT. RETAINING NUT ASSY LWR DRAG STRUT NLG
5539	J32081-1	SOCKET EQPT - RETAINING NUT ASSEMBLY, LOWER DRAG STRUT, NLG
5540	J32082	RPLACEMENT EQPT.LOWER BEARING SEALS MLG
5541	J32082-1	REPLACEMENT EQUPT. LOWER
5542	J32082-10	STORAGE BOX ASSEMBLY
5543	J32082-2	GLAND NUT SCRAPER RING RETAINER AY
5544	J32082-3	EXTENSION ASSEMBLY
5545	J32082-4	JACK SCREW ASSEMBLY
5546	J32082-5	Thread protector assy
5547	J32082-6	Lower seal instl support assy
5548	J32082-66	Shim
5549	J32082-67	WRENCHING BAR
5550	J32082-69	Replacement eqpt-lower bearing seals, MLG
5551	J32082-7	Puller assy
5552	J32082-72	Shim
5553	J32082-73	REPLACEMENT EQPT - LOWER BEARING SEALS, MLG (MLG)
5554	J32082-74	UPPER SEAL INSTALLATION SUPPORT ASSEMBLY
5555	J32082-76	UTILITY STRAP (751587-007)
5556	J32082-88	Plate / Shaft Assy
5557	J32082-9	O-RING INSERTER ASSEMBLY
5558	J32083	SHOCK STRUT EQPT. COMPONENT MAINTENANCE MLG
5559	J32083-1	SHOCK STRUT EQPT - COMPONENT MAINTENANCE, MLG
5560	J32083-2	Outer cyl spanner assy
5561	J32083-3	Inner cyl spanner assy
5562	J32083-4	Installation rod assy
5563	J32083-5	Extension rod assy
5564	J32083-64	ORIFICE SUPPORT ASSEMBLY RETAINER RING SIZER
5565	J32083-65	METERING PIN RETAINER RING SIZER
5566	J32084	SHOCK STRUT EQPT. COMPONENT MAINTENANCE NLG
5567	J32084-1	SHOCK STRUT EQPT - COMPONENT MAINTENANCE, NLG
5568	J32084-10	Portable Press Assembly
5569	J32084-11	Index Bar Assembly
5570	J32084-12	2nd Stage Assembly
5571	J32084-13	Plunger Assembly
5572	J32084-14	Bolt Assembly Lead In
5573	J32084-17	Lead In
5574	J32084-18	Upper Lead In
5575	J32084-19	Lower Lead In
5576	J32084-20	PIN WRENCH
5577	J32084-21	Bolt
5578	J32084-22	1st Stage Upper Lead In
5579	J32084-23	1st Stage Lower Lead In
5580	J32084-24	2nd Stage Upper Lead In
5581	J32084-25	2nd Stage Lower Lead In
5582	J32084-26	Base 1
5583	J32084-27	Base 2
5584	J32084-28	Base 3
5585	J32084-29	Popper
5586	J32084-3	Nut Wrench
5587	J32084-30	Punch
5588	J32084-31	1st Stage Upper Sizing Ring
5589	J32084-32	1Stage Lower Sizing Rng
5590	J32084-33	2nd Stage Upper Sizing Ring
5591	J32084-34	2nd Stage Lower Sizing Ring
5592	J32084-35	Top Cap A
5593	J32084-36	Top Cap B
5594	J32084-4	Reaction Wrench Assembly
5595	J32084-5	Puller Assembly
5596	J32084-6	Plate Wrench Assembly
5597	J32084-7	Plate Wrench Assembly
5598	J32084-8	Nut Wrench
5599	J32084-9	Push Rod Assembly
5600	J32085	WRENCH KIT MLG & NLG



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5601	J32085-1	Wrench Kit
5602	J32085-10	WRENCH ASSY
5603	J32085-11	WRENCH ASSY
5604	J32085-12	Wrench Assembly
5605	J32085-13	WRENCH ASSY
5606	J32085-14	THREAD PROTECTOR
5607	J32085-15	THREAD PROTECTOR
5608	J32085-16	THREAD PROTECTOR
5609	J32085-17	Thread Protector
5610	J32085-18	THREAD PROTECTOR
5611	J32085-19	THREAD PROTECTOR
5612	J32085-2	SPANNER WRENCH ASSY
5613	J32085-20	THREAD PROTECTOR
5614	J32085-21	THREAD PROTECTOR
5615	J32085-22	THREAD PROTECTOR
5616	J32085-23	Thread protector
5617	J32085-24	SOCKET
5618	J32085-25	SOCKET
5619	J32085-26	SOCKET
5620	J32085-27	SOCKET
5621	J32085-28	SOCKET
5622	J32085-29	Socket
5623	J32085-3	SPANNER WRENCH ASSY
5624	J32085-30	Open End Wrench
5625	J32085-31	SOCKET
5626	J32085-32	SOCKET
5627	J32085-33	Socket
5628	J32085-34	3 1/4-Inch Socket
5629	J32085-35	TCB -0 2/12/07
5630	J32085-36	3 3/4 Inch Socket
5631	J32085-37	THREAD PROTECTOR
5632	J32085-38	THREAD PROTECTOR
5633	J32085-39	Thread Protector
5634	J32085-4	STORAGE BOX
5635	J32085-44	ARM
5636	J32085-45	PIN
5637	J32085-46	ARM
5638	J32085-5	SPANNER WRENCH ASSY
5639	J32085-50	HANDLE
5640	J32085-51	DOWEL PIN
5641	J32085-52	ADAPTER PLATE
5642	J32085-53	ADAPTER PLATE
5643	J32085-54	SOCKET
5644	J32085-55	Main Landing Gear LOver Assembly
5645	J32085-56	SOCKET
5646	J32085-57	ADAPTER PLATE
5647	J32085-58	SOCKET
5648	J32085-59	SOCKET
5649	J32085-6	ADAPTER WRENCH ASSY
5650	J32085-60	SOCKET
5651	J32085-61	HANDLE
5652	J32085-62	RING
5653	J32085-64	WRENCH ASSY
5654	J32085-65	ADAPTER PLATE
5655	J32085-66	SOCKET
5656	J32085-67	SOCKET
5657	J32085-68	THREAD PROTECTOR
5658	J32085-69	THREAD PROTECTOR
5659	J32085-7	WRENCH
5660	J32085-70	PAD
5661	J32085-72	SUPERSEDED BY -77
5662	J32085-76	WRENCH KIT - MLG AND NLG
5663	J32085-77	WRENCH KIT - MLG AND NLG
5664	J32085-8	WRENCH
5665	J32085-80	SOCKET
5666	J32085-82	SOCKET
5667	J32085-83	SOCKET
5668	J32085-9	WRENCH ASSY
5669	J32086	SPANNER SCOKET KIT NLG
5670	J32086-1	SPANNER SOCKET KIT - NLG



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5671	J32092	BUSHING REPLACEMENT AND HONING KIT MLG
5672	J32092-1	BUSHING REPLACEMENT AND HONING KIT - MLG
5673	J32092-48	Bushing replacement and honing kit-MLG
5674	J32093	RMVL/INSTL EQPT NLG RETRACT ACTUATOR
5675	J32093-1	REMOVAL/INSTALLATION EQPT - NLG, RETRACT ACTUATOR (CE)
5676	J34002-19	Test Fixture - Angle of Attack
5677	J36020	RMVL/INSTL PRECOOLEER GE90 ENGINES
5678	J46060	TUBE SPANNER
5679	J46061	EXTRACTOR
5680	J47139	SUPPORT CONE
5681	J47456	ROLLER
5682	J47548	PROTECTOR
5683	J47549	ADAPTER
5684	J47555	EXTRACTOR
5685	J47556	EXTRACTOR
5686	J47557	GUIDE CONE
5687	J47558	EXTRACTOR, NLG LINK PIN
5688	J47563	EXTRACTOR
5689	J47564	ADAPTOR
5690	J47779	PROTECTIVE CONE
5691	J47893	FORCE MEASUREMENT
5692	J47999	GUIDE CONE
5693	J49006	CRADLE APU
5694	J49007	DOLLY, TRANSPORTATION-APU
5695	J57003	N/A
5696	J57003-1	SLING EQPT - RAKED WING TIP INSTL AND REMOVAL
5697	J57003-16	SLING EQPT - RAKED WING TIP INSTL AND REMOVAL
5698	J71001-66	SLING EQPT - INLET COWL
5699	J71019	STABILIZATION EQPT – ENGINE MOUNTS, RR TRENT 800
5700	J71019-1	STABILIZATION EQPMT - ENGINE MOUNTS
5701	J71019-2	STABILIZATION EQPMT - ENGINE MOUNTS
5702	LL548A349	FELT WIPER FORMER
5703	LL549A006	POSITIONING ADAPTOR
5704	LL788A005	MOUNTING BRACKET
5705	LL788A006	SPECIAL WRENCH
5706	LL788A007	EXPANDER
5707	LL788A008	THUMB NUT
5708	LL788A009	COLLET
5709	LL788A010	SCREWED RING
5710	LL788A011	PIN
5711	LL788A012	INDICATOR ARM
5712	LL788A013	COLLET
5713	LL788A015	LOCKING BAR
5714	LL788A016	LOCKING PIECE
5715	LL788A020	EARTHING BRACKET
5716	LL789A002	GUIDE RING
5717	LL789A005	EXTRACTOR
5718	LL789A006	EXTRACTOR PIECE
5719	LL790A002	TOMMY BAR
5720	LL790A003	SHAFT
5721	LL790A004	GUIDE RING
5722	LL790A005	SPECIAL WASHER
5723	LL790A006	SCREWED TOMMY BAR
5724	LL790A007	DRAW NUT
5725	LL790A008	STUD
5726	LL790A010	COLLET
5727	LL790A011	RING
5728	LL790A012	SHOCK RING
5729	LL790A013	STOP RING
5730	LL800A084	ADAPTOR
5731	LLA547A133	FORK END EXTRACTOR
5732	LLA548A112	RIVETTING TOOL
5733	LLA548A135	SEAL EXTRACTION TOOL
5734	LLA548A168	HOLDING PLATE
5735	LLA548A222	LOADING FIXTURE
5736	LLA548A246	SEAL EXTRACTION TOOL
5737	LLA548A331	BEARING EXTRACTION TOOL
5738	LLA548A376	THRUST SLEEVE EXTRACTOR
5739	LLA788A004	BACKLASH CHECKING ADAPTOR
5740	LLA789A001	SEAL INSERTION TOOL





## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5741	LLA789A004	SEAL EXTRACTION TOOL
5742	LLA789A007	SEAL INSERTION TOOL
5743	LLA790A001	SEAL INSERTION TOOL
5744	LLA790A009	GEAR PACK EXTRACTOR
5745	LLA790A021	SEAL INSERTION TOOL
5746	M219129	STRESSING FIXTURE
5747	M21929	FIXTURE
5748	M21930	FILLING ASSEMBLY
5749	M231	EXTRACTOR
5750	M46200	JAWS-FALSE
5751	M46201	PIN WRENCH
5752	M46214	ADJUSTMENT TOOL
5753	M46214-1000	TOOL - ADJUSTMENT
5754	M46236	EXTRACTOR
5755	M46292	ADAPTOR
5756	M46784	WRENCH
5757	M46833	BASE
5758	M46956	BASE
5759	M46958	PIN
5760	M46959	SPACER
5761	M47018	PIN WRENCH
5762	M47157-100	ADAPTOR
5763	M47370-200	MEDAL
5764	M47380-100	GUIDE CONE-BRAKE
5765	M47381	GUIDE CONE-WHEEL
5766	M47381-100	GUIDE CONE-WHEEL
5767	M47382-100	GUIDE CONE
5768	M47434	BODY
5769	M47439	SCREW
5770	M47440	SLIDING FLANGE
5771	M47441	BRACKET
5772	M47481	SUPPORT
5773	M47482	CENTER
5774	M47483	SPACER
5775	M47484	ROLLER
5776	M47485	PIN
5777	M47486	SPACER
5778	M47487	SUPPORT CONE
5779	M47594-100	SLOTTED WASHER
5780	M47596	BODY
5781	M57975A0000-01	ASSEMBLY FIXTURE
5782	M58295A0000-01	CALIBRATING SLEEVE
5783	M65723281	TEST BOX
5784	M65723941	GUIDE
5785	M65724078	REMOVAL TOOL
5786	M65724200A	KEY
5787	M65724230	GUIDE
5788	M65724260	ADJUSTMENT TOOL
5789	M65724278	SPECIAL TOOL
5790	M65724278-3	BOTTOM PLATE
5791	M65724547	EXTRACTION TOOL
5792	M65725480-1	PUSHER
5793	M65725575	TIGHTENING TOOL
5794	M65725632	SETTING TOOL
5795	M65726006	COMPRESSING TOOL
5796	M65726006-010	COMPRESSING TOOL
5797	M65726006-020	COMPRESSING TOOL
5798	M65726006-030	COMPRESSING TOOL
5799	M65726006-050	COMPRESSING TOOL
5800	M65726006-1	COMPRESSING TOOL
5801	M65726006-2	COMPRESSING TOOL
5802	M65726006-3	COMPRESSING TOOL
5803	M65726006-4	COMPRESSING TOOL
5804	M82000278-1	NOZZLE
5805	M82000335	PRESSURE EXTENSION
5806	M82000633	MAINTIEN AXE PAPILO
5807	MAS-33219	MASKING TOOL
5808	MCAR105001	VANNE SOUPAPE
5809	ME9026-0101	TOOL FOR ELECTRICAL STOPS PRESETTING
5810	ME9026-0102	ADJUSTMENT-TOOL FOR TRAVEL



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5811	ME9026-0500	ADAPTER ACTUATOR SUPPORT
5812	MG127-01	ASSEMBLY TOOL
5813	MG127-02	ASSEMBLY TOOL
5814	MG174-04	TOOL, DISASSEMBLY IMPELLER
5815	MG9025	BEARING GUIDE
5816	MG9025-01	BEARING GUIDE
5817	MGAR105002	FITTING TOOL
5818	MGAR105003	KEY
5819	MIT002A0014-12	BOLT EXTRACTION TOOL
5820	MIT002A0018	N/A
5821	MIT002A0018-1	BS520-540 SEAT TRACK LINK ASSEMBLY.
5822	MIT161W1122	MISC TOOL BUSHING REPLACEMENT AND HONING KIT INNER CYL CTR AXLE
5823	MONT716233	KEY NUT
5824	MONT716234	CONE FOR JOINT ASSEMBLY
5825	NAS77B4-028	LOWER TORSION LINK ASSY BUSHING
5826	O110046	TOOL-INSTALLATION
5827	OAT-2193	OUTLINE ADAPTER SQUARE DRIVE CLUTCH SET RUN IN
5828	OS22413	SPECIAL TOOL
5829	OS22468	SPECIAL TOOL
5830	OS22469	PRESS IN GUIDE
5831	OS22473	GUIDE FORCE FIT
5832	OS22479	PRESS IN GUIDE
5833	OS22480	PRESS IN GUIDE
5834	OS22481	PRESS IN GUIDE
5835	OS22489	PRESS IN GUIDE
5836	OS22607	EXTRACTOR GUIDE
5837	OS23119	PLUG
5838	OU129313	MOUNTING CONE
5839	OU141267	MOUNTING CONE
5840	OU141853	MOUNTING CONE
5841	OU141854	MOUNTING CONE
5842	OU141859	MOUNTING CONE
5843	OU141879	PRECASTING BUSH
5844	OU141883	PRECASTING BUSH
5845	OU141884	MOUNTING CONE
5846	OU141937	ASSEMBLY TOOL
5847	OU142144	TORQUE WRENCH ADAPTOR
5848	OU142195	MOUNTING CONE
5849	OU145506	MOUNTING CONE
5850	OU147244	PRECASTING BUSH
5851	OU190484	SPECIAL WRENCH
5852	OU190844	BRAKE RELEASE TOOL
5853	OU190863	VERIFY INTEGRITY TOOLS SCREW
5854	OU191191	CHECKING TOOL-BALL SCREW AND TIE BAR
5855	OU192146	DOUBLE ENDED WRENCH
5856	OU300093-03	OUTLET GEAR
5857	OU300395	SNAP
5858	P1922	WRENCH-SOCKET NLG
5859	PES-34016	PIN, ALINGMENT
5860	PS10588	BALANCE ARBOR
5861	PWA 104224	TOOL KIT
5862	PWA 104225	STAGE LPT BLADE NOTCH GAUGE
5863	PWA 104226	LPT BLADE NOCH GUAGE
5864	PWA 104227	STAGE BLADE NOTCH GAUGE
5865	PWA102718	SUPPORT-SHIPING, ENGINE FLIGHT MOUNTS
5866	PWA104224	TOOL KIT
5867	PWA104225	STAGE LPT BLADE NOTCH GAUGE
5868	PWA104226	LPT BLADE NOCH GUAGE
5869	PWA104227	STAGE BLADE NOTCH GAUGE
5870	PWA46318	CUTTER - FAN BLADE LEADING EDGE CHAMFER
5871	PWA85768	PULLER, KNOCKER
5872	PWA86411	GUIDE TUBE, BORESCOPE
5873	PWS34278	PULLER
5874	PWS-34278	PULLER
5875	Q460486	CLEVIS
5876	Q46085	CLEVIS
5877	Q46086	CLEVIS
5878	Q46087	PIN
5879	Q46088	PIN
5880	Q46160	FALSE JAWS



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5881	Q46161	PIN WRENCH
5882	Q46225	BLOCK
5883	Q46255	BODY
5884	Q46256	SCREW
5885	Q46280	BODY
5886	Q46384	ADJUSTMENT TEMPLATE
5887	Q46512	SCREW
5888	Q46547	WASHER
5889	Q46548	TIE ROD
5890	Q46790	WEIGHT
5891	Q46791	BUSH
5892	Q46890	REDUCING ADAPTER
5893	Q47019	GUIDE CONE FOR THE INSTALLATION OF BEARING
5894	Q47020	ADAPTOR
5895	Q47316	PROTECTOR-MLG AXLE (MHB)
5896	Q47736	FALSE JAWS
5897	Q47750	WRENCH
5898	Q47751	PLATE
5899	R21852	GRIMPING TOOL
5900	R21884	GRIMPING TOOL
5901	R46014	ADAPTOR
5902	R46253	SEAL
5903	RFENGLGCFMIAEX01	V2500-A1/A5 Sling
5904	RFENGLGCFMIAEX01	V2500-A1/A5 Engine Sling
5905	RFENGLGCFMIAEX01	V2500-A1/A5 Engine Swap Sling
5906	RFENGLGCFMIAEX01	V2500-A1/A5 Swap Sling
5907	RFENGLGCFMIAEX01	V2500-A1/A5 CG Beam
5908	RFENGLGCFMIAEX01	V2500-A1/A5 Engine CG Beam
5909	RFENGLGCFMIAEX01	CFM56 Sling
5910	RFENGLGCFMIAEX01	CFM56 Engine Sling
5911	RFENGLGCFMIAEX01	CFM56 Engine Swap Sling
5912	RFENGLGCFMIAEX01	CFM56 Swap Sling
5913	RFENGLGCFMIAEX01	CFM56 CG Beam
5914	RFENGLGCFMIAEX01	CFM56 Engine CG Beam
5915	RFENGLGCFMIAEX01	V2500-A1 Sling
5916	RFENGLGCFMIAEX01	V2500-A1 Engine Sling
5917	RFENGLGCFMIAEX01	V2500-A1 Engine Swap Sling
5918	RFENGLGCFMIAEX01	V2500-A1 Swap Sling
5919	RFENGLGCFMIAEX01	V2500-A1 CG Beam
5920	RFENGLGCFMIAEX01	V2500-A1 Engine CG Beam
5921	RFENGLGCFMIAEX01	V2500-A5 Sling
5922	RFENGLGCFMIAEX01	V2500-A5 Engine Sling
5923	RFENGLGCFMIAEX01	V2500-A5 Engine Swap Sling
5924	RFENGLGCFMIAEX01	V2500-A5 Swap Sling
5925	RFENGLGCFMIAEX01	V2500-A5 CG Beam
5926	RFENGLGCFMIAEX01	V2500-A5 Engine CG Beam
5927	RFENGSTDCF680ACX1	CF6-80A Stand
5928	RFENGSTDCF680ACX1	CF6-80A Transportation Stand
5929	RFENGSTDCF680ACX1	CF6-80A Engine Stand
5930	RFENGSTDCF680ACX1	CF6-80C Stand
5931	RFENGSTDCF680ACX1	CF6-80C Transportation Stand
5932	RFENGSTDCF680ACX1	CF6-80C Engine Stand
5933	RFENGSTDCF680ACX1	CF6-80C2 Stand
5934	RFENGSTDCF680ACX1	CF6-80C2 Transportation Stand
5935	RFENGSTDCF680ACX1	CF6-80C2 Engine Stand
5936	RFENGSTDCF680ACX1	CF6-80E Stand
5937	RFENGSTDCF680ACX1	CF6-80E Transportation Stand
5938	RFENGSTDCF680ACX1	CF6-80E Engine Stand
5939	RFENGSTDCF680ACX1	CF6-80E1 Stand
5940	RFENGSTDCF680ACX1	CF6-80E1 Transportation Stand
5941	RFENGSTDCF680ACX1	CF6-80E1 Engine Stand
5942	RFENGSTDCF680ACX1	CF6-80C2/E1 Stand
5943	RFENGSTDCF680ACX1	CF6-80C2/E1 Transportation Stand
5944	RFENGSTDCF680ACX1	CF6-80C2/E1 Engine Stand
5945	RFENGSTDCF680ACX1	A300-600 Engine Transportation Stand
5946	RFENGSTDCF680ACX1	A300-600 Engine Stand
5947	RFENGSTDCF680ACX1	A310-200 Engine Transportation Stand
5948	RFENGSTDCF680ACX1	A310-200 Engine Stand
5949	RFENGSTDCF680ACX1	A310-300 Engine Transportation Stand
5950	RFENGSTDCF680ACX1	A310-300 Engine Stand



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
5951	RFENGSTDCF680ACX1	A310-200/300 Engine Transportation Stand
5952	RFENGSTDCF680ACX1	A310-200/300 Engine Stand
5953	RFENGSTDCF680ACX1	B747 Engine Transportation Stand
5954	RFENGSTDCF680ACX1	B747 Engine Stand
5955	RFENGSTDCF680ACX1	B767 Engine Transportation Stand
5956	RFENGSTDCF680ACX1	B767 Engine Stand
5957	RFENGSTDCF680ACX1	B747/767 Engine Transportation Stand
5958	RFENGSTDCF680ACX1	B747/B767 Engine Stand
5959	RFENGSTDCF680ACX1	A330 Engine Transportation Stand
5960	RFENGSTDCF680ACX1	A330 Engine Stand
5961	RFENGSTDCF680ACX1	A330, GE Engine Transportation Stand
5962	RFENGSTDCF680ACX1	A330, GE Engine Stand
5963	RFENGSTDCFM3	CFM56 Stand
5964	RFENGSTDCFM3	CFM56 Transportation Stand
5965	RFENGSTDCFM3	CFM56 Engine Stand
5966	RFENGSTDCFM3	CFM56-3 Stand
5967	RFENGSTDCFM3	CFM56-3 Transportation Stand
5968	RFENGSTDCFM3	CFM56-3 Engine Stand
5969	RFENGSTDCFM3	B737-300 Engine Transportation Stand
5970	RFENGSTDCFM3	B737-300 Engine Stand
5971	RFENGSTDCFM3	B737-400 Engine Transportation Stand
5972	RFENGSTDCFM3	B737-400 Engine Stand
5973	RFENGSTDCFM3	B737-500 Engine Transportation Stand
5974	RFENGSTDCFM3	B737-500 Engine Stand
5975	RFENGSTDCFM3	B737-300/400/500 Engine Transportation Stand
5976	RFENGSTDCFM3	B737-300/400/500 Engine Stand
5977	RFENGSTDCFM5BCX01	CFM56-5 Stand
5978	RFENGSTDCFM5BCX01	CFM56-5 Transportation Stand
5979	RFENGSTDCFM5BCX01	CFM56-5 Engine Stand
5980	RFENGSTDCFM5BCX01	CFM56-5A Stand
5981	RFENGSTDCFM5BCX01	CFM56-5A Transportation Stand
5982	RFENGSTDCFM5BCX01	CFM56-5A Engine Stand
5983	RFENGSTDCFM5BCX01	CFM56-5B Stand
5984	RFENGSTDCFM5BCX01	CFM56-5B Transportation Stand
5985	RFENGSTDCFM5BCX01	CFM56-5B Engine Stand
5986	RFENGSTDCFM5BCX01	CFM56-5C Stand
5987	RFENGSTDCFM5BCX01	CFM56-5C Transportation Stand
5988	RFENGSTDCFM5BCX01	CFM56-5C Engine Stand
5989	RFENGSTDCFM5BCX01	CFM56-5A/5B Stand
5990	RFENGSTDCFM5BCX01	CFM56-5A/5B Transportation Stand
5991	RFENGSTDCFM5BCX01	CFM56-5A/5B Engine Stand
5992	RFENGSTDCFM5BCX01	CFM56-5B/5C Stand
5993	RFENGSTDCFM5BCX01	CFM56-5B/5C Transportation Stand
5994	RFENGSTDCFM5BCX01	CFM56-5B/5C Engine Stand
5995	RFENGSTDCFM5BCX01	CFM56-5A/5B/5C Stand
5996	RFENGSTDCFM5BCX01	CFM56-5A/5B/5C Transportation Stand
5997	RFENGSTDCFM5BCX01	CFM56-5A/5B/5C Engine Stand
5998	RFENGSTDCFM5BCX01	CFM56-5A-5B-5C Stand
5999	RFENGSTDCFM5BCX01	CFM56-5A-5B-5C Transportation Stand
6000	RFENGSTDCFM5BCX01	CFM56-5A-5B-5C Engine Stand
6001	RFENGSTDCFM5BCX01	A340 Engine Transportation Stand
6002	RFENGSTDCFM5BCX01	A340 Engine Stand
6003	RFENGSTDCFM5BCX01	A318 Engine Transportation Stand
6004	RFENGSTDCFM5BCX01	A318 Engine Stand
6005	RFENGSTDCFM5BCX01	A319 Engine Transportation Stand
6006	RFENGSTDCFM5BCX01	A319 Engine Stand
6007	RFENGSTDCFM5BCX01	A320 Engine Transportation Stand
6008	RFENGSTDCFM5BCX01	A320 Engine Stand
6009	RFENGSTDCFM5BCX01	A321 Engine Transportation Stand
6010	RFENGSTDCFM5BCX01	A321 Engine Stand
6011	RFENGSTDCFM5BCX01	A318/319/320/321 Engine Transportation Stand
6012	RFENGSTDCFM5BCX01	A318/319/320/321 Engine Stand
6013	RFENGSTDCFM5BCX01	CFM56 Stand
6014	RFENGSTDCFM5BCX01	CFM56 Transportation Stand
6015	RFENGSTDCFM5BCX01	CFM56 Engine Stand
6016	RFENGSTDCFM5BCX01	CFM56 Stand
6017	RFENGSTDCFM5BCX01	CFM56 Transportation Stand
6018	RFENGSTDCFM5BCX01	CFM56 Engine Stand
6019	RFENGSTDCFM7B	CFM56-7 Stand
6020	RFENGSTDCFM7B	CFM56-7 Transportation Stand



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
6021	RFENGSTDCFM7B	CFM56-7 Engine Stand
6022	RFENGSTDCFM7B	CFM56-7B Stand
6023	RFENGSTDCFM7B	CFM56-7B Transportation Stand
6024	RFENGSTDCFM7B	CFM56-7B Engine Stand
6025	RFENGSTDCFM7B	B737-600 Engine Transportation Stand
6026	RFENGSTDCFM7B	B737-600 Engine Stand
6027	RFENGSTDCFM7B	B737-700 Engine Transportation Stand
6028	RFENGSTDCFM7B	B737-700 Engine Stand
6029	RFENGSTDCFM7B	B737-800 Engine Transportation Stand
6030	RFENGSTDCFM7B	B737-800 Engine Stand
6031	RFENGSTDCFM7B	B737-900 Engine Transportation Stand
6032	RFENGSTDCFM7B	B737-900 Engine Stand
6033	RFENGSTDCFM7B	B737-600/700/800/900 Engine Transportation Stand
6034	RFENGSTDCFM7B	B737-600/700/800/900 Engine Stand
6035	RFENGSTDCFM7B	CFM56 Stand
6036	RFENGSTDCFM7B	CFM56 Transportation Stand
6037	RFENGSTDCFM7B	CFM56 Engine Stand
6038	RFENGSTDIAE010	V2500 Stand
6039	RFENGSTDIAE010	V2500 Transportation Stand
6040	RFENGSTDIAE010	V2500 Engine Stand
6041	RFENGSTDIAE010	V2500-A1 Stand
6042	RFENGSTDIAE010	V2500-A1 Transportation Stand
6043	RFENGSTDIAE010	V2500-A1 Engine Stand
6044	RFENGSTDIAE010	V2500-A5 Stand
6045	RFENGSTDIAE010	V2500-A5 Transportation Stand
6046	RFENGSTDIAE010	V2500-A5 Engine Stand
6047	RFENGSTDIAE010	V2500-A1/A5 Stand
6048	RFENGSTDIAE010	V2500-A1/A5 Transportation Stand
6049	RFENGSTDIAE010	V2500-A1/A5 Engine Stand
6050	RFENGSTDIAE010	A318 Engine Transportation Stand
6051	RFENGSTDIAE010	A318 Engine Stand
6052	RFENGSTDIAE010	A319 Engine Transportation Stand
6053	RFENGSTDIAE010	A319 Engine Stand
6054	RFENGSTDIAE010	A320 Engine Transportation Stand
6055	RFENGSTDIAE010	A320 Engine Stand
6056	RFENGSTDIAE010	A321 Engine Transportation Stand
6057	RFENGSTDIAE010	A321 Engine Stand
6058	RFENGSTDIAE010	A318/319/320/321 Engine Transportation Stand
6059	RFENGSTDIAE010	A318/319/320/321 Engine Stand
6060	RFENGSTDPW40X1	PW4000 Stand
6061	RFENGSTDPW40X1	PW4000 Transportation Stand
6062	RFENGSTDPW40X1	PW4000 Engine Stand
6063	RFENGSTDPW40X1	PW4000-100 Stand
6064	RFENGSTDPW40X1	PW4000-100 Transportation Stand
6065	RFENGSTDPW40X1	PW4000-100 Engine Stand
6066	RFENGSTDPW40X1	PW4168 Stand
6067	RFENGSTDPW40X1	PW4168 Transportation Stand
6068	RFENGSTDPW40X1	PW4168 Engine Stand
6069	RFENGSTDPW40X1	PW4168A Stand
6070	RFENGSTDPW40X1	PW4168A Transportation Stand
6071	RFENGSTDPW40X1	PW4168A Engine Stand
6072	RFENGSTDPW40X1	PW4164 Stand
6073	RFENGSTDPW40X1	PW4164 Transportation Stand
6074	RFENGSTDPW40X1	PW4164 Engine Stand
6075	RFENGSTDPW40X1	PW4170 Stand
6076	RFENGSTDPW40X1	PW4170 Transportation Stand
6077	RFENGSTDPW40X1	PW4170 Engine Stand
6078	RFENGSTDPW40X1	A330 Engine Transportation Stand
6079	RFENGSTDPW40X1	A330 Engine Stand
6080	RFENGSTDPW40X1	PW4000-100" Stand
6081	RFENGSTDPW40X1	PW4000-100" Transportation Stand
6082	RFENGSTDPW40X1	PW4000-100" Engine Stand
6083	RFENGSTDPW40X1	A330, PW Engine Transportation Stand
6084	RFENGSTDPW40X1	A330, PW Engine Stand
6085	RFENGSTDT700X02	TRENT700 Stand
6086	RFENGSTDT700X02	TRENT700 Transportation Stand
6087	RFENGSTDT700X02	TRENT700 Engine Stand
6088	RFENGSTDT700X02	TRENT 700 Stand
6089	RFENGSTDT700X02	TRENT 700 Transportation Stand
6090	RFENGSTDT700X02	TRENT 700 Engine Stand



# CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
6091	RFENGSTDT700X02	A330 Engine Transportation Stand
6092	RFENGSTDT700X02	A330 Engine Stand
6093	RFENGSTDT700X02	A330, RR Engine Transportation Stand
6094	RFENGSTDT700X02	A330, RR Engine Stand
6095	RFFLDSPX02	2 GALLON FLUID DISPENSER
6096	RFTRNRKDY01	Tire Brake & Dolly
6097	RFWHCHBLC45	Wheel Chock 45cm
6098	RFWHCHBLC60	Wheel Chock 60cm
6099	RFWHCHOR45	Wheel Chock 45cm
6100	RFWHCHOR60	Wheel Chock 60cm
6101	RSE1024-9	SLING ATTACH PAD
6102	RSE1112	SLING INLET COWL
6103	RSE1224	SPLINT-ENGINE MOUNT AFT
6104	RSE1234	ADAPTER TORQUE TOOL
6105	RSE1248	INDEX PIN-AIR INTAKE COWL
6106	RSE3404	SLING-INLET COWL
6107	RSE7301	ENGINE THRUST REVERSER LIFT FIXTURE
6108	S16-0609-0422	ASSEMBLY CONE
6109	S16-0609-0872	ASSEMBLY CONE
6110	S47425	COLLAR LEFT
6111	S47426	COLLAR RIGHT
6112	S47427	PIN
6113	SDA_11833	EXTRACTOR
6114	SE29-1302	Boeing
6115	SKB4645-1	BLOCK
6116	SL90-313-3750	TOOL, TAB WASHER INSTALLATON
6117	SL90-313-5625	TOOL, TAB WASHER INSTALLATON
6118	SL90-314-3750	TOOL, TAB WASHER REMOVAL
6119	SL90-314-5000	EXTRACTION TAB STA LOK
6120	SL90-314-5625	TOOL, TAB WASHER REMOVAL
6121	SL90-315-4375	NOTCHED-WRENCH
6122	SL90-315-6250	NOTCHED-WRENCH
6123	SL90-350-7500	TOOL EXTRACTION TAB WASHERS STA*LOK
6124	SL90-374-1-2500	WRENCH-NOTCHED, TIGHTENING OF NUTS
6125	ST1781	SPACER RING
6126	ST2121	NUT TUBE COUPLING THRUST WIRE
6127	ST2121-11	NUT TUBE COUPLING THRUST WIRE
6128	ST2121-12	NUT TUBE COUPLING THRUST WIRE
6129	ST2121-13	NUT TUBE COUPLING THRUST WIRE
6130	ST2121-14	NUT TUBE COUPLING THRUST WIRE
6131	ST2121-15	NUT TUBE COUPLING THRUST WIRE
6132	ST2121-16	NUT TUBE COUPLING THRUST WIRE
6133	ST2121-17	NUT TUBE COUPLING THRUST WIRE
6134	ST2121-18	NUT TUBE COUPLING THRUST WIRE
6135	ST2121-19	NUT TUBE COUPLING THRUST WIRE
6136	ST2121-20	NUT TUBE COUPLING THRUST WIRE
6137	ST2121-21	NUT TUBE COUPLING THRUST WIRE
6138	ST2121-22	NUT TUBE COUPLING THRUST WIRE
6139	ST2121-23	NUT TUBE COUPLING THRUST WIRE
6140	ST2121-24	NUT TUBE COUPLING THRUST WIRE
6141	ST2580-202	WRENCH, SOCKET; MLG TRUNNION LINK
6142	ST2580-302	MANUFACTURING OF WRENCH
6143	ST2580-436B	STANDARD TOOL TORQUE WRENCH BOX END FOR BACC63CP ELECTROCAL CONNECTOR
6144	ST2580-436B-15	Connector Socket
6145	ST2580-436B-17	Connector Socket
6146	ST2580-436B-18	Connector Socket
6147	ST2580-436B-9	SOCKET ASSEMBLY
6148	ST8842	TAP TEST TOOL
6149	ST8842-1	TAPPER TEST TOOL
6150	STD-4233	RIG PIN
6151	T00895	WRENCH BEARING NUT
6152	T00895-1	BEARING NUT WRENCH
6153	T05640	FILLER PLUG WELD MACHINING TOOL
6154	T05640-5	FILLER PLUG WELD MACHINING TOOL
6155	T05640-6	FILLER PLUG WELD MACHINING TOOL
6156	T-10048-3	PULLER HAND ASSY
6157	T13309	TOOL FOR TC296-02
6158	T-15175-2	SIMULATOR
6159	T-23943-2	TEST FIXTURE
6160	T-24167	BEARING PRESSING



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
6161	T-24350	BEARING PRESSING TOOL
6162	T-25911	TUBE
6163	T262775	TEST PLUG
6164	T27210	POPPET ASSEMBLY TOOL
6165	T-27210	ASSEMBLY FIXTURE
6166	T-27856	LEVER REMOVAL TOOL
6167	T28943	TEST ADAPTOR
6168	T-300386	PULLER-BEARING RACE
6169	T304040	POWERARM ADAPTOR
6170	T304271	FIXTURE GANG LAP
6171	T304285	TOOL-END PLAY CHECKING
6172	T304582	INTERNAL SPLINE GAGE
6173	T40212	TOOL-MICROSWITCH TRIP ADJUSTMENT
6174	T-412378	DRIVER BEARING
6175	T419399	ASSEMBLY TOOL
6176	T430961	INTERNAL SPLINE GAGE
6177	T436407	EXPANSION TOOL
6178	T438325	GANG LAP FIXTURE
6179	T444390	BULLET
6180	T444394	BULLET SET
6181	T444395	FORM BLOCK
6182	T444396	BULLET SET
6183	T444401	FORM BLOCK
6184	T445708	TORQUE ADAPTOR
6185	T-446039	WRENCH SPANNER
6186	T468141	LOAD CHUCK
6187	T7052	FLANGE
6188	T7052-13	LAPPING PLATE
6189	T71884	GAUGE BAYONET SLOT WEAR
6190	T-803-0002-3	FRONT INTERFACE PROTECTION
6191	T-803-0002-5	TOOL FOR ENDOSCOPIC INSPECTION
6192	T-803-0002-6	CHARGING ADAPTER
6193	T92-49035	LAP PLATE
6194	TB3023G001	FRONT INTERFACE PROTECTION
6195	TB3043G002	TOOL FOR ENDOSCOPIC INSPECTION
6196	TB3156G001	Centering Tool
6197	TB8001G001	BALANCING BEARINGS FAN ROTOR
6198	TB9081G001	WEDGE BCV BUTTERFLY
6199	TB9091G001	SOCKET FAN GEAR
6200	TB9104G001	STATOR PULLER TOOL
6201	U21829	STRESSING FIXTURE
6202	U21831010	EXTRACTOR
6203	U21891000	FILLING ASSEMBLY
6204	U21895200-1	HOISTING DEVICE (HANDLING TOOL) BRAKE UNIT
6205	UO11310631	DOOR PLACARD
6206	V1620AA0-T502	ASSEMBLY TOOL
6207	V-DA-1	SEAL INSTALLATION SLEEVE
6208	V-DA-10	SEAL INSTALLATION SLEEVE
6209	V-DA-11	SEAL INSTALLATION SLEEVE
6210	V-DA-12	SEAL INSTALLATION SLEEVE
6211	V-DA-13	SEAL INSTALLATION SLEEVE
6212	V-DA-14	SEAL INSTALLATION SLEEVE
6213	V-DA-15	SEAL INSTALLATION SLEEVE
6214	V-DA-16	SEAL INSTALLATION SLEEVE
6215	V-DA-17	SEAL INSTALLATION SLEEVE
6216	V-DA-18	SEAL INSTALLATION SLEEVE
6217	V-DA-19	SEAL INSTALLATION SLEEVE
6218	V-DA-2	SEAL INSTALLATION SLEEVE
6219	V-DA-20	SEAL INSTALLATION SLEEVE
6220	V-DA-3	SEAL INSTALLATION SLEEVE
6221	V-DA-4	SEAL INSTALLATION SLEEVE
6222	V-DA-5	SEAL INSTALLATION SLEEVE
6223	V-DA-6	SEAL INSTALLATION SLEEVE
6224	V-DA-7	SEAL INSTALLATION SLEEVE
6225	V-DA-8	SEAL INSTALLATION SLEEVE
6226	V-DA-9	SEAL INSTALLATION SLEEVE
6227	VF1620AA0-T503	ASSEMBLY TOOL
6228	VF1620AA0-T504	DISASSEMBLY TOOL
6229	VF1620AA0-T522 -T521	DISASSEMBLY TOOL
6230	VM0-130	CALIBRATING RING FOR MSV



## CORE TOOL FORM

#	TOOL NO	NOMENCLATURE
6231	V-MO-130	SEAL ASSEMBLY TOOL
6232	V-MO-133	ASSEMBLY TOOL
6233	V-MO-165	ASSEMBLY FIXTURE
6234	WBS-33110	WRENCH, TORQUE ADAPTOR
6235	WBS-33111	WRENCH, TORQUE ADAPTOR
6236	WCS-33202	WRENCH, SPANNER
6237	WCS-4948	WRENCH, SPANNER
6238	WCS5718	SPANNER WRENCH
6239	WCS-5718	SPANNER WRENCH
6240	WT-00265	FILL ADAPTOR LOCKING BLOCK
6241	WT-00323	TEST PLUG
6242	WT-138761	TOOL
6243	WT-139485	TOOL
6244	WT-139486	TOOL
6245	Z0108-193	SPECIAL FIXTURE